

# Pearl Expert

## Operator's Manual





Useful Avolites phone numbers: -

Avolites England

Sales and service\* (+44) (0) 20 8965 8522

Service out of hours\* (+44) (0) 831 17 8888

Fax (+44) (0) 20 8965 0290

Email [name@avolites.com](mailto:name@avolites.com)

Website <http://www.avolites.com>

Distribution of Avolites products in USA: -

Avolites America

Sales and service\* (+1) 423 938 2057

Fax (+1) 423 938 2059

\*Before contacting Avolites for service enquiry please ensure that you have the product serial number and the Software version. The serial number can be found on the back of the desk and the software version can be found by turning the key to "System" and reading the version from the top line of the display.

The latest version of this manual and Pearl Expert Software can be downloaded from the Avolites website.

**The small print :**

**No Liability for Consequential Damages**

Avolites has a policy of continuous product and documentation improvement. As such the detail within this manual may not match the operation of the Pearl Expert.

In no event shall Avolites be liable for any direct, indirect, special, incidental, or consequential damages or loss whatsoever (including, without limitation, damages for loss of profits, business interruption, or other pecuniary loss) arising out of the use or inability to use the Pearl even if Avolites Ltd. has been advised of the possibility of such damages. Because some jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages, the above limitation may not apply to you.

Avolites Ltd recognise that all trademarks within the manual are the property of their respective owners.

Reprint and revision history:

First produced December 2006

This manual was written by Tim Mitchell, Sabre Technology Ltd  
<http://www.sabretechnology.co.uk>

## TUTORIAL CONTENTS

---

1. WELCOME TO THE PEARL EXPERT	1
2. PATCHING	7
3. CONTROLLING DIMMERS AND FIXTURES	15
4. PALETTES	19
5. SHAPES	23
6. MEMORIES	27
7. CHASES	35
8. THEATRE STACK	41
9. RUNNING YOUR SHOW	45
10. ADVANCED FEATURES	49
11. INTRODUCTION TO INTELLIGENT LIGHTING	51
12. INTRODUCTION TO AVOLITES CONSOLES	53
13. CHANGES FROM PREVIOUS PEARL CONSOLES	57

## REFERENCE MANUAL CONTENTS

---

1. SETTING UP THE CONSOLE	111
2. PATCHING	119
3. CONTROLLING DIMMERS AND FIXTURES	127
4. PALETTES	137
5. SHAPES	143
6. MEMORIES	149
7. CHASES	159
8. THEATRE STACK	169
9. RUNNING THE SHOW	177
10. AUTOMATED PLAYBACK (SCRIPT FILES)	181
11. SETUP	189
12. OTHER FEATURES	193
13. THE PERSONALITY FILE SYSTEM	199
14. GLOSSARY OF TERMS	211
15. INDEX	217

*Pages in the Tutorial section have numbers below 100. Pages in the Reference manual have numbers above 100.*



# **Pearl Expert**

## **Tutorial**





## I N T R O D U C T I O N

# 1. Welcome to the Pearl Expert

This manual is designed to help you get the most out of your Pearl console. We have divided it into two sections.


- This first section is a tutorial which gives you a step by step guide of how to carry out the most common functions of the Pearl. If you are new to the console, working through this part will give you a good introduction.
- The second section is a reference manual which tells you everything there is to know about the Pearl.

To help you move between the two sections, we have made the chapter numbering the same, so if you are using the tutorial and you want more information, just look for the same chapter number in the reference manual.

At the back of the reference manual there is a Glossary, explaining some of the technical terms used in the manual, and an Index which can be used to find what you need in either section of the manual.

This manual applies only to the Pearl Expert console but we'll refer to it simply as "the Pearl". If you are using the Pearl 2008, 2004 or 2000 consoles, they have their own manual as some features are different.


## 1.1 Finding your way about on the Pearl

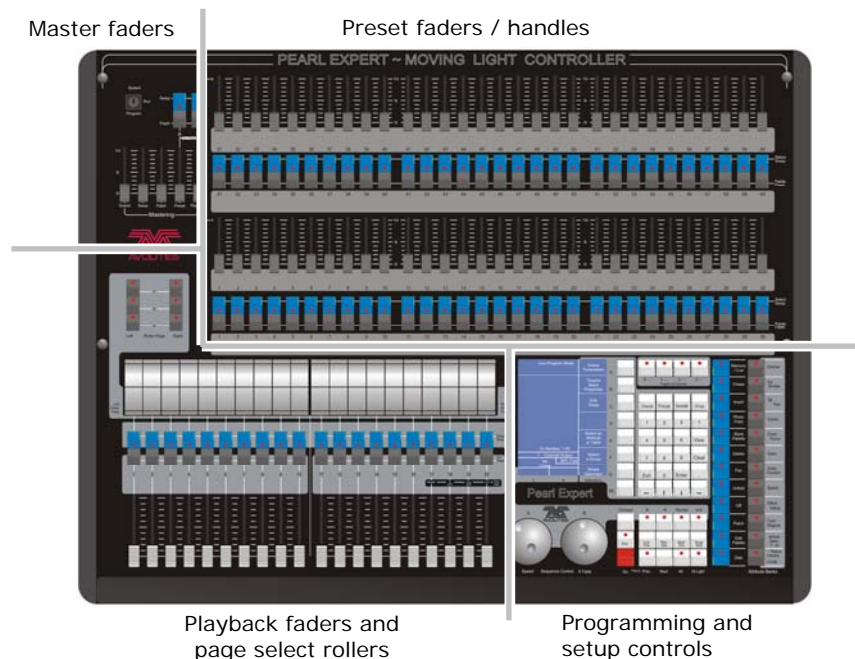

The Pearl has four main control areas:

- The Master faders set overall levels on the console
- The Preset faders/handles select and control individual fixtures
- The Playback faders and rollers select and control memories and programs
- The Programming and setup controls configure and program the console


## The main controls

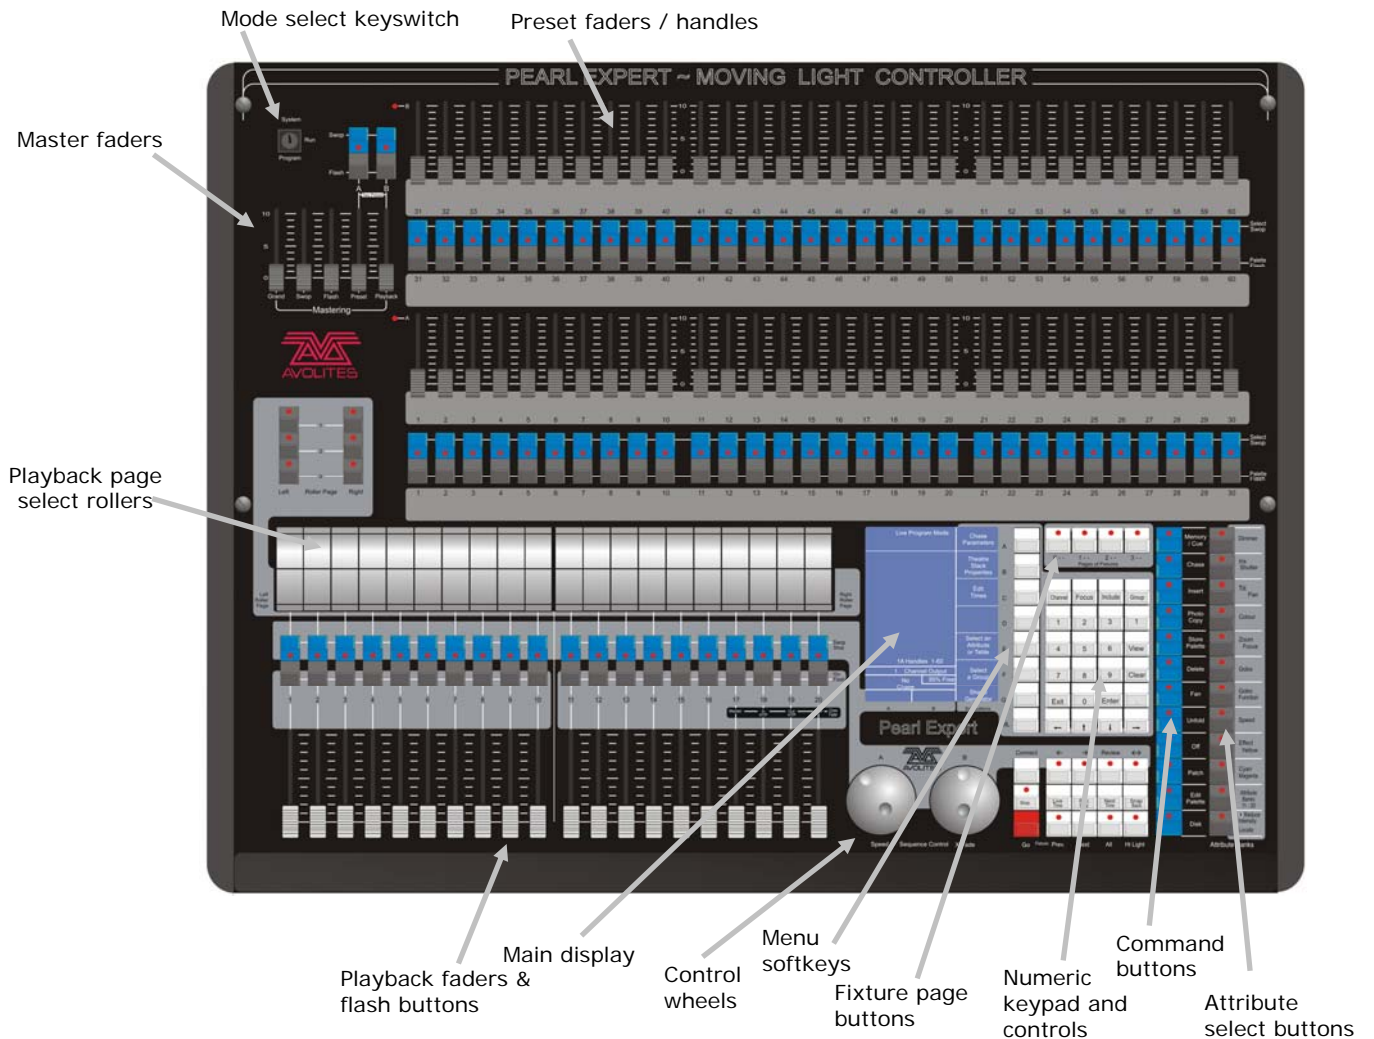

- The **Preset Faders** are used to control individual dimmer channels and fixture intensities. The 2 buttons below the faders are used to select and flash fixtures. Each fader and buttons is called a "Handle".
- The **Mode select keyswitch** sets the operating mode of the console; Program for programming a show, Run for running the show and System for configuring the console.
- The **Page select rollers** let you select different pages of playbacks, and you can write the playback names on the rollers so you know what's in them. There are 2 rollers each controlling 10 playback faders
- The **Master faders** control the overall output of the various parts of the console. You will normally have these set at Full.
- The **Playback faders & flash buttons** are used to play back memories you have programmed, when you are running a show.
- The **Main display** is the nerve centre of the console and shows you what is going on. The display can show various screens of information.
- The **Control wheels** are used to set control values on the fixtures, and to set chase speeds and fades.
- The **Menu softkeys** (labelled A – G) are used to select control options.

The display next to the buttons shows what each one will do. The options for each key change depending on what the console is doing. Softkey commands are shown in the manual with square brackets like this: A [Chase Parameters]

- The **Numeric keypad** and other control buttons are used to enter values and change controls on the console.
- The **Fixture Page** buttons are above the keypad, and allow selection of 4 pages for the Preset Faders.
- The blue **Command buttons** are used to carry out functions such as storing memories, copying, saving to disk, etc. These buttons have lights on to indicate when they are active.
- The **Attribute select buttons** are used to select which attributes of a fixture (e.g. colour, gobo, pan, focus) are going to be controlled using the Control wheels. The buttons have lights on to show you which attributes are active. The bottom (red) button allows you to reduce the intensity of a fixture if it loses position during a show.
- A **QWERTY keyboard** and mouse touchpad is provided in a drawer on the front of the console.

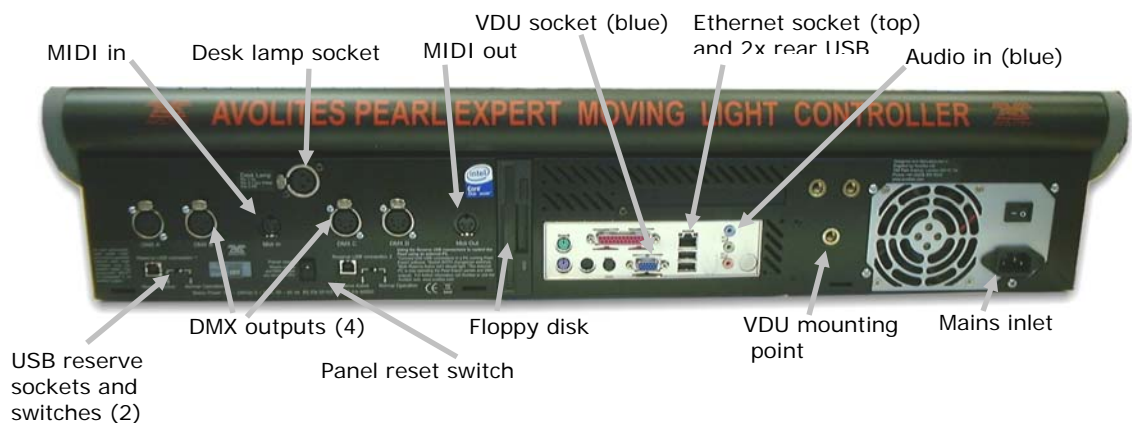


### The back panel

All the connections required for the console are found on the back panel. Most are self-explanatory.

- The Panel reset switch may be pressed to restart the front panel electronics if something odd happens with the switches and faders. The DMX output and the main board will continue running.
- The USB reserve sockets and switches may be used to run the console in an emergency if a failure occurs. See page 196 for more details. The switches should normally be set to "Normal operation".

The **VDU screen** shows more information than the on-board displays. It is useful when setting up the console and programming shows. When entering text or numbers, what you are typing is shown only on the VDU screen. If you are short of space you can often manage without it when you are running a show.

The output of the Pearl is shown in a window on the VDU desktop.

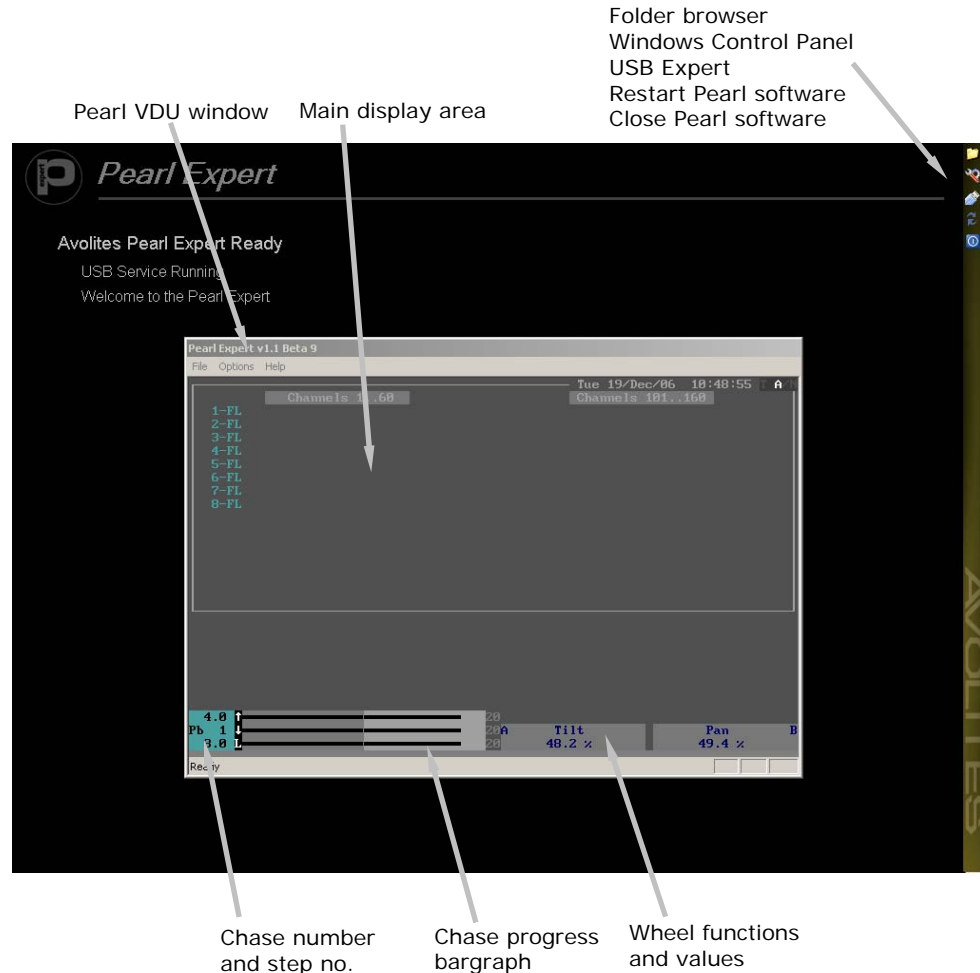

The main part of the display shows the output of the console for one of the types of fixture you are using (you can show different things using the View button, see page 114). Across the bottom of the display, the current page of memories is shown. The "A B" at the right side of the screen shows which functions are currently assigned to the control wheels.

Inside the Pearl is a PC motherboard running Microsoft Windows XP Embedded. You can mostly forget about this and just get on and use the console, but occasionally you might need to use the VDU to do something with Windows. Using the icons on the right hand toolbar you can open a folder/disk browser, open the Windows control panel, open USBExpert diagnostic software, restart the Pearl software or close the Pearl software.

## 1.2 Setting up the Pearl

Before you can use the Pearl, you need to connect various things to it. Ensure the power is off while making these connections.

Connect the mains inlet to an AC power supply. The Pearl Expert has a universal power supply which will run from 80-260V 50-60Hz, no voltage selection is needed. Ensure the switch next to the power socket is set to "I" (on). You can normally leave this switch turned on.

If you are using an external VDU screen, connect a PC monitor to the VDU output on the back of the console. You can run the Pearl without a VDU screen but it does show some additional information that is not shown on the console display.

Connect the DMX output(s) to your lighting fixtures or dimmers. The Pearl Expert has four DMX output sockets each of which outputs 512 channels of DMX. You can also output DMX over Ethernet. Chapter 1 in the reference manual has more details on DMX connections.

Plug in the desk light to the socket on the rear right of the console.

### 1.3 Starting up and shutting down

The Pearl Expert runs a Windows-based operating system internally, so you need to make sure it is shut down properly rather than just turning off its power.

**Start up** the console by pressing and releasing the Power switch at the left hand side of the front edge. The console display and VDU screen (if you are using one) should come alive. The Pearl takes about 30 seconds to start up and a progress count is shown on the console display.


**Shut down** the console by pressing and releasing the Power switch again. The console will perform a controlled shutdown. Wait until the Power light has gone off (about 15 seconds) before you disconnect power from the console.

Note: If the console loses power during operation, there may be a delay on the next startup while it checks itself out. If your mains supply is in any way suspect or prone to interruption, use a small UPS (uninterruptible power supply) unit to give you chance to shut down the console properly if the power fails.

To carry out a **Forced Shutdown** of the console, if the normal shut down does not work, hold down the power switch for 5 seconds.

### 1.4 Avolites Visualiser

The console runs the Avolites Visualiser software which can show a simulation of your lights rig on the VDU. This can be useful for programming when you can't use the actual rig. Press AVO and G to show the Visualiser window on the VDU. This manual does not describe how to use Visualiser, please refer to the Visualiser manual.

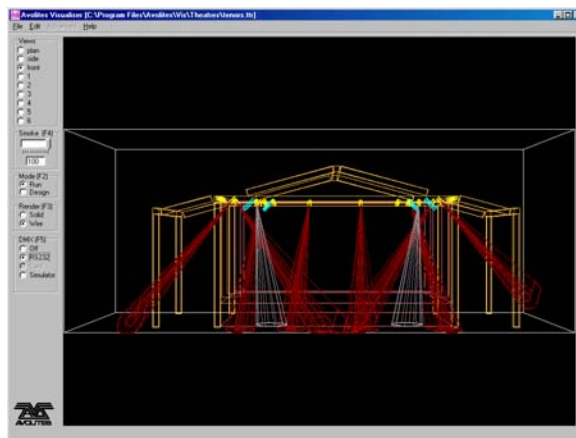

## 1.5 The Pearl simulator

You can download a free Pearl simulator from the Avolites website, which runs on a PC. This allows you to work on the Pearl even when you haven't got the real console with you. You can patch the desk, and program shows using the Avolites Visualiser, then save the show to disk and load it into the real console. The simulator operates almost exactly like the real Pearl.

## 1.6 What you'll need for the tutorial

The rest of the first part of this manual is a hands-on tutorial. If you have never used an Avolites console before, by working through the rest of the tutorial section you should be able to get the Pearl up and running, and be well on the way to programming and running a show with it.

The tutorial is organised in the order you'll need to do things to get the console set up and working, so try to work through it in sequence. To make the most of it, you will need a few lights set up to play with; a couple of moving lights and a few dimmers would be best. If you can't lay your hands on any real lights, you can use Avolites Visualiser to simulate some lights.

When you are preparing to start programming a new show, it's handy to have the following things.

- A lighting plan of your rig which you can scribble on
- Some blank floppy disks to save your work
- Some white or clear tape and a fine black marker pen to mark up the console so you know what's where
- Paper & pen to make notes (or a laptop, depending on how technological you are)
- Manuals or DMX tables for the fixtures you're using
- A supply of beverages of your choice

If you are new to intelligent lighting, or even new to lighting altogether, read chapter 11, "Introduction to intelligent lighting". This explains the concepts behind digital control of lighting and will help you to understand what we are going on about in the rest of the manual. There is also a Glossary at the end of the Reference Manual which explains some of the obscure lighting words we have used in the manual.

If you are used to the Pearl 2004 or 2000 software, read chapter 13, "Changes from previous Pearl software", which gives you a quick rundown on the differences between the Pearl versions.



## CHAPTER TWO

## 2. Patching

In this chapter: how to set up the Pearl to control dimmers and fixtures.

- patching dimmers
- patching moving light fixtures
- setting addresses on the fixtures

So, you have your fixtures and dimmers all connected up with DMX cables and the Pearl connected to the end of it. (If you have a big rig, you might find it easier to learn the basics using a few dimmers and a few moving lights, and leave the rest of it till you're an expert).

First you need to allocate each fixture or dimmer to a preset fader on the Pearl, so that you can tell it which of the fixtures or dimmers you want to control at any time.


The two banks of preset faders and the buttons below them (the picture shows some) are called the **handle** for the dimmer or fixture, because you use it to take control of the fixture. The fader will control the intensity of the dimmer or fixture, the "Swop" button is used when programming to select the dimmer or fixture. In Run mode the Flash and Swop buttons function as flash buttons.

You also need to tell the Pearl what type of fixture is allocated to each handle. When you have entered this information, the Pearl can tell you what DMX addresses to set on your fixtures and dimmers to match the settings it is using. If you prefer, you can set your fixtures and dimmers beforehand and tell the Pearl what DMX addresses it should be using.

This setup process is called **Patching**.


You can patch up to 240 fixtures and dimmer channels on the Pearl. There are 4 "pages" of 60 handles, selected using the "Pages of Fixtures" buttons above the numeric keypad.

The Pearl controls dimmers and fixtures slightly differently, so we will look at each in turn.

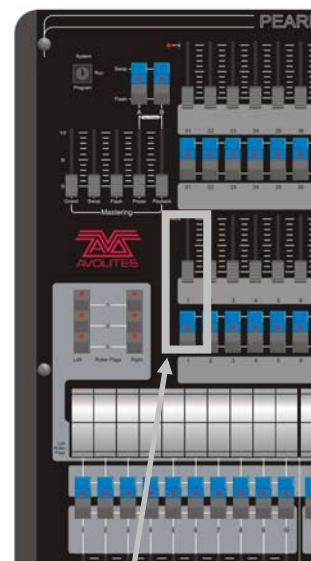

a "handle"

Pages of Fixtures buttons

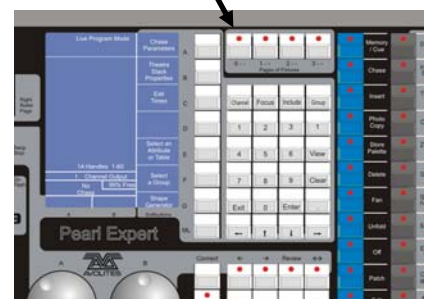

### 2.1 Clearing the Pearl - Wipeall

It's always a good idea to clear the Pearl's memory before you start a new setup. This ensures that you won't get confused by any peculiar settings left by the previous user.


---

### **Clearing the Pearl**

- ➔ Turn the mode keyswitch to "System"
  - ➔ Select softkey A [Service]
  - ➔ Select softkey F [Wipe].
  - ➔ Press F ["Wipeall"], to confirm. The memory will be wiped.
  - ➔ Turn the key to "Program" to prepare for programming.
- 

The Pearl is now pristine and new, with all options set to default, and all memories empty, ready for you to start your show.

Mode keyswitch

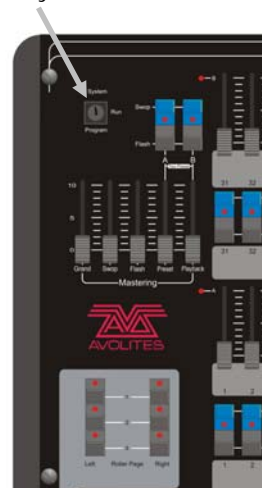


## **2.2 Patching dimmers**

Each dimmer channel you want to use has to be allocated to one of the handles. Then, when you want to control the dimmer channel, you just fade up the slider.

---

### **Patching dimmer channels**

- ➔ Make sure the key is set to "Program"
  - ➔ Press Patch (one of the blue "command" buttons).
  - ➔ Press A [Dimmer]
  - ➔ The Pearl will start at DMX address 001 (shown on the top line of the display). If your dimmer rack is at a different address, you can change this by typing in the new address on the numeric keypad.
  - ➔ Press the blue preset "Swop" button below preset fader number 1. The fader and flash/swop buttons will become the "handle" used to control that dimmer channel.
  - ➔ The Pearl will update the DMX address to the next free channel, so you can just press another button to patch the next dimmer.
  - ➔ Press Exit when you have finished patching.
- 

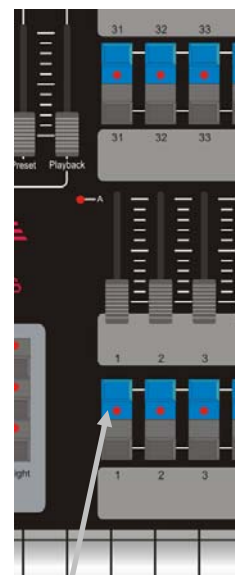

Swop button

You can now control the dimmer channel on handle 1 using the fader (the buttons do not operate as flash buttons in Program mode, only in Run mode).

If you have lots of dimmers to patch, there are some quicker ways. If you just want to patch 10 dimmers in sequence on to handles 21-30, you can do it this way:

---

### **Patching a range of dimmers to buttons**

- ➔ Enter Dimmer Patch mode
- ➔ Enter the DMX channel you want the range to start at, if it's different to the one the Pearl is displaying



- ➔ Hold down the Swop button of the first handle to be patched (handle 21)
- ➔ Press the last Swop button (handle 30)
- ➔ Release the first Swop button, then the last Swop button
- ➔ Each handle will be patched in order to a dimmer channel.
- ➔ Press Exit when you have finished patching.

You can also patch more than one dimmer channel on the same handle. This can be useful when you have several lights on different dimmer channels, but you always want to control them together. For example, if you have lit an area with several spots and you just want them all to come up on one fader, this is a good way to do that. Multiple patches like this are displayed at the bottom of the VDU screen.

---

### **Patching several dimmers to the same button**


- ➔ Enter Dimmer Patch mode
  - ➔ Using the numeric keypad, enter the DMX address of the first dimmer channel to be patched
  - ➔ Press the Swop button for the handle you want to use (this patches the first dimmer)
  - ➔ Using the numeric keypad, enter the DMX address of the next dimmer channel to be patched (the Pearl will have automatically increased the address by 1)
  - ➔ Press the Swop button again
  - ➔ Press Exit when you have finished patching
- 

You can repeat this procedure to patch as many dimmers as you like on to one handle.

While you are in Patch mode, the VDU screen shows a DMX channel grid to tell you which channels you have patched so far and which are free.

Dimmers and fixtures are identified by different letters, dimmers are always "a".

You can also display the patch on the LCD screen by pressing View (on the numeric keypad) then C [DMX patch] (shows which handle each DMX channel is allocated to) or D [Fixture patch], which shows a list in handle order.

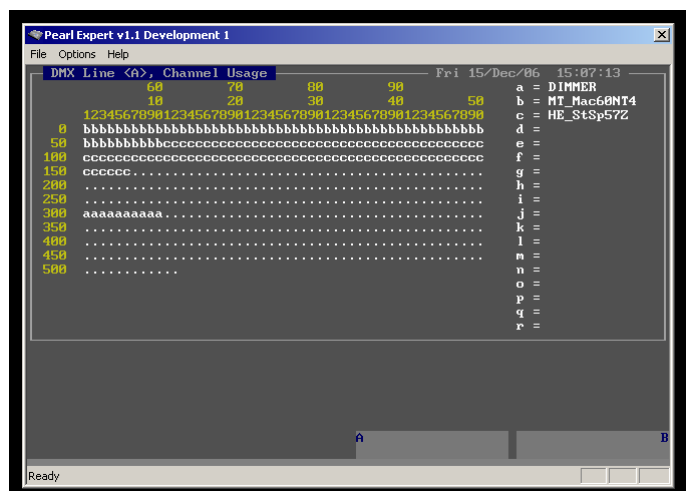

## **2.3 Patching moving light fixtures**

Moving light fixtures are controlled slightly differently to dimmers; a dimmer only has one controllable attribute, intensity. But a moving light fixture can have many attributes, such as pan, tilt, colour, gobo

etc. When you patch a fixture, you will see on the VDU screen that it occupies a block of DMX channels rather than just one. However, the principle is still the same.

Avolites have created personality files for most lighting fixtures in the known universe, and these are stored internally in the console. If you're using a fixture not available in the console, you can usually download its personality from the Avolites website and copy it to the console on a USB pen drive or floppy disk. See section 12 in the reference manual for details of how to download personalities.

---

### ***Patching a fixture***

- ➔ *Press Patch*
  - ➔ *Press B [Choose a fixture]*
  - ➔ *The display will show "Please select a manufacturer" on the top line.*
  - ➔ *Use Softkeys F and G to go up and down the list of manufacturers, then press the Softkey next to the fixture's manufacturer to select it.*
  - ➔ *A list of known fixtures from that manufacturer will appear next to the softkeys after a pause.*
  - ➔ *Use Softkeys F and G to go up and down the list and find the correct fixture, then press the Softkey next to the fixture to select it.*
  - ➔ *The Pearl will load the fixture information. The display shows information about the fixture.*
  - ➔ *The Pearl will ask "Use preset palettes?".*
  - ➔ *Press A [Yes]. (This is explained later)*
  - ➔ *The Pearl will offer you the first free DMX address (on the top line of the display). You can change this using the numeric keypad if you want the fixture at a different address.*
  - ➔ *Press the Swop button on handle 11 to patch the fixture you have selected to handle 11.*
  - ➔ *The VDU will show the block of channels occupied by the fixture.*
  - ➔ *Patch more fixtures, or press Exit when you have finished.*
- 

You can continue to patch the same type of fixture at the next free DMX address by pressing the next Swop button you want to use. You can also patch a range of fixtures by holding down the first button in the range and pressing the last button, as with dimmers.

If you want to patch a different type of fixture, you can change the type of fixture to be patched very easily.

---

### ***To change the fixture type***

- ➔ *Press A [Select another fixture]*
  - ➔ *Choose the fixture type from the list on the softkeys*
  - ➔ *Patch as before*
-

**Note:** The “preset palettes” contain 9 position, 10 colour and 10 gobo settings. You can call back these settings instantly from the palette buttons when you are programming. This allows you to select, for example, “Yellow” or “Blue” instead of setting up the value using the wheels. You can only load the preset palettes during patching.

The Pearl has four physical DMX output lines, identified as A, B, C, D. You can patch onto any of the four lines using E [Select a DMX line]. However, to keep it simple, stick to line A while you are learning.

## 2.4 Labelling the console

It's a good idea to stick a strip of tape above the handle Swop buttons, and write on it what is patched on each handle, such as “Mac SL”, “Mac Centre” etc. This will help you greatly when programming as you try and remember where you patched everything.

## 2.5 Addressing lights to match the Pearl

When you are patching, it's easiest to let the Pearl allocate all the DMX addresses, then go round to the actual dimmers and fixtures and set the addresses to match the Pearl's settings. This makes sure that there are no overlaps or gaps in the DMX addresses.

You can also work out the DMX map yourself and tell the Pearl what DMX channels to use while you're patching, but then you need to make sure yourself that nothing overlaps.

The Pearl can tell you the DMX address it is using for each fixture, and in some cases can show you how to set the dip switches on the fixture. Write down the addresses for all the fixtures, then go and set them.

### ***Displaying the DMX address for fixtures***

- ➔ *Press the View button (next to the numeric keys)*
- ➔ *Press D [Fixture Patch]*
- ➔ *The display will show a list of the handles to which you have patched fixtures or dimmers, with the DMX line and address (e.g. A24 is address 24 on DMX line A).*
- ➔ *One handle on the list has an arrow next to it. In the lower part of the screen, more information is shown for this fixture.*
- ➔ *Use the Arrow keys to move the arrow up and down the list, and show information for the other fixtures in the list.*
- ➔ *You can also press View then C [DMX Patch] to display a list of DMX channels and which fixture is patched at that address.*

Patch Dimmer or Fixture Press Exit to Quit			Dimmer
Handle	Device	DMX	Choose a Fixture
05	FL_MH-660	B65	
06	FL_MH-660	B01	
07	FL_MH-660	B97	
08	FL_MH-660	B113	
9	<empty>		Select a DMX Line
10	<empty>		
11*	HE_Cyber2	B141	
12	HE_Cyber2	B161	
Handle	11 HE_Cyber2	DMX 141.Line=B	
Dip Switch	1234 5678	Personality 0000 0010	Repatch Fixtures
Address	bbbb b001		
9	Patch By Handle		Patch Utilities
No Chase	89% xFree		

## 2.6 Changing what you have done

If you need to change the patching you have done, it's possible to re-patch a fixture to a different DMX address using the Repatch Fixtures softkey. You can also move a fixture onto a different handle, and delete a fixture from a handle, but this loses any programming for the fixture. How to change the patching is described in detail in section 2 of the reference manual on page 122.

## 2.7 Patch Utilities

You can invert the operation of channels and set various other fixture-specific options using the Patch Utilities softkey. Inverting pan and tilt channels can be useful to mirror fixtures on opposite sides of the stage, or to correct for hanging a fixture the wrong way round. Section 2 of the reference manual on page 123 describes how to set these options.

## 2.8 Completing the patch

When you have patched all your dimmers and fixtures, press the Exit button on the numeric keypad to go back to normal mode. You have now completed the setting up of the lighting system, and it's time to get to work on programming a show. But there's one important thing to do first...

## 2.9 Saving the contents of the Pearl to disk


The Pearl has various storage devices which allow you to save everything you have done. You should get into the habit of saving your show regularly to guard against that unexpected moment when the worst happens. You can then reload it if you mess up the show by accidentally changing something, or if some helpful person steals the Pearl you can load your programming into a replacement console and the show can go on.

You can save your show to a USB pen drive (using the USB socket on the front of the console next to the keyboard drawer), or to the trusty old floppy disk (back of the console next to the DMX sockets). You can also save to the internal hard drive, but really you should if possible save onto something removable and carry it with you, in case the console is stolen, flooded, melted or otherwise rendered unusable.

It only takes a couple of seconds to save your programming.

### ***Backing up the Pearl to disk***

- ➔ *Press the Disk button in the bottom right hand corner of the Pearl*
- ➔ *Insert a USB pen drive into the front USB socket, or a blank floppy disk into the drive.*
- ➔ *Select B [Save show to disk].*
- ➔ *If you need to make the show compatible with Sep 2000 software (for loading into an older console) press A [Convert Show*

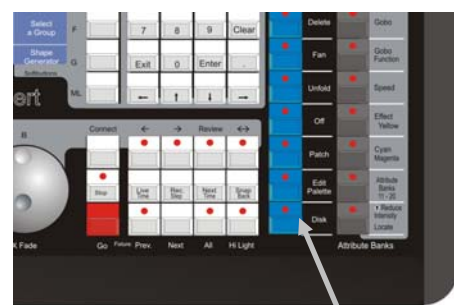

Disk button

*To Sept 2000].*

- ➔ *On the VDU the Pearl asks for a filename for the show. Type this on the QWERTY keyboard then press Enter (or you can just accept the default showname by pressing Enter).*
  - ➔ *Press a softkey to select the media where you want to save the show.*
  - ➔ *The Pearl will save your current show onto the disk. The display will tell you when the Pearl has finished.*
  - ➔ *If you need to reload the show, insert your storage media, press Disk, then A [Load show from disk], then select the media you want to load from.*
- 

## 2.10 Examples

### ***How do I patch a 6 channel DMX dimmer pack to faders 31-36?***

Press Patch, then A [Dimmer]. Note the DMX address where the Pearl is going to patch (on the top line of the display). Hold down the blue Swop button for channel 31, then press the blue Swop button for channel 36. The dimmers are patched to the top set of faders, 31-36. Press Exit twice to leave Patch mode. Finally set your dimmer pack's DMX address to match the Pearl (if you are not sure of the address, press View then D [Fixture patch], then use the Down Arrow button to scroll to show Handle 31; the display shows the DMX address where the handle is patched).

### ***How do I patch a Mac600 to handle 10?***

Press Patch, then B [Choose a fixture]. Press F [More] until one of the softkey options is "Martin" (the manufacturer of the fixture). Press the softkey for that option. Now press F [More] until one of the softkey options is MMac600m4. Press the softkey for that option. Wait for the Pearl to load the personality. When the Pearl asks "Use preset palettes?" press A [Yes]. Note the DMX address where the Pearl is going to patch (on the top line of the display). Press Swop button 10 to patch the fixture. Press Exit twice to leave Patch mode. Finally set the Mac 600's DMX address to match the Pearl (we have used the Mode 4 personality so it will also need to be in Mode 4).



## CHAPTER THREE

## 3. Controlling dimmers and fixtures

In this chapter: how to control dimmers and fixtures manually.

- controlling fixtures and dimmers
- changing attributes
- using and creating groups
- align and fan functions
- viewing the console output

Having patched all the dimmers and fixtures you want to use, you are ready to start operating them. This chapter explains how you do this.

To manually control fixtures and dimmers, you need to be in Program mode, so ensure the key is set to Program. There's also a special Run mode which lets you "take over" fixtures during a show, which is described later.

### 3.1 Controlling dimmer channels

Controlling dimmer channels is simple – you just push up the fader of the handle where the dimmer is patched. Dimmers work just like a normal "preset" lighting desk on the Pearl. If you want to turn on lots of dimmer channels at the same time, you can also "select" the dimmers and use the Dimmer attribute button and control wheels as described below.

### 3.2 Controlling fixtures

Controlling fixtures is nearly as simple, except there are a few more functions to control than just intensity.

The first thing you have to do is to "select" the fixtures that you want to control. The Pearl then knows that any changes you make are only to be sent to these fixtures. You can select fixtures individually, or several at once.

---

#### **Selecting fixtures or dimmers**

- ➔ *Press the Swop buttons for the fixtures you want to control. (For dimmers and fixtures on the top bank of faders, hold down the AVO button and press the Swop buttons below the faders you want)*
  - ➔ *The Swop button LEDs will light for the fixtures which are selected. They are shown in dark blue on the VDU screen.*
  - ➔ *If you select a fixture you don't want, press its Swop button again to deselect it.*
  - ➔ *You can select a range of fixtures by holding down the Swop button for the first fixture in the range, then pressing the Swop button for the last fixture.*
  - ➔ *Press the red Locate button (bottom right corner of console) to position the selected fixtures at a central position with the light on, so you can see where they are. Dimmer channels are set to 100%.*
- 


You can change the fixture page, if you need to, by pressing one of the other Fixture Page buttons.

You can select dimmers or fixtures patched to the top faders by holding down the AVO button and pressing the Swop button for the fader below.

### 3.3 Changing attributes of fixtures

Having selected the fixtures you want to control, you then need to select the attributes (pan, tilt, colour etc.) of that fixture that you want to change.


The attributes are selected using the buttons on the lower right corner of the Pearl and controlled using the wheels. The attributes you can control will vary depending on the type of fixture you are using. For dimmer channels, you can only change the "Dimmer" attribute (intensity). For scans, you can control the pan, tilt, colour, gobo and other functions.

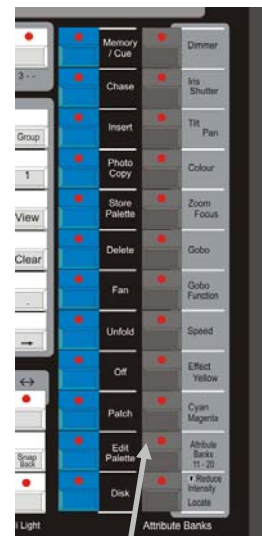

Attribute buttons

#### **Controlling pan and tilt of a fixture**

- ➔ Select some fixtures using the Swop buttons
- ➔ Use the Locate Fixture function (press the red Locate button, bottom right corner of the console) to position the fixtures at a central position with the lamp on (you don't have to do this, but it helps you see what's happening)
- ➔ Press the Pan/Tilt attribute button
- ➔ Control the tilt using the left hand wheel and the pan using the right hand wheel. You should see the selected fixtures move.
- ➔ The display area just above the wheels shows you which attribute is being controlled by each wheel.

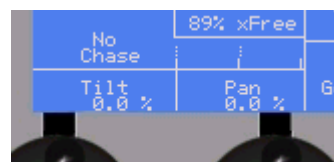

Any other attribute of the fixtures you selected can be controlled by pressing the appropriate button and turning the wheels. The display will show which functions the left and right wheels are going to control. Very few fixture types have the full range of attributes; if the display doesn't show a function when you select an attribute button, that function is not available on the fixtures you selected.

You can view the attribute settings on the LCD screen by pressing the View button then B [Fixture Attributes]. You can change which attribute you are viewing by pressing a different Attribute button.

If the fixture personality supports *range tables* and Intelligent Attribute Display is turned on (Hold AVO and press 1) then for some attributes, rather than showing a percentage value above the wheels, the current colour or gobo name will be displayed. This only happens on some fixtures.

You can use the Dimmer attribute to control the intensity channel of the fixture, or you can use the fader of the handle. The effect is the same.



Note: Once you have changed any attributes, all the fixtures will be automatically deselected the next time you press a fixture select button.

### 3.4 Using groups

If you've got several units of one fixture type, you often want to select them all at the same time. To avoid lots of swop-button-pressing, the Pearl allows you to put fixtures or dimmer channels into groups, which you can then use to select all the fixtures just by typing the group number.

---

#### ***Making a group***

- ➔ *Select the fixtures or dimmer channels you want to put into the group*
  - ➔ *Press the ML Menu button, then E [Record Group].*
  - ➔ *Type the group number 1-200 on the numeric keypad and press Enter.*
- 

Once you have created a group, you can then quickly select all the fixtures in the group:

---

#### ***Selecting a group of fixtures***

- ➔ *Type the group number on the keypad*
  - ➔ *Press A [Recall Group].*
  - ➔ *The fixtures in the group are selected, all other fixtures are deselected.*
- 

### 3.5 Copying settings from other fixtures – Align

If you've set a nice colour on one of your fixtures, and you want to copy it to all the other fixtures of the same type, the Pearl's Align function can do that. You can also use it to make all pan and tilt positions the same for a range of units or to make dimmer levels the same.

---

#### ***Copying settings from other fixtures***

- ➔ *Press an attribute button to select the attribute you want to copy*
  - ➔ *Select the fixture or dimmer channel you want to copy from*
  - ➔ *Select the fixtures or dimmer channels you want to copy to*
  - ➔ *Press the ML Menu button, then D [Align <attribute name>].*
  - ➔ *Or you can press C [Align Fixtures], to align all attributes.*
- 

### 3.6 Fan mode

Fan mode automatically spreads out a selected range of fixtures to produce a fan of light beams, like rays of sunlight. The first and last fixtures of the range are affected most, and the central fixtures are affected least. The amount of fan can be set using the wheels.

Note: The order in which you select the fixtures sets how the fan effect works. The fixtures you select first and last will be the ones which change most.

The fan effect, while normally used on pan or tilt attributes, can be applied to any attribute.

---

### ***Fanning out a range of fixtures***

- ➔ *Select the range of fixtures you want to fan*
  - ➔ *Select the attribute to fan (pan, tilt, colour etc)*
  - ➔ *Press the Fan button (one of the blue command buttons)*
  - ➔ *Set the amount of fan using the wheels*
  - ➔ *The display shows which attribute is being controlled by each wheel*
  - ➔ *Press the Fan button again to exit Fan mode when you've finished*
- 

You will be able to see the effect of fan mode best if you have a row of at least 4 fixtures. If you have an odd number of fixtures, the central fixture will not move in fan mode.

Remember to turn off Fan mode when you have finished (by pressing the Fan button again), or you will get confused when the controls don't do what you expect.

## **3.7 Examples**

### ***How do I fade up the dimmer on handles 31-36?***

Just push up the faders 31-36 (make sure the Grand Master and A/B Master faders are up)

### ***How do I make the mac 600 on handle 10 go blue and point at the cyclorama?***

Select the fixture by pressing Swop button 10. Press the red Locate button to turn on the mac600 and centre it. Press the "Cyan/Magenta" attribute button. Turn the A wheel anticlockwise to make the amount of Cyan change (you can turn B wheel anticlockwise to make the Magenta change which will give a darker blue). Press the "Tilt-Pan" attribute button. Turn the A and B wheels (the mac600 should move) until it points in the direction you want.

## CHAPTER FOUR

## 4. Palettes

In this chapter: how to use palettes to set colours, gobos and positions.

- Using palettes to set values
- Creating your own palettes
- Setting which attributes are recorded in a palette
- Shared and individual palettes

When you are controlling your lighting, it would be nice to instantly call back a position such as centre stage, or a particular colour like red, blue etc, rather than having to set the value on the wheels every time.

The Pearl has pages of preset values, called "palettes", which allow you to do this. The Pearl loads 10 colours, 10 gobos and 10 pre-programmed positions when you patch a fixture (unless you tell it not to when it asks "Use preset palettes?"). You can use these palettes as they are, modify them to your own settings, or save new settings.

Palettes have another big advantage. If for example you program a "centre stage spot" position as a palette, when you use this position in memories the Pearl remembers the palette you used, rather than the actual value. This means that if you move to another venue, you can just reprogram the "centre stage spot" palette entry and every memory using that position will automatically be updated. If you'd programmed all your memories directly using the wheels, you would need to go through and reposition every memory.


Palettes are also useful when you are programming using Visualiser and you don't know exactly where the lights will point; you can program your memories using palette positions, then you just update a few palettes when you get the real lights in the real venue and the show programming is done.

### 4.1 Using palettes to set values

The easiest way to use a palette value is by the menu on the LCD screen. We'll use the preset palettes which the Pearl loaded when you patched the fixtures to set some fixtures to Red.

#### *Using palettes*

- ➔ *Select the fixtures you want to control by pressing their Swop buttons*
- ➔ *Press the Focus button above the numeric keypad*
- ➔ *Select the page of palettes you want to use by pressing one of the A-F softkeys (such as [Colour])*
- ➔ *Press one of the A-E softkeys to use one of the palette values (such as [Red]). The value will be set to all the fixtures which are selected. The lights should turn red.*
- ➔ *To go back to the list of palette pages, press G [Pages].*
- ➔ *Press Exit when you have finished with*

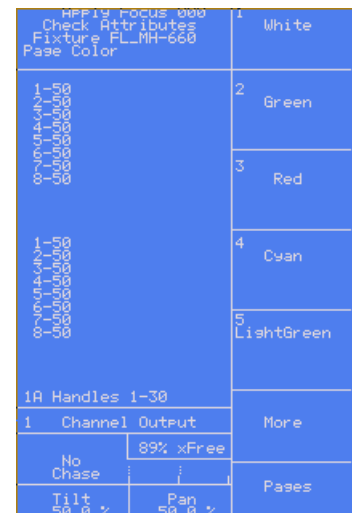

*palettes, as other functions don't work while in Palette Select mode*

---

You can also apply palettes 1-30 by pressing the grey Palette/Flash buttons below the preset faders. While you hold the button, the top line of the display shows the legend for the attribute (White, Green etc). When you release the button, the palette is applied. If you decide you don't want to apply the palette, press the Focus button before you release the grey Flash button.

## 4.2 Creating your own palettes

You can easily save your own palettes, or modify existing ones. We'll create a position palette.

---

### ***Storing your own palette***

- ➔ *Press Clear (next to the numeric keys) to clear all the changes you have made so far*
  - ➔ *Select a couple of fixtures and press the red Locate button (bottom right)*
  - ➔ *Press the "Tilt-Pan" attribute button.*
  - ➔ *Position the fixtures using the wheels.*
  - ➔ *Press the Store Palette button (one of the blue Command buttons)*
  - ➔ *Type "21" (the palette number to be stored) on the keypad and press Enter. The position of the fixtures is stored as a palette*
- 

You can also store a palette by pressing one of the grey Palette/Flash buttons below the presets. If you had pressed the grey button for preset 21, that would have been the same as what we did above.

## 4.3 What's stored in a palette

Although you can store all attributes of a fixture in a single palette, it's easiest to store some palettes which only affect colour, others which only affect position, and so on. This means when you recall a palette entry, you know which attributes of the fixture are going to change.

You do this using the Attribute buttons when saving the palette. In the example above, we had the "Tilt-Pan" attribute selected when storing the palette, so only the Tilt & Pan values were recorded.

---

### ***Setting which attributes will be recorded in the palette***

- ➔ *Press Clear to clear all the changes you have made so far*
- ➔ *Select a couple of fixtures and press the red Locate button*
- ➔ *Set a colour using the "colour" attribute button and wheels.*
- ➔ *Position the fixtures using the "tilt-pan" attribute button and wheels.*
- ➔ *Press the Store Palette button*
- ➔ *Press the Colour attribute button. The Colour button & the Yellow/Cyan/Magenta buttons will light, showing that these attributes will be recorded.*
- ➔ *Type "101" on the keypad and press Enter to store the colour.*
- ➔ *Press Store Palette again.*

- ➔ *Press the Tilt-Pan attribute button.*
- ➔ *Type "22" on the keypad and press Enter to store the position.*

If you press the "Dimmer" attribute button before storing, this will store in the palette all the attributes which you have changed. The lights on the attribute buttons come on to show you what will be stored.

There are ways of extracting only, say, colour information from palettes which have other attributes as well, which are described in the reference manual.

## 4.4 Shared and individual palettes

For some attributes, such as colour, you want to set the same control values to all the fixtures of the same type. So if you pick Red, you want the control value for "Red" to go to all fixtures.

For other attributes, like position, each fixture needs a different setting to get the light beams to point where you want.

If you only select one fixture when creating a palette, that palette is known as a "shared" palette, and the value will be available to all fixtures of that type. So to create a shared palette, you press Clear then select and modify only one fixture.

If you change more than one fixture, the Pearl creates an "individual" palette which stores a different value for each fixture. This is normally used for positioning palettes, and sometimes for image focusing. You can add positions for more fixtures to an individual palette just by saving the palette again with the new fixtures set.

Note: The Pearl may sometimes call palettes "focuses" or "preset focuses". This is the term previously used for a palette on Avolites consoles. The meaning is the same.

## 4.5 Examples

### ***How do I make the Mac600 on handle 10 go Red using a palette?***

Press the handle 10 Swop button to select the fixture. Press the red Locate button to turn it on so you can see what's happening. Press Focus then A [Color] (If softkey G option is [Pages] then press that to show the list of palette pages). Press B [Red]. The fixture should change to Red. Press Exit once you've finished applying palettes.

### ***How do I store a palette which makes my Mac 600's point at the cyclorama?***

Press Clear to clear any changes. Press the swop buttons for the Mac fixtures. Press the red Locate button to turn them on. Press the Tilt/Pan attribute button. Press the "➔" button. The first fixture will be selected. Use the wheels to point the fixture where you want. Press the "➔" button again and point the next fixture. When all fixtures are positioned, press Store Palette and type 21 on the keypad, then press Enter. The position only (because the Tilt/Pan button was selected) will be stored in palette 21.



## CHAPTER FIVE

## 5. Shapes

In this chapter: how to use the shape generator

- selecting a shape
- positioning
- setting size and speed
- coarse and fine spread

The Pearl, in common with other Avolites consoles, has a shape generator (sometimes known as an Effects Generator on other consoles). This allows you to quickly create exciting light shows using lots of movement and changes, with the minimum of programming.

There are a large number of pre-programmed shapes available, which can be used on the fixture's position, colour, gobo, dimmer, iris, focus and more. You can control the size, speed and positioning of the shape, and how the shape is allocated across a range of fixtures.

To understand how shapes work and how they can be spread across multiple fixtures, it's best to set up at least four fixtures next to each other. Once you have mastered the basics, you can try some more interesting arrangements.

### 5.1 How shapes work

A shape is a pre-programmed movement sequence which usually repeats over and over again. Typical shapes are circles, spirals, squares, etc. There are also random shapes, which do not repeat. A circle shape, for example, would cause the beam of the fixture to move in a circular path on the stage.

When you apply a shape, it works on the current settings of the fixture. So if you apply a circle to the pan and tilt attributes of a fixture, the centre of the circle will be at the current pan and tilt position. You can change the size of the circle, and the speed of the circle. By moving the pan and tilt position of the fixture, you can move the whole shape around the stage.

Shapes can be applied to other attributes of a fixture, not just pan and tilt. You can use them to create colour changes, gobo changes, iris changes and a variety of other attributes. Each shape is designed to modify one particular attribute.

### 5.2 Selecting a shape

Selecting a shape is very similar to selecting a value from a palette. When you choose a shape, it will be applied to all selected fixtures.

---


#### **Selecting a shape**

- ➔ *Select the fixtures you want to apply the shape to by pressing the Swop buttons (you'll need at least 4 fixtures to see the effects properly)*
- ➔ *Use Locate Fixture (press the red Locate button) to turn on the fixtures and move them to a central position*
- ➔ *Enter the Shape Generator menu by pressing Softkey G (from the main menu).*

- ➔ Press A [Playback a shape]
- ➔ Press A [Circle 1] to select a circle shape
- ➔ The shape will be applied to all selected fixtures.

There are a wide range of different shapes available in the list, use Softkeys F and G to look through the different pages. "Rainbow" shapes only work on fixtures capable of colour mixing, and there are other shapes such as Iris and Focus which will only work if your fixtures have those functions.

The best way to find out what all the shapes are like is to try them out. Sometimes it's hard to describe the effect in the few letters which fit on the display.

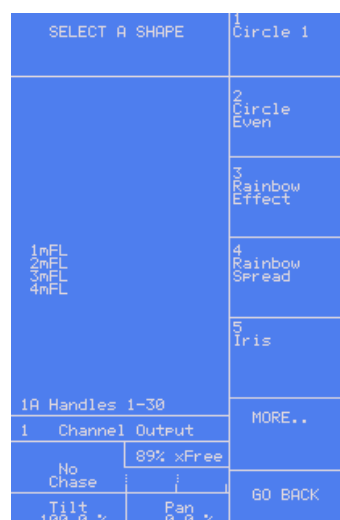

### 5.3 Changing the size and speed of a shape

It is easy to change the size and speed of a shape after it has first been selected.

#### ***Changing the size and speed of a shape***

- ➔ If you aren't already in it, enter the Shape Generator menu by pressing G [Shape Generator].
- ➔ Press D [Set wheels A=Size B=Speed]
- ➔ Control the size of the shape using the left hand wheel
- ➔ Control the speed of the shape using the right hand wheel
- ➔ The size and speed is shown above the wheels on the display.

The minimum size is zero. Obviously, you won't see the shape, and the fixture will resume its previous settings. The minimum speed is Stop. Again, you will not see the shape moving, though it will offset the positioning of the fixture.

### 5.4 Changing the positioning of a shape

Pan/tilt shapes are based on the current settings of the fixture. This means that the movements will be centred around the current position of the fixture.

#### ***Changing the positioning of a shape***

- ➔ Select the fixtures you want to change
- ➔ Set the wheels to Size/Speed and reduce the shape size to 0 (it's difficult to see the position when everything is moving)
- ➔ Press the Pan/Tilt attribute button
- ➔ Set the position using the wheels.
- ➔ Set the wheels back to Size/Speed and change the size of the shape back to where you want it.



Shapes on other attributes such as colour, gobo, focus, dimmer and iris are absolute and are not affected by the current attribute setting, unless the shape description includes "User" or "Usr". User shapes are relative and are centred around the fixture's current settings.

## 5.5 How a shape works across multiple fixtures

Shapes get more interesting (and look more impressive) when you apply them to multiple fixtures. The Pearl lets you set how a shape is spread across several fixtures.

In the case of a circle, this can vary from all fixtures moving identically (a spread of None), fixtures working in pairs (a spread of 1) through to all fixtures being distributed evenly through the shape, so the first fixture is just starting the shape as the last one finishes (an Even spread). This is the same as the number of fixtures, so if you have 4 fixtures doing the shape, a spread of 4 would be the same as an Even spread.

You can also set the Fine Spread value, which introduces a slight offset into the timing of the shape across each fixture.

---

### ***Changing the spread of a shape***

- *In the Shape Generator menu, press C [Set wheels to Spread]*
  - *Set the coarse spread using the right hand wheel. The minimum is Even (the shape spread evenly across the fixtures), then Zero (all the same), then 1, 2, etc.*
  - *Set the fine spread using the left hand wheel.*
- 

To start with, keep the Fine Spread set to zero, and work with the Coarse Spread setting, or everything will get confusing.

Note: The order in which you select the fixtures determines how the shapes are applied; the "first" fixture is the one you select first and the "last" fixture is the one you select last.

## 5.6 Examples

### ***How do I make my Mac600's wave around in a trendy manner?***

Select the Mac600's by pressing the swop buttons. Press the red Locate button to light them up. Press G [Shape Generator]. Press A [Playback a shape]. Press A again [Circle 1]. The fixtures will move. Press D [Set wheels A=Size B=Speed] and use the wheels to set the speed of movement and the size of the movement.

### ***How do I make my Mac600's change colour in a rainbow?***

Select the Mac600's by pressing the swop buttons. Press the red Locate button to light them up. Press G [Shape Generator]. Press A [Playback a shape]. Press D [Rainbow Spread]. The fixtures will change in rainbow colours. Press Softkey D and use the wheels to set the speed of changes and the number of colours used (the size of the shape).

Note: Rainbow shapes only work with fixtures capable of RGB colour mixing.




## CHAPTER SIX

## 6. Memories

In this chapter: how to record memories into the playback faders

- explanation of HTP and LTP channels
- how the Pearl works when programming
- recording and playing back memories
- playback pages
- flash button modes
- naming memories
- setting fade times for memories
- copying and clearing memories
- the include function
- editing memories
- record by fixture or by channel

So, you now know how to control your dimmers and fixtures, and how to use the shape generator. This chapter tells you how to record the wonderful effects you have created so that you can recall them at the touch of a button or fader. The Pearl has 20 playback faders across the bottom of the desk, into which you can record your effects. You select a different

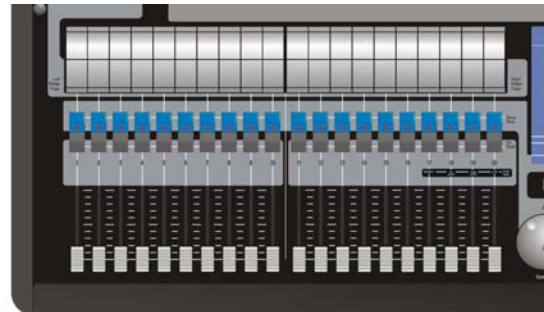

Playback faders and rollers

page of playback faders by rolling the rollers above the faders. There is one roller selecting pages for playbacks 1-10 and another for playbacks 11-20, allowing you to “mix and match” playbacks from different pages. There are 30 pages, allowing you to save 600 playbacks in all.

Before we get onto the details of recording memories, there are a couple of general things about how the Pearl works. The first thing to understand is what happens when you play back more than one memory at a time, and the operation of HTP and LTP channels. It's important to understand this before going on, or nothing else will make sense.

### 6.1 What are HTP and LTP channels?

If two or more memories are turned on together, or if you fade out a memory, the Pearl needs to know how to output the levels from the memories. To make this work, the Pearl treats channels which control intensity differently from other moving light control channels.

Dimmer or intensity channels work on the principle of “highest takes precedence” (HTP). This means that if the same HTP channel is turned on at different levels in several memories, the highest level will be output. When you fade a memory, the HTP channels fade out.

Moving light channels work on the principle of “latest takes precedence” (LTP). This means that the latest change takes over from any other values, so the most recent memory to be turned on is the one which is output. When you fade in a memory, LTP channels do not fade, but

come on at their full values, and stay there until another value is set. This is important, because when you fade in a memory you normally just want the fixtures to fade up in their proper position, colour and gobo, you don't want the fixtures moving and changing colour (though you can do this if you need to).

The fixture personality file tells the Pearl which channels of a fixture are HTP and which are LTP. Normally, only dimmer attributes are HTP, and everything else is LTP.


## 6.2 How the Pearl works when programming

When you start setting dimmers and moving fixtures, the Pearl remembers what you have changed. Fixtures and dimmers you have changed are stored in "the programmer" which is a special area of memory. When you record a memory, only the settings in the programmer (i.e. the things you have changed) are stored in the memory.

When you press Clear (by the numeric keypad), all fixtures are cleared from the programmer. You should get into the habit of pressing Clear before you start to program a memory, or you can end up recording fixtures you don't want. You also need to press Clear when you finish programming, because any functions in the programmer will override playbacks.

Channels in the programmer are shown by an "m" (modified by Preset), "w" (modified by Wheel) or "P" (modified by Palette) on the console Channel Output display, and are shown in light blue on the VDU screen.

Note: Turning on a memory does not place the values from the memory in the programmer (the Include function lets you do this, see page 31). The Locate Fixture function does not place any values in the programmer either.

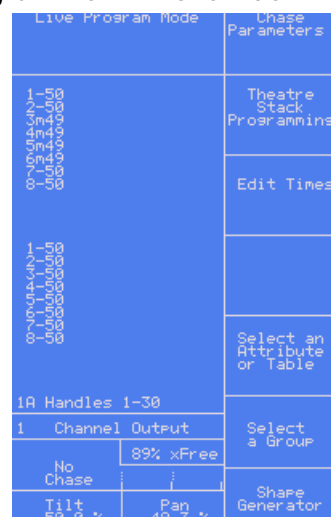


In the screen shown here, the Locate Fixture function has been used on fixtures 1 to 8, then the pan value has been changed on fixtures 3 to 6. Only the changed pan value is in the programmer.

## 6.3 Recording a memory

So now that is all out in the open, let's record a memory. The Pearl has 30 pages of 20 memories, which are controlled using the 20 faders across the bottom of the console. The page is selected using the Rollers.

### *Recording a memory*

- ➔ *Press Clear to clear the programmer. This ensures that you are starting with a clean slate.*
- ➔ *Set up a nice effect using the fixtures and dimmers. You can include shapes in a memory if you want. Remember! Only the fixtures/dimmers you have changed will be*

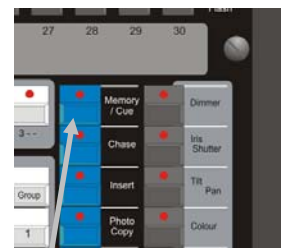

Memory/Cue button

*recorded in the memory.*

- *Press Memory.*
  - *Roll the Roller to the segment you want to use. The active segment is the one nearest the playback faders. "A" is a good one to start on.*
  - *Empty playbacks flash.*
  - *Press the Swop button of an empty playback fader you want to use.*
  - *The Swop button above the fader will light up to show that you have saved a memory there.*
  - *You can write a description of the memory onto the roller surface using marker pen on a strip of tape to help you remember what's in it.*
  - *Press Clear to clear the programmer.*
- 

## 6.4 Playing back a memory

Playing back a memory is very simple. Just raise the fader. (Make sure there are no values in the programmer by pressing the Clear button, because anything in the programmer will override the playback).

### ***Playing back a memory***

- *Raise the playback fader.*
  - *To stop the memory, lower the fader.*
- 

All the HTP (intensity) channels in the memory will fade up with the fader. The LTP (movement) channels will be set as soon as the fader leaves the zero position.

When you're running your show with the key set to "Run", you can preload the LTP channels (pre-position the fixtures) by pressing the playback Flash button with the Master Add/Flash slider at zero. This can be useful if you want to position the fixtures in blackout and have them ready to turn on, rather than seeing them snap into position if you put the fader up quickly.

## 6.5 Changing playback pages with the roller

You can change pages to select another "page" of memories simply by rolling one of the rollers to a new segment. There are two separate rollers allowing you to work with one page of memories on the first 10 faders and a different page on the second 10 sliders.

If any playbacks are turned on when you change page, they remain turned on. The Swop button above the playback flashes.

If you want to use the same playback fader on a new page, you need to lower it to zero to turn off the first playback, then raise it again to turn on the new playback on the new page.

The roller has 10 segments. There are 3 page buttons for each roller above the rollers allowing 30 segments for each roller.

## 6.6 Labelling the roller & naming memories

The idea of the roller is that it gives you a handy location for writing the

name of each memory you've saved. Stick a strip of tape across the roller and every time you save a memory, write a brief description of it on the roller segment above. You will then have a handy quick reference to what is in each memory.

In addition to the simple but effective technique of writing the memory name on the roller, if you're using a VDU screen the Pearl allows you to enter a legend for each memory and also for each page.

The legend for each memory is shown at the bottom of the VDU screen, so you can see at a glance what is stored in each fader.

---

**Labelling a memory**

- ➔ *Hold down the AVO button and press G [Set Legend].*
  - ➔ *Press the Swop button of the playback you want to label.*
  - ➔ *Enter the label using the QWERTY keyboard. The VDU screen shows you what you are typing.*
  - ➔ *Press Enter to save the label.*
  - ➔ *You can label another memory by pressing another Swop button, or finish by pressing Exit.*
- 

You can also label the playback pages, palette pages and palette entries using the other softkeys.

Note: If you don't have a VDU screen, there is no point entering memory legends as you need the VDU screen to see them. You can, however, make use of Palette names on the LCD display.

## 6.7 Copying a memory

Copying a memory is very fast and simple.

---

**Copying a memory**

- ➔ *Hold down the Flash button of the memory you want to copy.*
  - ➔ *Press the Swop button of the playback you want to store it in*
  - ➔ *You can change the Roller page while you are holding down the Flash button, if you want to copy a memory to a different page.*
- 

The new memory will be a linked copy of the old one. If you change a memory which is linked, all the other memories linked to it will change too.

You can create a completely separate copy of the memory using the "Photocopy" function. Just press the Photocopy button (one of the blue command buttons) before you start the copy. If you have named the memory, the name will not be copied, indicating that it is a "new" memory.

## 6.8 Deleting a memory

If you want to clear a memory so you can store something else in it:

---

**Deleting a memory**

- ➔ *Press Delete (one of the blue command buttons)*
-

- ➔ *Press the Swap button of the playback you want to delete*
- ➔ *Press the Swap button again to confirm the delete.*

---

If the memory is linked to other memories, the others will not be affected.

## 6.9 Editing memories

You can edit any part of a memory you have already saved simply by making the changes and saving the new information on top of the memory.

---

### ***Editing a memory***

- ➔ *Press Clear to empty the programmer.*
- ➔ *Turn on the memory you want to edit, so you can see what you are doing.*
- ➔ *Select the fixtures you want to change, and make the changes.*
- ➔ *Press Memory.*
- ➔ *Press the playback swap button for the memory you are editing to save the changes.*
- ➔ *The Pearl will warn you "A memory already exists on playback!"*
- ➔ *Press A [Merge memory].*

---

The changes you have made are saved into the memory. None of the other information in the memory is affected.

If you want to replace the memory with a new memory, you can use B [Replace memory].

If you need to remove fixtures or individual attributes of fixtures from the memory, you can use the "Off" function to do this. The "Off" function is described in the reference manual.

## 6.10 The Include function

Sometimes it's useful to be able to re-use some aspects of a memory you have already created in another memory. If you've created a really nice pattern of criss-crossing light beams, for example, you might want to use it again in another memory with different gobos and colours.


Normally when you play back a memory, the information is not loaded into the programmer, so you can't simply turn on a memory, modify it and save it to a new memory. The Include function lets you reload a memory back into the programmer. You can then use it in a new memory.

The Include function loads selected attributes of selected fixtures into the programmer. So, for example, if you have a memory which contains position, colour and gobo information for 8 fixtures, you can use the Include function to load only the colour information for 4 of the fixtures into the programmer. You could then "include" position information from another memory into the programmer, and build up a new memory using information from several existing memories.

---

### Using Include

- ➔ Press the Include button.
- ➔ Select the fixtures from which you want to take settings. If you don't select any fixtures, all fixtures will be used.
- ➔ Select the Attributes you want to include. The Dimmer attribute will include all other attributes (the lights on the buttons show which attributes will be loaded).

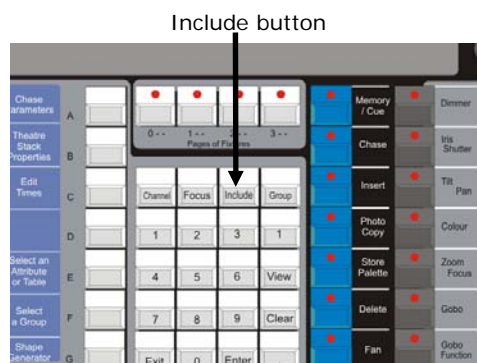

- ➔ Press the Swop button for the memory you want to include.
  - ➔ The selected attributes of the selected fixtures will be loaded into the programmer.
- 

You can Include an entire memory by ensuring no fixtures are selected and selecting the Dimmer attribute.

If the memory you are including contains shapes, the shapes and all the fixtures they are applied to will be loaded, whether they are selected or not.

Include is also useful when you are programming chases, which is described in the next section.

## 6.11 Setting fade times for a memory

You can set a fade in and fade out time independently for every memory. The fades only affect HTP (intensity) channels, and are set using softkey C for fade in and D for fade out. There is also a separate LTP timer which allows you to set movement times for fancy sweeps or colour fades, set using softkey E.

---

### Setting fade times for a memory

- ➔ Press C [Edit Time].
  - ➔ Press the Swop button of the playback you want to set times for
  - ➔ The display shows you the times you can set.
  - ➔ Press C to set Fade In time, or D to set Fade Out time.
  - ➔ Use the numeric keypad to enter the new time. Press Enter to save it.
  - ➔ Press Enter when you have finished. If you press Exit, the changes you have made will not be stored.
- 

There are some other timing functions available as well, which are described in the reference manual.

## 6.12 Record by fixture, record by channel modes

Normally, if you change one attribute of a fixture, the Pearl records all the other attributes of that fixture even if you haven't changed those attributes. So if you change the pan position, the Pearl will also record the tilt, colour, gobo, iris, and so on. However, the Pearl also has a



more selective mode of operation where it only records the changed attributes. You can choose the mode by holding down the Avo button and pressing Softkey C. The display shows the current setting of the option.

- **Record by fixture:** This is the normal mode of the Pearl. It means that when you record a memory, all attributes of every fixture that you have changed are recorded in the memory. So if you change only the position of a fixture, the colour, gobo, intensity and all other attributes of that fixture are recorded as well. This is useful because you know that when you recall the memory, it will look exactly as it did when you saved it. However, it can be slightly inflexible if you want to combine memories.
- **Record by channel:** This means that only attributes you have changed are recorded in the memory. So if you change the position of a fixture, only the position is recorded. When you recall the memory, the colour, gobo etc will remain as they were last set. This means you can use a memory to change the position of some fixtures while leaving the colour set from a previous memory, allowing more variety when you are running a show. It is a powerful feature but you can easily get yourself into trouble with it, so you need to be sure which attributes you need to record and which you want to "show through". When you're learning, it's best to have some memories "recorded by fixture" which turn on the fixtures in a known state, then have some colour memories to modify just the colour, or some gobo memories to set the gobo, or other attributes.

## 6.13 Using shapes in memories

As you would expect, any shapes you have set up will be saved as part of the memory. If you are using Record by Channel mode, there are some interesting possibilities.

If you have changed the position of the fixture, then the new position will be stored in the programmer. When you recall the memory, the fixture will start the shape at the position you set in the memory.

If you have not changed the position of a fixture, when you recall the memory the shape will run at whatever the current position of the fixture is. This allows you to make a "shape only" memory which overlays shapes on the current positioning of the fixtures.

## 6.14 Examples

### *How do I save my dimmer settings as a scene?*

Press Clear to remove any changes you've made so far. Set the dimmers as you want them using the faders. Press Memory. The free playbacks will flash. Press one of the flashing Swop buttons to save the scene in the playback.

### *Why don't my Mac 600's move to the position I've programmed when I turn on a memory?*

You have not pressed clear, and the Mac600's are already positioned in the programmer. The programmer overrides memories. If you press

Clear your memories should work.

***How do I save a memory using the positions from another memory?***

Select the fixtures you want to use with the Swop buttons. Press the red Locate button to turn on the fixtures. Press Include, then the Tilt/Pan attribute button. Press the Swop button of the memory whose positions you want to use. The position information for the selected fixtures will be recalled from the memory. Then save the memory by pressing Memory and an empty (flashing) Swop button.

## CHAPTER SEVEN

## 7. Chases

In this chapter: how to record chases

- explanation of chases
- programming a chase
- running a chase
- setting speed and crossfade
- stacks and sequence control
- editing a chase
- sound activation of chases

As well as being used for recalling static memories, the playback faders on the Pearl can also be used for recalling chases. All the same page select, copy and delete functions are available.

### 7.1 What is a chase?

A chase is simply a memory with a sequence of static positions. Each position is known as a "step". It is normally used to flash lights in a sequence without you having to keep pressing buttons, or to move fixtures around. Chases can run automatically, or by pressing a "Go" button. If you are using the Pearl for theatrical lighting, you can use a chase to store cues for a show. The Pearl also has a dedicated theatrical lighting mode which has a section of its own.

Don't get shapes confused with chases. A shape simply moves one attribute of the fixture around in a pattern. A chase allows you to define each attribute of the fixture in a step-by-step controlled manner.

However, you will find that using shapes saves you a lot of work, and you won't have to program as many chases as you would on a conventional lighting desk.


### 7.2 Recording a chase

To program a chase, you have to set up the lighting state for each step of the chase. You can either set all the fixtures and dimmers manually for each step, or you can use Include to load in the information from memories you have already recorded. Remember, if you just turn on a memory, it does not go into the programmer and won't get saved as part of a chase step.

Note: From the July 2004 version of Pearl software, you can now use shapes in a chase.

#### ***Programming a chase***

- ➔ *Press the Chase button.*
- ➔ *Press the Swap button of the playback where you want to store the chase.*
- ➔ *Press Clear, then set up the lighting for the first step, either manually or by using "Include" on existing memories (see page 31). You can save Shapes in chase steps.*
- ➔ *The display shows the step number*
- ➔ *Press the playback Swap button to record the step. The*

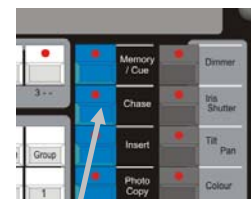

Chase button

*information from the programmer is stored as Step 1 of the chase.*

- ➔ *Press Clear, set up the lighting for the second step, then press Swop again to save step 2.*
- ➔ *When you have saved as many steps as you want, press Clear, then press Exit or Softkey F to finish.*

If you don't press Clear at the end of programming, the settings for the last step will remain in the programmer and will override the chase when you turn it on, so you won't see the chase properly.


## 7.3 Running a chase

Running a chase is just like turning on a memory. Just raise the fader and the chase will start to run.

The HTP (intensity) channels in the chase will be controlled by the position of the fader. The other channels (LTP) will be set as soon as the fader moves above zero. When in Run mode you can pre-position the LTP channels to the first step by lowering the Add/Flash Master fader to zero and pressing the Flash button of the playback.

The chase normally starts at step 1, and runs forward. You can pause the chase and change the direction of the chase using the Sequence control buttons to the right of the wheels.

Sequence buttons

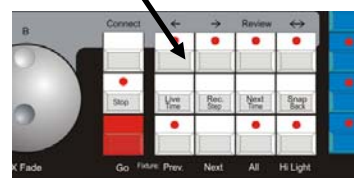

There are lots of options you can set which let you do fancy things with chases, such as Random, One-shot, special timing, and manual step mode. The details are in the reference manual.

## 7.4 Setting speed and crossfade

When you run a chase, the wheels are assigned to control the Speed and Crossfade of the chase (crossfade is the "slope" between steps, from instant switching to continuous fading). The display above the wheels shows the step time and the crossfade setting.

You can save a speed with the chase, so that every time you play it back, it runs at the same speed.

### ***Saving chase speed***

- ➔ *Turn on the chase you want, and set the speed to the setting you want.*
- ➔ *Press A [Chase Parameters].*
- ➔ *Again press A [Save Speed]*
- ➔ *The display will show "Saved".*

You can also save the current direction of the chase by pressing softkey B.

If you are running several chases, the wheels are assigned to the most recently selected chase. You can "connect" the wheels to one of the other chases by pressing the Connect button to the right of the wheels, then the playback Swop button for the chase you want to connect to.

If you've changed the speed using the wheels and you want to go back to the saved speed, press Connect then A [Clear temporary speed].

## 7.5 Naming chases

You can set a legend for chases in exactly the same way as you did for a memory. In addition, you can label individual steps of a chase if you are using the steps as cues. The reference manual tells you how to do this.

---

### **Labelling a chase**

- ➔ *Hold down the AVO button and press G [Set Legend].*
  - ➔ *Press the Swop button of the playback you want to label.*
  - ➔ *Enter the label using the QWERTY keyboard (the VDU screen shows you what you are typing) and press Enter.*
  - ➔ *You can label another memory by pressing another Swop button, or finish by pressing Exit.*
- 

## 7.6 Editing a chase using Unfold

The Pearl has a powerful chase editing system. The Unfold button places each step of a chase on one of the playback faders, allowing you to examine and edit each step individually as if it was a normal memory.

If your chase has more than 20 steps, you can swap to the next 20 steps using softkey F, or the previous 20 steps using softkey E.

---

### **Editing a chase using Unfold**

- ➔ *Press the Unfold button (one of the blue command buttons)*
  - ➔ *Press the playback Swop button of the chase to be edited*
  - ➔ *The first 20 steps of the chase are loaded into playback faders 1-20*
  - ➔ *Raise a playback fader to view the contents of the step*
  - ➔ *The softkeys show a list of options which can be used for the step*
  - ➔ *To edit the contents of the step, make the changes then use softkey A*
  - ➔ *To change the times of the step, use softkey B.*
  - ➔ *Press the Unfold button again to finish.*
- 

You can also edit chase steps while you are running the chase, without using unfold. The "Rec Step" button allows you to record the current programmer settings directly into the current step of the chase. This is described in more detail in the reference manual.

## 7.7 Copying a chase

Chases can be copied in exactly the same way as memories.

---

### **Copying a chase**

- ➔ *Hold down the Flash button of the chase you want to copy.*

- *Press the Swap button of the playback you want to store it in*
  - *You can change the Roller page while you are holding down the Flash button, if you want to copy a chase to a different page.*
- 

The new chase will be a linked copy of the old one. If you want to create a completely separate copy of the memory, press the Photocopy button before you start the copy.

## 7.8 Deleting a chase

If you want to clear a chase so:

---

### ***Deleting a chase***

- *Press Delete*
  - *Press the Swap button of the chase you want to delete*
  - *Press the Swap button again to confirm the delete.*
- 

## 7.9 Timing, Stacks and sequence control

The most common use of a chase is as an automatic continuous sequence. However, the Pearl lets you step chases manually using the Go button, which allows you to use them for theatrical lighting cues or "One shot" chases. When you use a chase like this, it is sometimes known as a "Stack".

The Pearl has a dedicated theatrical lighting mode which is described in detail in the next chapter.

---

### ***Creating a stack***

- *Save each cue state as a step in a chase.*
  - *Press C [Edit Times]*
  - *Press the playback Swap button for the chase*
  - *Press G [Links] to set LINK = OFF for the whole chase*
  - *Press Enter to save the setting.*
  - *Raise the playback fader to activate the chase.*
  - *Press the Go button to run each cue.*
- 

You can set the fade in and fade out times independently for each cue using the Live Time button.

---

### ***Setting cue times on a stack***

- *Start the chase by raising the fader.*
  - *Press the Live Time button to set the times for the current cue.*
  - *Use softkeys A-G to set the times you want*
  - *Press Enter to save the settings or Exit to abandon them.*
  - *Press the Go button to go on to the next cue.*
- 

You can also set a text label for each cue. The Pearl will show you the label for the current cue and the next one coming up. The reference manual tells you more details about this.

## 7.10 Sound activation of chases

Sound activation is not currently supported on the Pearl Expert. The Sound To Light options remain available in the software but do not have any effect.

With the key turned to Run, you can set the speed of the connected chase manually by tapping Softkey G [Tap twice to set tempo] in time with the music.

## 7.11 Examples

### *How do I program a dimmer chase?*

Create the chase by pressing Chase then one of the flashing (empty) playback swop buttons. Press Clear, and turn on the dimmers for step 1. Press the Swop button for the chase to save the step. Press clear, then turn on the dimmers for step 2, and press the Swop button to save. When you have saved all the steps, press Chase to end.

### *I've programmed a chase using memories but when I turn it on, nothing happens*

To use existing memories in a chase, you must use the Include function to load the memory into the programmer. If you just turn on a memory and then try and save that as a chase step, nothing will be saved because the memory will not be in the programmer.

### *The last step of my chase doesn't play back*

You need to press Clear to clear the programmer (which overrides the chase output).





## CHAPTER EIGHT

## 8. Theatre stack

In this chapter: the Pearl's theatre mode

- Setting theatre mode
- Theatre controls
- Plotting a cue
- Naming a cue
- Setting fade times for a cue
- Jumping to a cue
- Running the show

Theatre mode makes the Pearl behave like a standard theatrical console, allowing you to program your whole show as a sequence of cues, and play it back just by pressing the Go button. Playback faders 17-20 become dedicated cue masters. The rest of the console continues to operate as normal, so you can run the main cues from the theatre mode, and spot effects from the other playback faders.

### 8.1 Setting theatre stack mode

In program mode, select Softkey B [Theatre stack programming], then press Enter.

**Note:** When theatre mode is enabled, you can't access playbacks 17-20 on any page; if you intend to use Theatre mode it is advisable not to program these playbacks. Any programs are kept and when you turn off Theatre mode you will be able to access them again.

You can get out of the Theatre menu by pressing G [Quit]. The Exit button does not operate in this mode.

To turn off theatre mode completely, press softkey B from the main menu then press D [Exit theatre programming] When Theatre mode is enabled, the swop button of Playback 17 flashes when the playback is turned off.

Theatre mode programming is not deleted when theatre mode is turned off.

### 8.2 Theatre controls

Fader 17 is the Master fader, controlling the overall intensity of all lights.

The Go button next to the wheels makes a cue start.

If you stop a fade part-way by pressing the Stop button, or one of the stop buttons above the faders, then Fader 18 controls the Fade In of the next step, fader 19 controls the Fade Out of the previous step, and fader 20 controls the LTP (movement) fade timer.

The buttons above 18, 19 and 20 are Stop (blue) and Go (grey) buttons for each of these functions.

### 8.3 Plotting a cue

You can set up the levels for a cue either by using the preset faders and

control wheels to set the levels you want, or by typing in the channel number and the level. You can store moving light positions in theatre cues as well as dimmers.

---

**Entering dimmer levels**

- ➔ *Press Channel (at the top of the numeric keys)*
  - ➔ *On the numeric keypad, enter the fader/handle number of the dimmer (not the DMX address of the channel)*
  - ➔ *Press G [At %]*
  - ➔ *Enter the value to be set as 0 – 9, or Softkey G for Full. You can enter a decimal point and another number if you want more accurate level control.*
  - ➔ *The channel you entered will be set to the level you entered.*
  - ➔ *Press the Channel button to go back to the normal menu*
- 

The softkeys offer you a few more options such as up by 5%, down by 5%, blackout.

Pressing Clear will take all channels you've set using the keypad to blackout. Any channels turned on using the faders will stay on, but will be removed from the programmer.

You can also set multiple channels to the same level using F [through]. Enter first channel, "through", last channel, "at %", level.

---

**Entering multiple dimmer levels**

- ➔ *Press Channel*
  - ➔ *On the numeric keypad, enter the first dimmer handle number of the range*
  - ➔ *Press F [Through]*
  - ➔ *Enter the last dimmer handle number of the range*
  - ➔ *Press G [At %]*
  - ➔ *Enter the value to be set as 0 – 9, or Softkey G for Full.*
  - ➔ *The channels you entered will all be set to the level you entered.*
- 

When you have set all the levels as you want them, type the cue number, then press D [Record Menu]. You then need to press B [Record Stage] to record all the intensity channels that are currently turned on, plus anything in the programmer, or D [Record Programmer] to record just the contents of the programmer (i.e. what you have manually changed). The cue will be saved.

It's best to use whole numbers for cues. Then if you need to insert a cue between two existing cues, you can use a fractional number in between. The Pearl will automatically increase the cue number by 1 every time you record a cue.

## 8.4 Naming a cue

Type the step number to be named, then press E [Set Legend]. Enter the legend on the QWERTY keyboard. While you are typing, the input is shown on the VDU screen.

The name of the live cue and the next cue is displayed in the cue list on

the VDU screen.

## 8.5 Setting fade times for a cue

You can set fade in, fade out and "wait" times for each cue. Press C [Set Times] to show the options. This will set the times for the current cue. You can also use the "Live Time" and "Next Time" buttons (to the right of the wheels) to set the times for the current and next cues. See page 166 for details of times.

## 8.6 Jumping to a cue

You can change the cue being edited by typing the cue number then pressing Enter. If you want to output this cue, press F [Cut to Live] (fade times are ignored).


## 8.7 Running the show

If you have just been editing, you may need to type 1 then Softkey F to set the console to cue 1.

The display above the control wheels shows the current cue number, the next cue number, and the progress of the wait and fade times for fade in, fade out and LTP.

For automatic cues, you can simply press the Go button next to the wheels. The console will carry out the fade with the times you programmed.

If you want to manually control a fade, you can use the in, out and LTP faders or Go/Stop buttons to operate the cue. The display just above wheel A shows the percentage of fade (9 - 0) left to go (shown as "5" in the picture). When Fade In, Fade Out and LTP all show "0", the console moves on to the next cue.

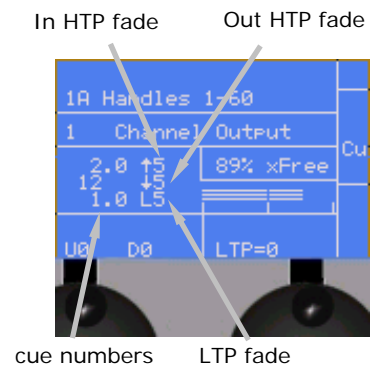



## CHAPTER NINE

## 9. Running your show

In this chapter: running your show with the Pearl Expert

- Showtime
- Run modes
- Master faders
- Channel mimics
- Manual control during a show

### 9.1 It's showtime...

When you have finished programming (or you've run out of time) and it's showtime, the most important thing is to back up the show to disk (see end of section 2 on page 12 for instructions). Having done that, turn the key to Run. This means you can't accidentally change your programming when you get into a button-pressing frenzy.

### 9.2 Temporarily locking the console

In Run mode you can temporarily lock the console (to stop the sound guys playing with it while you nip to the loo). Type in a 4 digit number then press C [Lock Desk] then Enter. The display will show the code. Press Enter to lock it. All buttons and faders are now ignored. Re-enter the code to unlock the console.

If you repower or reset the Pearl, the lock is cancelled. It's just to discourage tampering.

### 9.3 Run modes

When you are running a show, there are two modes available to you, normal Run mode, which just allows you to play back memories, and Takeover run mode, which allows you to play back memories and also take manual control of fixtures. The mode also affects how the Swop and Flash buttons on the console operate.

You can select the mode by pressing A [Toggle mode]. The mode is shown on the top line of the display.

- **What's not affected:** The playback faders work the same in either mode. The Preset Faders work as handles to control the intensity of the device they are patched to.
- **Normal Run mode:** the Flash and Swop buttons on the handles and playbacks work as flash buttons. The "Flash" button adds the function into anything else which is on. The "Swop" button turns on the function, but turns off everything else while the button is held down. The programmer is cleared and you can't manually control any LTP channels.
- **Takeover run mode:** the Swop buttons on the handles allow you to select dimmers or fixtures for manual control. This lets you add to or change your programming in real time during the show. The faders still control the intensity of the dimmers and fixtures. The Flash and Swop buttons on the playbacks are disabled.

## 9.4 Manual control during a show (“busking”)

If you have not had as much programming time as you would have liked, you might need to make up some additional effects during the show. This is sometimes called “busking”.

You can create instant variations by recalling palette values to modify your existing programs. The Pearl can fade to the palette values for added effect.

You need to be in Takeover Run mode to do any of this .

---

### ***Fading palettes over time in Run mode***

- ➔ *Select some fixtures which are already in use on stage*
  - ➔ *Press “2” (or any time, in seconds) on the numeric keypad*
  - ➔ *Press the Focus button*
  - ➔ *Select the Colour palette page*
  - ➔ *Press a softkey to recall a different colour from the Colour palette*
  - ➔ *The selected fixtures will change to the new colour over a time of 2 seconds.*
- 

If you don't select any fixtures in the first step, the palette value will be applied to all fixtures (if this is enabled in User Setting 6, see page 189).

To save having to select fixtures, you can apply the palette to all fixtures in a memory.

---

### ***Setting a palette value to fixtures in a memory***

- ➔ *Press the Focus button*
  - ➔ *Select the Colour palette page*
  - ➔ *Hold down a softkey for a different colour from the Colour palette*
  - ➔ *Press the Swop button of the memory you want to use*
  - ➔ *Release the softkey*
  - ➔ *The palette value will be set to all the fixtures in the memory.*
- 

You can apply this palette to fade over a time by pressing a number before you press the Focus button.

If you apply palettes over a time, they do not get put in the programmer. This means that the next time you turn on a playback, the new playback settings will override the old palette.

If you apply palettes with time=0, then they **do** go into the programmer, and the palette value will override any new playbacks until you press Clear. If you want to apply the palette instantly, but don't want it in the programmer (so that turning on a new playback will override the palette), enter a time of 0.1.

You can use “Record by channel” mode when programming to set some memories to only affect position, and other memories to set colours, gobos, add shapes, and so on. By combining two or more memories you can produce a much wider range of effects than if all your memories set all the attributes. However, for this to work well you need

to make sure you know what attribute is going to be affected by each memory, as if you turn on two "colour only" memories then nothing is going to light up.

## 9.5 Master faders

In the top left hand corner of the console are the Master Faders. These allow overall intensity control of the whole console.

- The Add/Flash and Swop masters control the intensity of the Flash and Swop buttons on the playbacks.
- The Preset Master controls the overall intensity of any channels turned on in the Preset faders.
- The Grand Master controls the intensity of all output from the console.

## 9.6 Channel mimics

If you are in normal Run mode, the LEDs on each handle mimic the intensity of the fixture or dimmer controlled by that handle (i.e. they are lit if it is turned on).

If you are in Takeover Run mode (or Program mode), you can choose between "Mimic" mode or "Fixture" mode, where the LEDs show you which fixtures are selected for manual control.

You select the mode by holding down the Avo button and pressing Softkey A. The button shows "Preset LEDs = Fixtures" (or mimics) depending on the mode.





## 10. Advanced features

Hopefully, by working through this tutorial manual, you now know how to set up the Pearl, control fixtures with it, save memories and chases and use them in a show.

We have tried to stick to the basics, but the Pearl can do many more things than we have told you so far. The reference manual expands on all the information in the previous chapters. There's also some subjects we have not touched on yet, and these are described in the reference manual. Just so you know, they are:

- User Settings - Some console options you can change
- Setting the real time clock
- Disk functions
- Tracking - You can train the Pearl so it knows how the fixtures are positioned relative to the stage. You can then make synchronised changes to multiple fixtures. Training is described in Chapter 3.2 of the reference manual.
- MIDI - The Pearl has a very comprehensive MIDI control system
- Script files - You can tell the Pearl how to run a show from a list of instructions which you can enter or record in real time. This is described in chapter 9 of the reference manual.
- Changing the operating system - From time to time Avolites release a new version of operating software, which you can load into the Pearl
- Personality files - if the Pearl doesn't have a personality file for your fixture you can write your own. These are described in chapter 11 of the reference manual.



## CHAPTER ELEVEN

## 11. Introduction to intelligent lighting

This section is for those who have not used intelligent lighting much before, who are put off by dip switches, lights that move unexpectedly and strange digital control systems that fly down microphone cables.

### 11.1 Ordinary lighting

Standard lighting consists of a variety of light bulbs connected to dimmers. The lights may be anything from par cans to theatrical lanterns, and the dimmer controls the intensity of the light. A typical controller for standard lighting has a set of sliders, and each slider controls the intensity of one dimmer using a low-voltage control signal of 0 to 10 volts. The standard way to link the sliders to the dimmers is by using a multicore cable with one core for each dimmer channel.

### 11.2 So what is intelligent lighting?

Intelligent lighting usually contains more functions than just intensity; a typical intelligent light, often called a "fixture", can also change colour, project different patterns (called "gobos") and direct the light beam in any direction using a movable mirror or by motorised control of the light unit itself. The fixtures are called "intelligent" because they contain a small computer which controls the movement of the internal motors in response to the control signals. Some fixtures can also listen to music and produce their own light show, sometimes synchronising themselves with other intelligent fixtures. However they are actually not all that intelligent and usually need a user to make them do something interesting.

### 11.3 How do you control it?

Each function of an intelligent fixture requires its own control signal, so the user can select the colour, position, gobo etc. You can use 0 to 10 volt control signals on some fixtures, but the cable carrying the control signals again has to be a multicore with one core for each function, so each fixture might need 8 or more cores in the control cable. Some of the more complicated fixtures use 20 channels.

When several fixtures are used, the number of cores needed in the control cable soon becomes large. The cable also has to split at each fixture. It all gets a bit complicated.

### 11.4 The DMX control system

Fortunately, there is an easy to use system for controlling intelligent lighting and dimmers. It is called DMX-512, which stands for Digital MultipleX, and it sends up to 512 control signals down a twisted pair screened cable. The cable can be simply daisy-chained from each fixture to the next. Microphone-style XLR connectors are usually used, sometimes 3-pin and sometimes 5-pin. More recently RJ45 computer network type connectors are being used.

The DMX system sends out the level for channel 1, followed by the level for channel 2, then 3, then 4 and so on, all the way up to a maximum of 512 (though not all DMX systems send out all the channels). It then

goes back to channel 1 again. All the units connected to the DMX receive all the channels, and you tell them which channels to respond to by setting the "base channel" or "DMX address" on each unit. The computer inside the fixture waits for the correct channels to come up, then reads in the levels for those channels.

Dimmers can also understand DMX; some dimmers can read it directly, others use a demultiplexer or "demux" to convert the DMX into the normal 0 to 10 volt analogue signals they are used to.

## 11.5 Moving light control desks

Sliders are ideal for controlling dimmers. More complicated dimmer control desks have memories to record the level of all the dimmers, so you can recall a setting without having to set all the sliders again during a show.

However, once you start controlling lights that move and change colour, sliders become less ideal, because it is the movement rather than the end level which is important. Dedicated moving light desks such as the Pearl include many helpful functions which makes the programming of intelligent lighting much easier, such as palettes of pre-programmed colours and positions, and a shape generator to create movements.

## 11.6 A few cautions about using DMX

DMX is a robust system which normally works very well, but sometimes it can be problematic. Here are a few tips for making DMX work well.

- DMX cabling should be twisted-pair data cable. Microphone cable is not recommended because it doesn't transmit the signal as well. You will probably get away with it, but equally you might have problems.
- Always ensure the last fixture in the DMX line is terminated. On some fixtures this can be done by flipping a switch, others are self-terminating, but often you will have to fit a terminating plug into the vacant socket on the last unit. This has a 120 ohm resistor across the DMX line and prevents data interference on the line. It might work without but...
- Don't split the DMX cable. Loop it from one unit to the next. If you have to split it, use a proper active splitter unit.
- The DMX specification says that you should not run more than 32 fixtures from one DMX line unless the fixtures are buffered or optically isolated. Either use several DMX lines (the Pearl has four) or use a DMX repeater unit. In practice, most fixtures do not put maximum loading on the DMX line and you will probably get away with using more if you have to, but the DMX signal may be weaker than it should be.
- Don't run your DMX lines near high voltage cables or neon. They may pick up interference which will stop the system working, or worse, damage the interface in the fixtures.

## CHAPTER TWELVE

## 12. Introduction to Avolites consoles

If you have used intelligent lighting before, this section explains the thinking behind how Avolites consoles work and tells you what everything is called.

### 12.1 Operating the console

The console has three main modes, set using the keyswitch; these are **Program** (used for programming a show, allows everything to be changed), **Run** (used when running a show, allows limited user override but no changes to programming) and **System** (used for configuring the console).

The operation of the console is based around the LCD screen. Seven **Softkeys** allow you to select the options down the right hand side of the screen. These options change depending on what the console is doing. In addition there are the blue Command Buttons which give one-button access to some functions.

### 12.2 Controlling lights

To an Avolites console, a light is either a **Dimmer** (single intensity control channel) or a **Fixture** (Multiple control channels)

All Fixtures have a **Personality File** which tells the console how to control the fixture. You don't need to know how the fixture works, you just tell the console what you want to do with the fixture (such as change colour) and it knows which controls to change to get the effect.

You tell the console what fixtures/dimmers you have and their DMX addresses by **Patching** them. When you patch, you allocate a **Handle** to the device. The handle is one of the Faders and Select buttons across the top of the console. You can allocate several dimmers to one handle if you want to group them, but only one fixture can be allocated to any one handle.

To control a fixture, you need to select the fixture you want to control by pressing the Select button of the handle. The button lights up to tell you that the fixture/dimmer is selected.

Additionally you can control a dimmer, or the intensity of a fixture, using the Fader of the handle. If you change pages so that the fader has been controlling something else, you will need to **Match** the fader to the current dimmer level before it operates the dimmer (normally by lowering the fader to zero then fading it up until you gain control of the dimmer).

All control of fixtures uses the two **Wheels**. To change the fixture(s) you've selected, you select the **Attribute** (colour, pan, gobo etc) you want to control using the buttons on the right hand side of the console. Then turn the wheels to change the attribute.

### 12.3 Programming the console

To store the settings of fixtures and dimmers, the console provides **Memories** and **Chases** (sequences). These are stored in the **20 Playback Faders** across the near edge of the console. Up to 30

different Pages of playbacks are available using the **Rollers** and Roller Page buttons. There are 2 rollers each with 10 playback faders, allowing you to mix and match playbacks from different pages. The rollers provide a handy surface for writing a note of what is stored in each playback.

When you save a memory or chase, the console only saves settings you have changed using the wheels (it does not save the current output state). Whenever you change a fixture using the wheels and attribute buttons, your changes are stored in a special memory called the **Programmer**. The console allows you to save just the changed attributes (Record by Channel), or if you change one attribute of a fixture it can save all other attributes of that fixture as well (Record by Fixture). Record by Channel mode is often called "Tracking" on other consoles; in this mode, fixture attributes remain in their last state unless you specifically change them.

The programmer records all changes in the console until you press the **Clear** button. You should press the Clear button before setting up the lighting for a memory, otherwise there may be all sorts of changes you don't want in the programmer, which would end up in your memory.

You can reload information from memories and chases into the programmer, if you want to save them in another memory, using the **Include** function. This function allows you to reload the whole memory, or only certain fixtures from the memory, or only certain attributes of certain fixtures.

When you play back a memory or chase, the console sets the fixtures to their programmed positions as soon as the fader rises above zero. The intensity of the fixtures, and any dimmers, rises with the fader. The intensity channels are called **HTP** (highest takes precedence) channels, because if the channel is turned on in more than one memory, the highest level will be output. The movement channels are called **LTP** (latest takes precedence) channels, because if the channel is turned on in more than one memory, the most recent change will be output.

You can program the LTP/movement channels to fade with the fader if you want to.

Avolites consoles have a **Shape Generator** (sometimes called an effects generator on other consoles). This automatically changes attributes in a preprogrammed pattern. Fixtures can be made to move their light beams around in a circle, or to fade colours, or move in and out of focus. When a shape is applied to more than one fixture, the shape can be **Spread** so that the fixtures run through in a sequence giving wave-type effects.

Shapes you apply go into the programmer and are saved if you save a memory or a chase.

Avolites consoles allow you to save frequently-used positions, colours etc. into a **Palette** (sometimes called a Focus or Preset Focus on other consoles). When you want that setting, you simply recall the palette. If you use palettes when programming memories, the console remembers the palette number rather than the actual fixture settings. This means that if you change venues, or fixtures are moved, you can quickly reprogram your position palettes and all memories using those palettes will be updated. This can save you having to reprogram many memories.

Palettes can be recalled from a menu on the console display so you can

see what colour, position etc. you are going to get. This is useful when "busking" the lighting (modifying your programming) during a show. The console allows you to fade between palettes (**Timed Palettes**) to give smooth live changes.





## CHAPTER THIRTEEN

## 13. Changes from previous Pearl consoles

If you are used to using the Avolites Pearl 2000 or 2004 console, this section gives you a quick rundown of the differences between the Pearl you know and love and the new console. There are some exciting new features.

The features in the first section are unique to the Pearl Expert. The other features are available in both the Pearl Expert and the Pearl 2004 software (which will also run on the Pearl 2000 console).

### 13.1 New features in Pearl Expert console

**Split roller and extra playback faders:** There are now 20 playback faders, split into two groups of 10. Each group has its own roller. This means you can mix and match memories from two different roller pages for the ultimate in buskability!

**Add and swop buttons on top presets:** The top 30 preset faders now have their own add and swop buttons, making patching and control much simpler for those faders.

**Save/load show from USB/hard disk:** You can now save and reload your show using a USB pen drive or internal hard disk (the floppy drive is still provided for compatibility, but is now on the back panel).

**Relocated controls:** Some controls have been relocated on the panel. The control key and the masters are now in the top left corner. The pages of fixtures buttons are above the numeric keypad. The chase sequence controls now have their own buttons (not shared with the highlight prev/next buttons) and are located below the numeric keypad. There is now a dedicated Locate Fixture button bottom right (this button acts as Reduce Fixture Intensity if AVO button is held).

**QWERTY keyboard and mouse touchpad:** A built in keyboard and mouse touch pad is provided in a drawer at the front of the console.

**DMX Ethernet output:** Any of the four DMX output lines may be transmitted over the Ethernet output.

**New internal operating system:** The console runs on an Intel Dual Core processor using the Windows XP operating system internally. This is mostly invisible to the user, except that the Pearl VDU now appears in a window on the monitor and you need to shut down the console using the power switch before removing power.

The following sections apply to both the Pearl Expert and the Pearl 2004 software.

### 13.2 Wheel acceleration

16 bit attributes now always work in 16 bit mode. If you spin the wheels faster, the Pearl will skip values to change the attribute faster. If you spin the wheels slowly the attribute will change with maximum resolution. You can change the acceleration factor on the wheels, see page 191.

### 13.3 Preset Focuses are now Palettes

Preset Focuses are now called Palettes, in line with other Avolites consoles (except for the "Focus" button, which remains stubbornly engraved).

You can now recall Palettes from the softkeys by pressing the Focus button and the display shows you what the palette contains. This is similar to the Palette displays on the Sapphire, if you're used to that console.

You can apply a palette to all fixtures, without having to select them. If you recall a palette with no fixtures selected it will be applied to all fixtures (but the palette is not entered into the programmer).

You can apply a palette to all fixtures in a memory, by holding down the button for the palette and then pressing the memory's Swap button. Again the palette is not entered into the programmer.

Each page of fixtures now has a separate page of palettes accessible from the handle "Flash" buttons. (previously the same 30 palettes/focuses appeared on all fixture pages). This option needs to be enabled in the user settings, see page 193.

### 13.4 Chases can include shapes

You can now include shapes in a chase and in cues of the Theatre Stack. Each step can include different shape settings. If the shape is also present with unchanged parameters in the next step, it will continue, otherwise it will stop at the end of the step time.

### 13.5 Intelligent Attribute display

The display above the wheels can now show the attribute value name; for example, on a colour wheel you may see "Open", "Red" etc displayed as you turn the wheel.

This function requires Range information to be supported by the personality file for the fixture. If an updated personality file including the Range information becomes available, there is a function to update the Range table for the patched personalities in the console, so you don't have to repatch. This is in the Utilities section of the System menu.

### 13.6 Legends

You can enter legends for memories, chases, groups, roller pages, palette pages and palette entries. Memory and chase legends are shown on the VDU screen, the other legends are used on both the VDU screen and the on-board LCD display.

### 13.7 Other features

You can temporarily lock out the controls the desk in Run mode by typing a 4 digit code and pressing Softkey C.

The Include function has been improved to allow you to include a chase step, a cue from the theatre stack, and incoming DMX from the DMX In socket.

A "locate no pan and tilt" option has been added to allow you to locate

a fixture without changing its position.

Many options are now quickly accessible by holding down the AVO button.

You can selectively Wipe parts of the console; just the programming, just the palettes, the patch and the programming, or the original Wipeall option.



# **Pearl Expert**

## **Reference Manual**





<b>1. SETTING UP THE CONSOLE</b>	<b>111</b>
1.1 Connecting up	111
1.1.1 <i>Connecting mains power</i>	111
1.1.2 <i>Connecting DMX lines</i>	111
1.1.3 <i>Connecting MIDI devices</i>	111
1.1.4 <i>Connecting audio</i>	111
1.1.5 <i>Other back panel connections and controls</i>	111
1.1.6 <i>The desk lamp</i>	112
1.2 Operating	112
1.2.1 <i>Operating modes</i>	112
1.2.2 <i>Loading and saving shows</i>	113
1.2.3 <i>The front panel controls</i>	114
1.2.4 <i>View screens</i>	115
1.2.5 <i>Visualiser</i>	117
<b>2. PATCHING</b>	<b>119</b>
2.1 Create	119
2.1.1 <i>Fixture handles</i>	119
2.1.2 <i>Patching dimmers</i>	119
2.1.3 <i>Patching moving light fixtures</i>	120
2.1.4 <i>Checking the patching</i>	122
2.2 Edit	122
2.2.1 <i>Changing the DMX address of a fixture</i>	122
2.2.2 <i>Moving a fixture to a different handle</i>	123
2.3 Delete	123
2.3.1 <i>Deleting a patched fixture</i>	123
2.4 Advanced options	123
2.4.1 <i>Patch Utilities</i>	123
<b>3. CONTROLLING DIMMERS AND FIXTURES</b>	<b>127</b>
3.1 Create	127
3.1.1 <i>Selecting fixtures and dimmers for control</i>	127
3.1.2 <i>Changing attributes of the selected fixtures</i>	128
3.1.3 <i>Selecting attributes from the softkeys</i>	129
3.1.4 <i>Using groups</i>	129
3.1.5 <i>Stepping through selected fixtures one at a time</i>	129
3.1.6 <i>The Align and Flip functions</i>	130
3.1.7 <i>"Killing off" a fixture or dimmer</i>	130
3.1.8 <i>Entering intensity levels as numbers</i>	131
3.1.9 <i>Controlling fixtures by entering values</i>	132
3.1.10 <i>Fan mode</i>	132
3.2 Advanced options	133
3.2.1 <i>The ML menu and Tracking</i>	133
3.2.2 <i>Training the console for Tracking mode</i>	134
<b>4. PALETTES</b>	<b>137</b>
4.1 Create	137
4.1.1 <i>Palette values stored as a reference</i>	137
4.1.2 <i>Shared and individual palettes</i>	137
4.1.3 <i>Which attributes are stored in palettes</i>	137
4.1.4 <i>Storing a palette</i>	138
4.2 Playback	138



4.2.1	<i>Recalling a palette value</i>	138
4.2.2	<i>Palette pages</i>	139
4.2.3	<i>Setting a palette to all fixtures (Quick palette)</i>	139
4.2.4	<i>Recalling only some attributes from a palette</i>	140
4.2.5	<i>Setting a palette to fixtures in a memory (Filtered palette)</i>	140
4.3	<b>Edit</b>	140
4.3.1	<i>Editing and deleting palettes</i>	140
4.3.2	<i>Naming a palette value or page</i>	140
4.3.3	<i>Viewing the contents of a palette</i>	141
4.4	<b>Timing</b>	141
4.4.1	<i>Recalling a palette with a fade time</i>	141
4.4.2	<i>Master fade time</i>	142
4.5	<b>Advanced options</b>	142
4.5.1	<i>Palette options</i>	142
<b>5.</b>	<b>SHAPES</b>	<b>143</b>
5.1	<b>Playback</b>	143
5.1.1	<i>Selecting a shape</i>	143
5.1.2	<i>Changing the size and speed of a shape</i>	144
5.1.3	<i>Spreading a shape across multiple fixtures</i>	144
5.1.4	<i>Relative and Absolute shapes</i>	145
5.2	<b>Edit</b>	145
5.2.1	<i>Editing shapes which are running</i>	145
5.3	<b>Advanced options</b>	146
5.3.1	<i>Shape options</i>	146
5.3.2	<i>Updating the shape file</i>	147
<b>6.</b>	<b>MEMORIES</b>	<b>149</b>
6.1	<b>Create</b>	149
6.1.1	<i>How the Pearl works when programming</i>	149
6.1.2	<i>Creating a memory</i>	150
6.1.3	<i>Recording the stage using Snapshots</i>	151
6.1.4	<i>Using shapes in memories</i>	151
6.1.5	<i>Viewing the programmer contents</i>	151
6.2	<b>Playback</b>	152
6.2.1	<i>HTP and LTP channels</i>	152
6.2.2	<i>Playing back a memory</i>	153
6.2.3	<i>Changing playback pages</i>	153
6.3	<b>Edit</b>	153
6.3.1	<i>Editing a memory</i>	153
6.3.2	<i>The Include function</i>	154
6.3.3	<i>The "Off" button</i>	155
6.3.4	<i>Viewing a memory</i>	156
6.4	<b>Copy</b>	156
6.4.1	<i>Copying a memory</i>	156
6.5	<b>Delete</b>	156
6.5.1	<i>Deleting a memory</i>	156
6.6	<b>Timing</b>	157
6.6.1	<i>Setting fade times for a memory</i>	157
6.7	<b>Advanced options</b>	158
6.7.1	<i>Recording in Blind mode</i>	158

<b>7. CHASES</b>	<b>159</b>
7.1 Create	159
7.1.1 <i>Programming a chase</i>	159
7.2 Playback	160
7.2.1 <i>Running a chase</i>	160
7.2.2 <i>Connecting a chase to the controls</i>	160
7.2.3 <i>Setting speed, crossfade and direction</i>	160
7.2.4 <i>Manually controlling the chase steps</i>	161
7.2.5 <i>Viewing chase steps</i>	162
7.3 Edit	162
7.3.1 <i>Adding more steps to the end of a chase</i>	162
7.3.2 <i>Editing a chase using Unfold</i>	162
7.3.3 <i>Editing a chase which is running</i>	163
7.4 Copy	164
7.4.1 <i>Copying chases</i>	164
7.5 Delete	164
7.5.1 <i>Deleting chases</i>	164
7.5.2 <i>Deleting a step from a chase</i>	164
7.6 Timing	165
7.6.1 <i>Speed and crossfade controlled by wheels</i>	165
7.6.2 <i>Setting global step or fade times and unlinking</i>	165
7.6.3 <i>Setting times and links for individual steps</i>	166
7.6.4 <i>Viewing timing information</i>	166
7.6.5 <i>Sound activation of chases</i>	167
7.7 Advanced options	167
7.7.1 <i>Chase options</i>	167
<b>8. THEATRE STACK</b>	<b>169</b>
8.1 Create	169
8.1.1 <i>Setting theatre stack mode</i>	169
8.1.2 <i>Theatre controls</i>	169
8.1.3 <i>Plotting a cue</i>	170
8.1.4 <i>Running a chase or memory with a cue (Autoload)</i>	171
8.1.5 <i>Naming a cue</i>	171
8.2 Timing	171
8.2.1 <i>Setting fade times for a cue</i>	171
8.2.2 <i>Displaying the cue timings</i>	172
8.3 Playback	173
8.3.1 <i>Running a theatrical show</i>	173
8.4 Edit	174
8.4.1 <i>Editing a cue</i>	174
8.4.2 <i>Jumping to a cue</i>	174
8.4.3 <i>Inserting a cue</i>	174
8.4.4 <i>Renumbering cues</i>	174
8.4.5 <i>Copying a cue</i>	174
8.5 Delete	174
8.5.1 <i>Deleting a cue</i>	174
8.6 Advanced options	174
8.6.1 <i>Advanced theatre options</i>	174
<b>9. RUNNING THE SHOW</b>	<b>177</b>

9.1	Playback	177
9.1.1	<i>Run modes</i>	177
9.1.2	<i>Master faders</i>	177
9.1.3	<i>Manual control during a show ("Busking")</i>	178
9.2	Options	179
9.2.1	<i>Two-preset mode</i>	179
9.2.2	<i>Temporarily locking the console</i>	179
9.2.3	<i>Channel mimics</i>	179
<b>10.</b>	<b>AUTOMATED PLAYBACK (SCRIPT FILES)</b>	<b>181</b>
10.1	Create	181
10.1.1	<i>Recording Script files</i>	181
10.1.2	<i>What is recorded in the script file</i>	182
10.2	Playback	182
10.2.1	<i>Selecting a script file for testing</i>	182
10.2.2	<i>Testing the script file</i>	182
10.2.3	<i>Using Script files in Run mode</i>	183
10.2.4	<i>Looping and running script files on power up</i>	184
10.3	Edit	184
10.3.1	<i>The script file edit display</i>	184
10.3.2	<i>Editing an action</i>	185
10.3.3	<i>Inserting a step into the script file</i>	185
10.3.4	<i>"On-the-fly" editing</i>	185
10.4	Timing	185
10.4.1	<i>Editing a timecode</i>	185
10.4.2	<i>Changing timecode for a group of steps</i>	186
10.4.3	<i>Changing the start timecode for the whole script file</i>	186
10.4.4	<i>Sorting the steps into time order</i>	186
10.5	Copy	187
10.5.1	<i>Copying a script file</i>	187
10.6	Delete	187
10.6.1	<i>Deleting a step</i>	187
10.6.2	<i>Deleting a script file</i>	187
10.7	Options	187
<b>11.</b>	<b>SETUP</b>	<b>189</b>
11.1	User Settings	189
11.1.1	<i>The User Settings menu</i>	189
11.1.2	<i>Setting the Wheel acceleration</i>	191
11.2	User functions	191
11.2.1	<i>The Wipe menu</i>	191
11.2.2	<i>Configuring DMX output lines</i>	191
11.2.3	<i>Disk functions</i>	192
<b>12.</b>	<b>OTHER FEATURES</b>	<b>193</b>
12.1	System Configuration	193
12.1.1	<i>Utility menu</i>	193
12.1.2	<i>Service mode</i>	193
12.1.3	<i>Using the USBExpert console for diagnostics</i>	194
12.1.4	<i>Configuring the VDU with Windows Control Panel</i>	195
12.1.5	<i>Upgrading the Pearl's internal software</i>	195
12.1.6	<i>Using the Pearl Recovery CD</i>	195
12.1.7	<i>Using the USB Reserve sockets if the console fails</i>	196

12.2	MIDI functions	197
12.2.1	<i>What a MIDI command looks like</i>	197
12.2.2	<i>MIDI commands used by the Pearl</i>	197
12.2.3	<i>MIDI Time Code</i>	198
12.2.4	<i>MIDI Problems</i>	198
<b>13.</b>	<b>THE PERSONALITY FILE SYSTEM</b>	<b>199</b>
13.1	Help, I can't find a personality for my fixture	199
13.2	Create	199
13.2.1	<i>What is and how do I write or change a Personality file?</i>	199
13.2.2	<i>Personality file naming conventions</i>	199
13.2.3	<i>Personality File Keyword Order</i>	200
13.2.4	<i>The Instrument Name</i>	200
13.2.5	<i>The Device Type</i>	200
13.2.6	<i>Fixture switch settings</i>	201
13.2.7	<i>Mirror</i>	203
13.2.8	<i>The DMX/Preset Layout</i>	203
13.2.9	<i>Text Field</i>	204
13.2.10	<i>The Preset Focus (Palette) table</i>	204
13.2.11	<i>Macros</i>	205
13.2.12	<i>Range tables</i>	206
13.2.13	<i>Example Personality File for the High End Cyberlight</i>	207
<b>14.</b>	<b>GLOSSARY OF TERMS</b>	<b>211</b>
<b>15.</b>	<b>INDEX</b>	<b>217</b>





## CHAPTER ONE

# 1. Setting up the console

*This chapter contains: Connecting mains power; connecting DMX lines; connecting MIDI devices; connecting audio; the disk drive; other back panel connections and controls; desk modes.*

## 1.1 Connecting up

### 1.1.1 Connecting mains power

The Pearl Expert has a universal power supply which can be safely connected to any voltage from 80 to 260V.

Ensure the power switch next to the mains inlet is set to "I" (On) otherwise nothing will work! This switch should be left On.

### 1.1.2 Connecting DMX lines

The Pearl can output DMX down 4 separate lines. When you patch a dimmer or fixture you can tell the Pearl which DMX line it is on. The lines are identified by the letters A,B,C,D. Normally the lines come out of the rear panel connectors as labelled, but just to add to the fun you can swap this round if you want, or send DMX lines over Ethernet (see Patching, section 2).

The 4 DMX outputs come out of the four 5 pin XLR sockets on the back of the console. They are wired like this:

DMX signal	Pin number
Ground	1
Data +	3
Data -	2

Note: Unlike the Pearl 2004 and 2000, outputs 1 and 3 do not carry additional DMX lines on pins 4 and 5.

### 1.1.3 Connecting MIDI devices

The Pearl has the usual MIDI IN and OUT connections. It can read MIDI information and use it to trigger a show, and it can output MIDI information in response to user actions on the controls. This means you can record a show straight into a MIDI sequencer by operating the show yourself using the buttons and sliders. The MIDI operation of the console is described in section 12 on page 197.

### 1.1.4 Connecting audio

The Pearl Expert does not currently support audio connections.


### 1.1.5 Other back panel connections and controls

The back panel connections are mostly self explanatory except for the following:

**USB reserve sockets and switches:** Allow you to connect an Avolites ShowSafe unit to output the show if the Pearl's processing unit fails.

**VDU socket:** for connecting a computer monitor. The output is a standard Windows display (see Setting display resolution on page 195). You do not have to connect the VDU screen as most information is shown on the console's on-board display, but some extra displays are available on the VDU screen which are useful when programming or operating a complex show.

**Keyboard and mouse:** You can plug in an external keyboard and

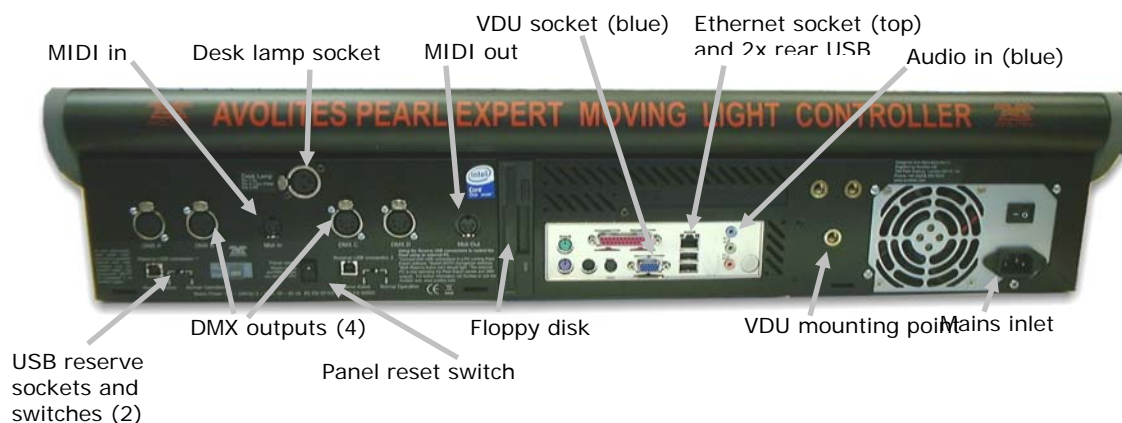

mouse to the green and purple sockets (don't forget the console has one built in)

**VDU mounting point:** allows you to affix a standard VDU support arm to hold the VDU above the rear of the console.

**Panel Reset Switch:** allows you to restart the front panel processing if something funny happens to it. The DMX output and programming will continue unaffected.

## 1.1.6 The desk lamp

The desk lamp plugs into the socket on the back of the Pearl (right hand side looking from the front). The lamp intensity can be controlled from the User Settings menu, see page 189.

The desk lamp uses a 12V, 5W halogen lamp.

---

## 1.2 Operating

### 1.2.1 Operating modes

The Pearl has a key-operated switch on the top left of the panel which allows you to select the operating mode of the console.

When running a show, you normally select Run mode. You can run playbacks and (in Takeover run mode) manually control fixtures (see page 177). You cannot change any programming. This is the best mode if others are operating the console and you want to make sure they can't mess up your programming. Just take the key with you!!

When programming, you need to be in Program mode, which you



access by turning the key to Program. *This manual assumes you are in program mode.*

System mode allows you to clear parts or all of the console using softkey F [Wipe], to set up how the console works, and to access various diagnostic information if you're having problems.

### 1.2.2 Loading and saving shows

The Pearl has a front-mounted USB socket for USB "Pen" drives to allow you to save and load shows, personality files and system software.


There is also a 1.44MB floppy disk drive on the rear of the console which can be used to load and save shows for the Pearl 2004/2000 consoles. The standard PC disk format is used, so you can transfer data to and from a PC. You can also save to the internal hard drive, but this will not help you if the console is lost or damaged so always keep a copy of your show on some removable device.

You should get into the habit of backing up your show to USB drive or disk regularly to guard against that moment when something goes wrong. It doesn't take long.

- 
- 1> *Press the Disk button in the bottom right hand corner of the Pearl*
  - 2> *Insert a USB pen drive into the front USB socket or a blank formatted 1.44M disk into the disk drive.*
  - 3> *Press B [Save show to disk]. Enter a name on the QWERTY keyboard (or press Enter on the console to use the default name).*
  - 4> *Press a softkey to select which disk media you want to save to. The Pearl will save the show.*
  - 5> *To reload the show, use softkey A [Load show from disk].*
- 

Other disk drive functions are available when you have pressed the Disk button. The disk drive functions are described in section 12 on page 191.

### 1.2.3 The front panel controls

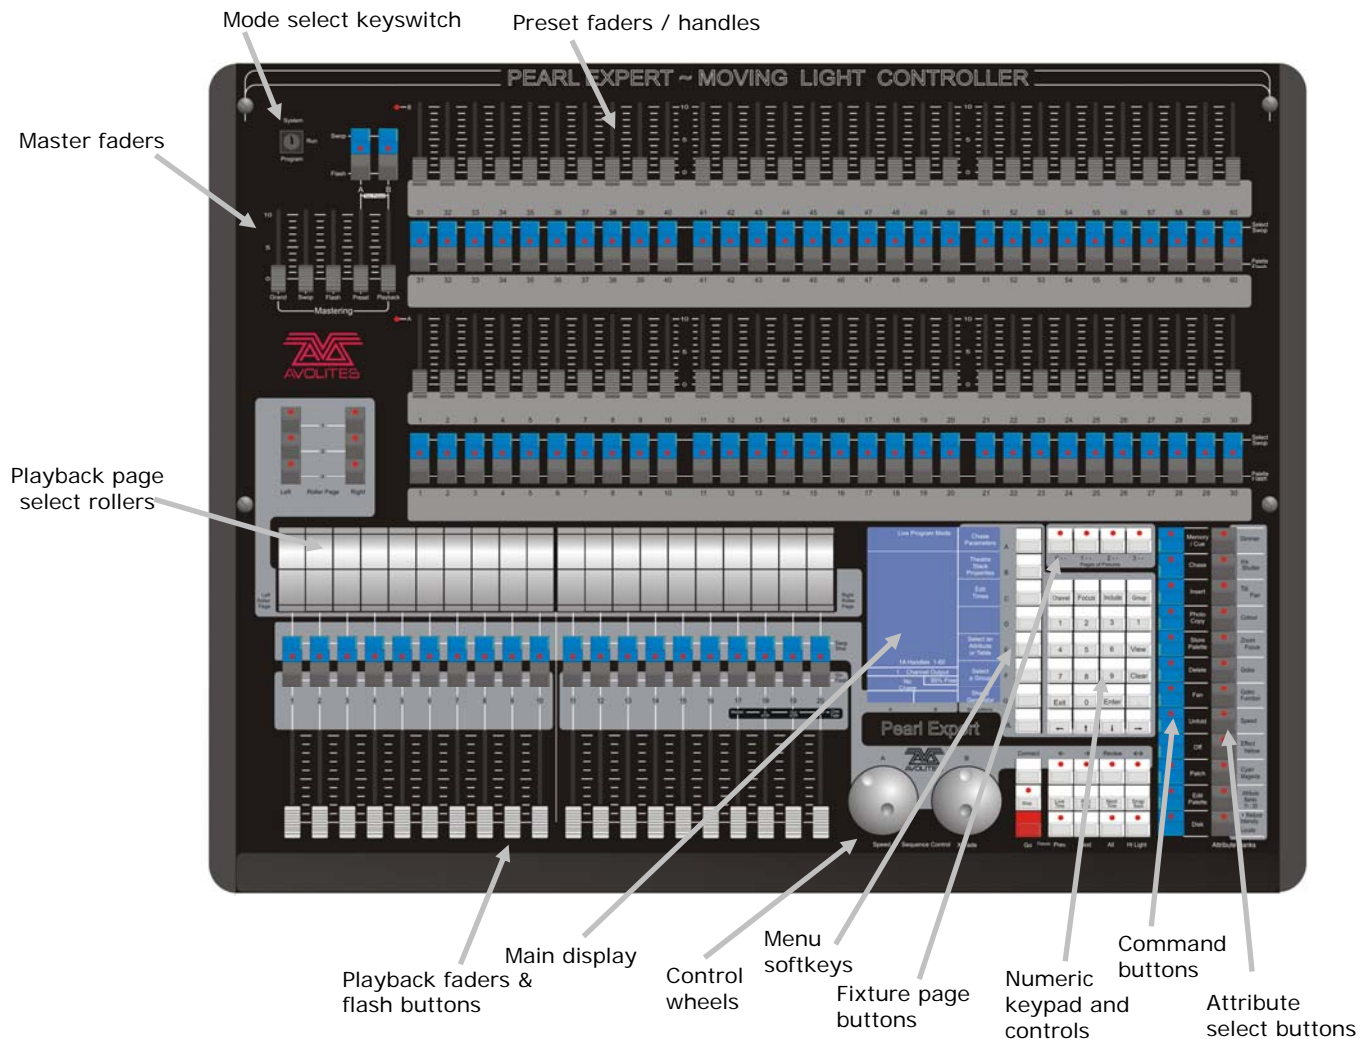

- The **Preset Faders** control individual dimmer channels and fixture intensities. The 2 buttons below the faders select and flash fixtures. Each fader and buttons is called a "Handle".
- The **Mode select keyswitch** sets the operating mode of the console; Program for programming a show, Run for running the show and System for configuring the console.
- The split **Page select rollers** lets you select different pages of playbacks, and you can write the playback names on the rollers so you know what's in them.
- The **Master faders** control the overall output of the various parts of the console. You will normally have these set at Full.
- The **Playback faders** and flash buttons are used to play back memories you have programmed, when you are running a show.
- The **Main display** is the nerve centre of the console and shows you what is going on. The display can show various screens of information. Display contrast is set in the User settings menu, see page 189.


- The **Control wheels** are used to set control values on the fixtures, and to set chase speeds and fades.
- The **Menu softkeys** (labelled A – G) are used to select control options. The display next to the buttons shows what each one will do. The options for each key change depending on what the console is doing. Softkey commands are shown in the manual with square brackets like this: A [Chase Parameters]
- The **Numeric keypad** and other control buttons are used to enter values and change controls on the console.
- The **Fixture Page** buttons (above the keypad) select 4 pages for the Preset Faders.
- The blue **Command buttons** are used to carry out functions such as storing memories, copying, saving to disk, etc. These buttons have lights on to indicate when they are active.
- The **Attribute select buttons** are used to select which attributes of a fixture (e.g. colour, gobo, pan, focus) are going to be controlled using the Control wheels. The buttons have lights on to show you which attributes are active. The bottom (red) button is a "Locate Fixture" button which moves a fixture to a "home" position while programming.

### 1.2.4 View screens

The Pearl can display a wide range of different information screens on its inbuilt LCD and on the external VDU screen.

#### LCD views

- **Channel Output:** Press View then Softkey A. Shows the output of the selected attribute for each handle. You can change the attribute by pressing a different attribute button (Dimmer, tilt/pan etc). The display only shows the first 30 handles, press the current Pages Of Fixtures button to show 31-60.
- **Fixture attributes:** Press View then Softkey B. Shows which attributes of the currently selected fixture are allocated to wheel A and wheel B. The view will be blank if no fixtures are selected.
- **DMX Patch:** Press View then Softkey C. Shows which fixture each DMX output channel is patched to, the attribute of that fixture, and the actual DMX value being output on that channel. Use the arrow keys to show different pages of the patch.
- **Fixture Patch:** Press View then Softkey D. The top part of the display shows a list of handles with the fixtures patched to them.

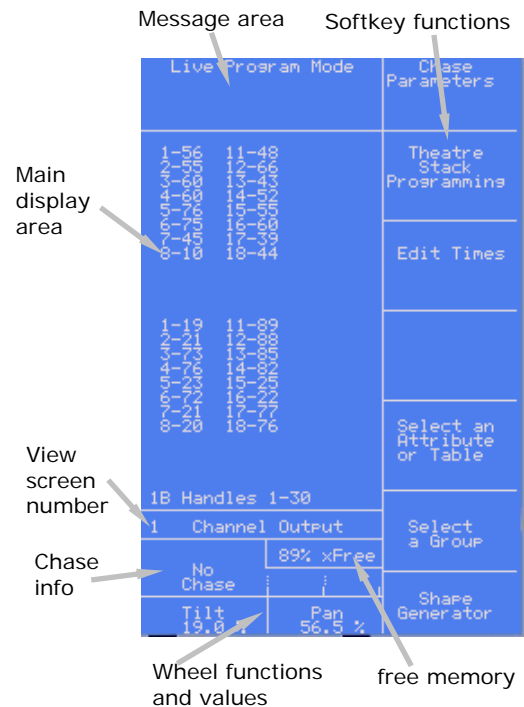


An arrow shows the active fixture; some fixture types will display further information (such as how to set the fixture's dip switches) in the bottom part of the display.

- Chase times: Press View then Connect. If a chase is running the display will show information about the steps in the current chase. If no chase is running the display will show "No chase".
- Playback status: Press View then 7 then Enter. The display shows which playbacks are programmed (with a star), which are active and whether they are running a memory or a chase.

### VDU screen views

On the Pearl Expert the Pearl's VDU screen appears as a window on the VDU desktop.

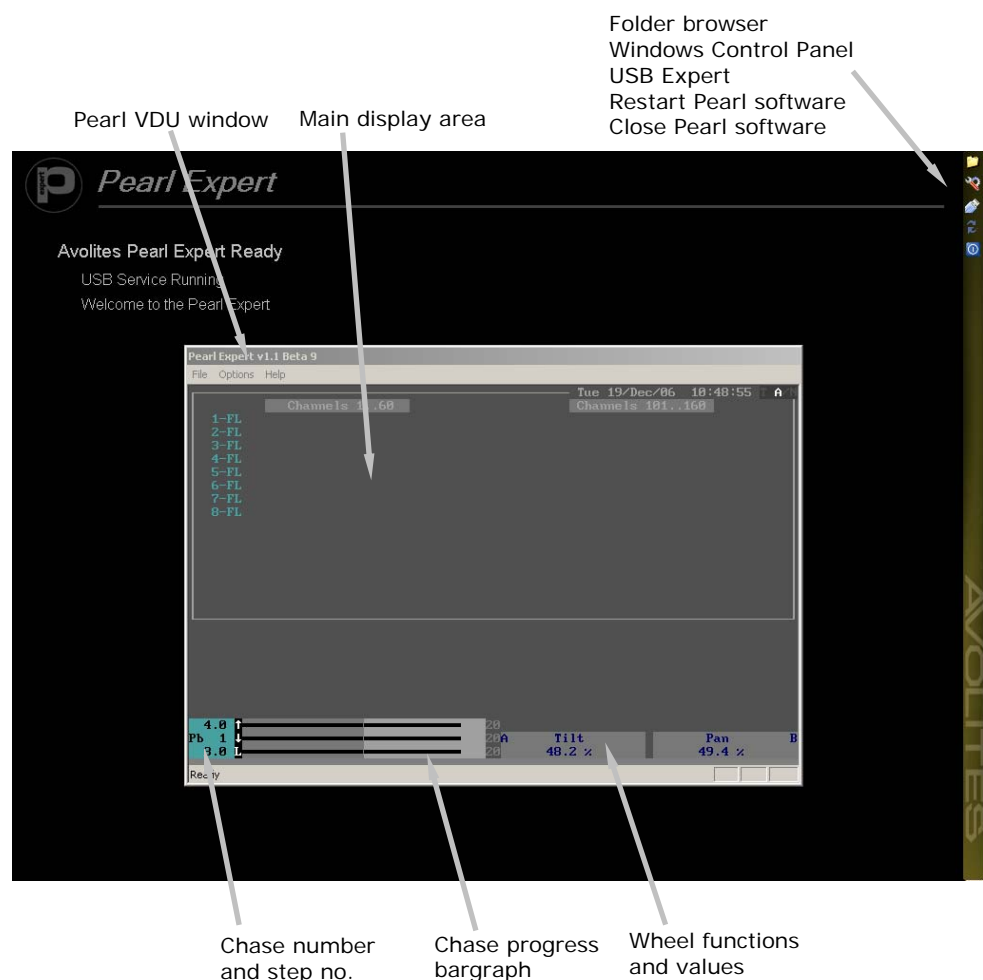

Press View then Softkey G to switch the menu to the VDU view menu. Press Softkey G again to switch back to the LCD view menu.

- Stage Intensities: Press View then Softkey A. Shows the intensity of each handle/fader (the numbers shown are handle numbers not DMX channel numbers)
- Stage fixtures: Press View then softkey B. Shows the output of each attribute for the different fixture types patched. Use the arrow keys to select which fixture type you are looking at (deselect all fixtures or the arrow keys will just change the fixture selection). At


the bottom of the main display window, the display shows which fixture type is selected (in blue).

- Fixtures and attributes: Press View then softkey C. Displays the selected attribute for each fixture. Press a different Attribute button to show other attributes.
- View programmer: Press View then softkey D. The display shows fixtures which are in the programmer (on the left) and the attributes which are in the programmer (on the right). The desk controls do not operate while you are viewing the programmer, you need to press Exit to return to normal.
- View Shapes: Press View then softkey E. The display shows information about active shapes.
- View Fixture Notes: Press View then softkey F, then select a patched fixture type from one of the softkeys. Fixture notes from the personality file (if it contains any) will be displayed on the VDU. Press Exit to get back to normal.

On the right of the desktop is a toolbar which has icons to open a folder/disk browser, open the Windows Control Panel, run USB Expert (for diagnostics) and to restart or close the Pearl application (only needed for software upgrades). See section 12.1 on page 193 for more information.

### 1.2.5 Visualiser

The console runs the Avolites Visualiser software internally. This shows a simulation of your lights rig on the VDU. This can be useful for programming when you can't use the actual rig. Press AVO and G to show the Visualiser window on the VDU. This manual does not describe how to use Visualiser, please refer to the Visualiser manual.

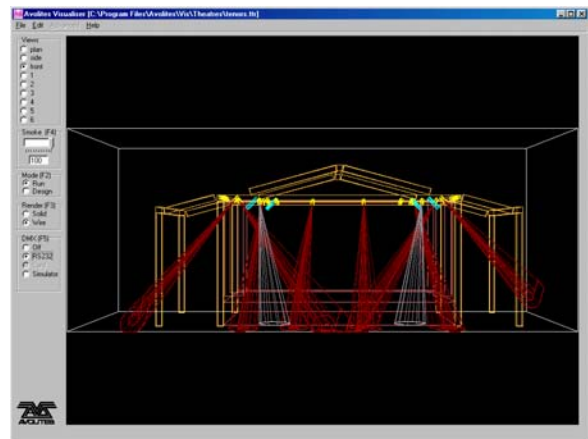



## CHAPTER TWO

## 2. Patching

*This chapter contains: Fixture handles; patching dimmers; patching moving light fixtures; checking the patching; changing the DMX address; moving a fixture to a different handle; deleting a patched fixture; patching options.*

Patching is the process where you tell the Pearl

- What type of lighting units you have connected to it
- What DMX addresses they are operating at
- Which DMX output line each unit is connected to (there are 4)
- Which "handles" (control sliders) you want to use to access them

You can either patch the DMX channels on your console to match your lighting rig, or set up the console first and then set the lighting rig to match.

The Pearl must be in Program mode before you can patch.

### 2.1 Create

#### 2.1.1 Fixture handles


The Pearl can control up to 240 intelligent fixtures or dimmer channels. To do this it has 4 pages of 60 control "handles". The handles are located in 2 rows of 30 along the top of the console. Each handle consists of:

- a slider, used to set the intensity of the fixture or dimmer patched to the handle,
- a "Swop" button which is used in program mode to select the fixture
- a "flash" button which is used to select Palettes and to flash the channel in Run mode.


The fixture page buttons are located just above the numeric keypad. Fixtures 1-30 are on page 0--, Fixtures 101-130 on page 1--, 201-230 on page 2— and 301-330 on page 3--. You can change the fixture page at any time.

The Pearl also allows you to allocate fixtures and dimmers to Groups, which can be useful if you usually select the same set of fixtures together. Groups are described in the next chapter.

Handles (Preset faders)

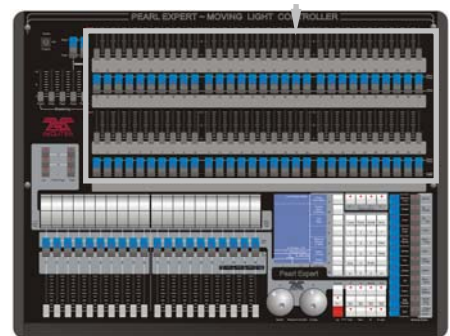

Pages of fixtures buttons

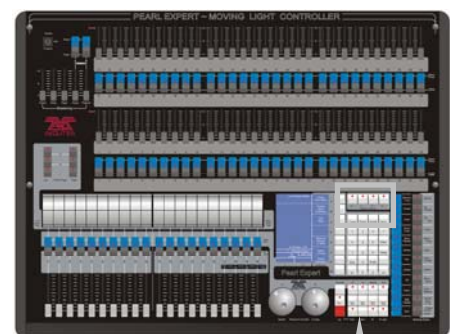

#### 2.1.2 Patching dimmers


Each dimmer channel is allocated to one handle. If you want to link



dimmers together, you can allocate several to the same handle.

- 1> Press Patch, then A [Dimmer]
- 2> On the top line of the display, the Pearl shows the DMX address it is going to patch at. You can change this by typing a new address on the numeric keypad. You can also use softkey E [Select a DMX line] to patch onto one of the other 3 DMX output lines.
- 3> To patch a single dimmer, press a handle Swop button. To patch a range of dimmers, hold down the Swop button for the first dimmer in the range, then press the last Swop button in the range. The range of dimmers will be patched to sequential DMX addresses.
- 4> To patch another dimmer to the same handle, enter the new DMX channel and press the Swop button again
- 5> Repeat from step 2 for other dimmers.

- The VDU screen will show the channels which have been patched.
- You can patch multiple dimmers onto the same handle by typing the DMX address of the next dimmer to be patched and pressing the Swop button again.
- When in Dimmer Patch mode you can set options for dimmer channels which you are going to patch. You can set the "Full on" level to less than 100% using option A, and select a different dimmer response curve using option B. To use the "User curve" setting you need to load in a user curve, see page 191. These settings affect all dimmer channels you patch afterwards, until you change the settings again. Channels you have already patched are not affected.

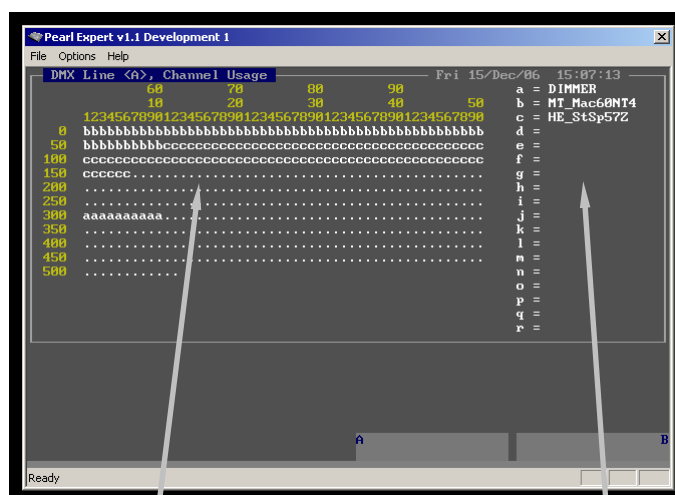

Grid showing usage of DMX channels

Devices patched

### 2.1.3 Patching moving light fixtures

Moving light fixtures are more complicated to patch than dimmers because they have more attributes to control, such as pan, tilt, colour etc., where a dimmer channel just has intensity. When you patch a fixture, you will see on the display that it occupies a block of DMX channels rather than just one.

The Pearl uses a "personality" system to control fixtures. There is a personality file in the Pearl for most types of fixture, which tells it what attributes are available and how to control them. If the Pearl does not have the personality for your fixture, you can download a wide range of personalities from the Avolites website onto a USB disk or floppy disk and load them that way. If you use fixtures often you can add them to the internal store. In the unlikely event that no personality exists for the fixture you are using, Avolites will create one for you. You can also



create the file yourself if you have some programming abilities. See chapter 12 on page 199 for details of how to find personalities.

**Note:** The Pearl holds all the personalities in an internal "cache" file. If the console memory gets totally wiped you might need to reload the file, how to do it is described on page 193. You can also use a Personality Disk in the disk drive.

- 
- 1> Press Patch, then B [Choose a Fixture].
  - 2> The Pearl will read the personality files, then display "Please select a manufacturer". Use F [More] and G [Back] to go up and down the list and find the correct manufacturer, then press the softkey next to the manufacturer to select it.
  - 3> Use F [More] and G [Back] to go up and down the list and find the correct fixture, then press the softkey next to the fixture to select it.
  - 4> The Pearl loads the fixture information. The display shows details of the fixture.
  - 5> The Pearl will ask "Use preset palettes?". Press A [Yes]. This loads a standard set of positions, colours and gobos into the Palette pages which can be useful when programming. If you say No now, you can't load them later.
  - 6> On the display, the Pearl shows the DMX address it is going to patch at. You can change this using the numeric keypad. You can also press E [Select a DMX line] to patch onto one of the other 3 DMX output lines.
  - 7> Press an unused handle Swop button to patch the fixture. The VDU screen will show the block of channels occupied by the fixture. If you want to use a different fixture page, select the new page first.
  - 8> Repeat from Step 7 to patch more of this type of fixture.
  - 9> Press A [Select another fixture] and repeat from Step 3 to patch a different type of fixture.
- 

- You can patch a range of fixtures by holding down the first and last Swop buttons of the range, the same as for dimmers.
- Unlike dimmers, you cannot patch more than one fixture onto a handle. If the handle is already used, the patch will fail. Use a different handle or delete the fixture already on the handle if you don't want it any more.
- Some fixtures can only be patched at certain DMX addresses. This is usually described in the fixture instruction manual. If this information is included in the fixture personality, the Pearl will not allow you to patch the fixture at an illegal address, and will offer the next valid address instead.
- If you are patching a fixture which uses a separate dimmer channel such as a VL5™, you can patch the dimmer channel onto the same handle as the moving light part of the fixture, so you can control it all together. This is called a *Pending dimmer*.

## 2.1.4 Checking the patching

Having set the Pearl, you need to ensure that your lighting rig is set up to match the Pearl by going round your rig to set the DMX addresses.

You can display the DMX settings on the Pearl like this.

- 1> Press the View button next to the numeric keys
- 2> Press D [Fixture Patch]
- 3> The display shows a list of the handles to which you have patched fixtures or dimmers, with the DMX line and address (e.g. A24 is address 24 on DMX line A).
- 4> The top handle on the list has an arrow next to it. The lower part of the display shows more information for this handle, including dip switch settings if the fixture personality includes this information.
- 5> Use the up-down cursor arrows to change the selected fixture. The left-right cursor arrows will show you another page of handles.
- 6> Repeat from Step 4 to view other fixtures.

Patch Dimmer or Fixture Press Exit to Quit		Dimmer
Handle Device	DMX	Choose a Fixture
00000005	L_MH-660	B65
00000006	L_MH-660	B01
00000007	L_MH-660	B97
00000008	L_MH-660	B113
10	<empty>	Select a DMX Line
11*	HE_Cyber2	B141
12	HE_Cyber2	B161
Handle 11	Fixture HE_Cyber2	
DMX	141.Line=B	
Dip Switch	1234 5678	Repatch Fixtures
Personality	0000 0010	
Address	bbbb b001	
9	Patch By Handle	Patch Utilities
No Chase	89% xFree	

- Press View, then C [DMX patch] to display a list of all DMX channels, what they are allocated to and the current output. The cursor arrows scroll through the list.
- Press View then a handle Swop button to display the settings for the fixture patched to that handle.
- You do not need to be in patch mode to view this information, you can do it at any time.

## 2.2 Edit

### 2.2.1 Changing the DMX address of a fixture

You can re-patch a fixture to a different DMX address or a different DMX output line. All programming is kept.

- 1> Press Patch (if you're not already in Patch mode).
- 2> Press E [Repatch Fixtures].
- 3> Use the numeric keypad to enter the new DMX address of the fixture. If you want to change the DMX output line, press E [Select a DMX line] and choose a new output line by pressing A B C or D.
- 4> Press the handle swop button for the fixture to patch that fixture at the new address.
- 5> Press Enter to confirm the change.
- 6> Repeat from step 3 if you want to change other fixtures.

- If the new DMX address was already used by another handle, the fixture or dimmer on that handle will be "parked". All programming for the handle is preserved, but you need to patch it to a new DMX address using the above procedure before you can

use it again. If you view the fixture patch as described above, the display will show "park".

### 2.2.2 Moving a fixture to a different handle

You can move a dimmer or fixture from one handle to another simply by entering the DMX channel to match the address of the fixture, then patching it again onto another handle. However, *all programming is lost* for that dimmer channel or fixture.

## 2.3 Delete

### 2.3.1 Deleting a patched fixture

You can delete a fixture or dimmer from a handle if you patched it accidentally or if you change your rig and want to use the handle for something else.

- 1> Press Patch (if you're not already in Patch mode).
- 2> Press the blue Delete button (the light will flash).
- 3> Press the Swop button of the handle you want to delete.
- 4> Press Enter to confirm.

- You can delete individual DMX channels from a handle by typing the channel number instead of pressing a Swop button. This is useful for deleting dimmer channels from handles which have multiple channels patched to them. Be careful not to delete individual channels out of fixtures using this function.

## 2.4 Advanced options


### 2.4.1 Patch Utilities

The Pearl allows several options to be set for each fixture or dimmer when it is being patched. The Patch Options menu is accessed by pressing F [Patch Utilities] while you are in patch mode. Set the options before you start programming, because memories will play back differently when the options are on.

The options are:

**A: Invert** - Allows you to invert an attribute of a fixture, so when you set zero the output will be full. You cannot invert some attributes.

- 1> Select the fixtures you want to invert and turn them on so you can see their output state
- 2> Select the attribute you

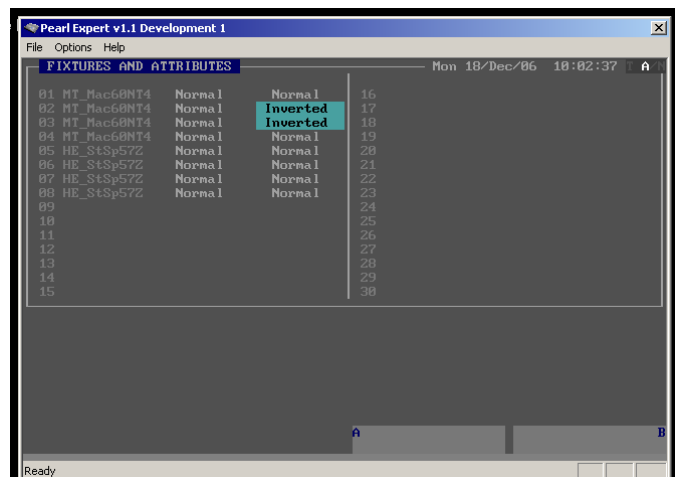

*want to invert by pressing the Attribute Select button (some can't be changed)*

- 3> *Press Softkey E or F to invert the attributes shown (the VDU screen shows the inversion settings)*
  - 4> *Repeat from 2 if you want to invert more attributes, or 1 if you want to change other fixtures.*
  - 5> *Press Exit to leave Invert mode as soon as you've finished, it is easy to accidentally invert fixtures if you leave this mode active*
- 

**B: Set/Reset Instant mode** - When the Pearl fades LTP (movement) channels between two memories, the LTP values normally change smoothly. You can set Instant mode to make the channel snap instantly to the new value.

---

- 1> *Select the fixtures you want to change*
  - 2> *Select the attribute you want to change (some can't be changed)*
  - 3> *Press Softkey E or F once to change the attributes shown (the VDU screen shows the settings)*
  - 4> *Repeat from 2 if you want to change more attributes, or 1 if you want to change other fixtures.*
  - 5> *Press Exit to leave Instant mode as soon as you've finished, it is easy to accidentally change fixtures if you leave this mode active*
- 

**C: Swap pan and tilt** - If you have some fixtures mounted sideways, it can be useful to swap the pan and tilt channels over.

---

- 1> *Press softkey C*
  - 2> *Press the Swap buttons of the fixtures you want to change*
  - 3> *Repeat from 2 to change other fixtures.*
- 

**D: Set DMX lines** - The Pearl has 4 DMX output lines, this option lets you set which connectors they come out of. You can output the same DMX line from more than one connector if you want to.

The console shows the current settings of the DMX outputs on the VDU screen. You need the VDU screen connected to set this option, as the settings are not shown on the on-board display. Use the cursor arrows to select the output you want to change. Press Softkeys A-D to select the DMX line you want to come out of this output.

Another way to do this is to use the "Setup DMX outputs" option on the VDU window "Options" menu to set up the output connectors. This option also allows you to configure DMX over Ethernet. See page 191 for how to use this function.

You can also use this option to set the highest DMX channel to transmit. This will speed up the DMX refresh rate if you are not using all 512 channels. (This option can also be set from the User settings menu).

**E: Find fixture** - This option lets you find "lost" fixtures (if you have set the DMX address and forgotten what it was, or a fixture has changed its address on its own). You need the VDU screen connected to use this option as the settings are not shown on the on-board display.

- 
- 1> *Using the cursor arrows, select the type of fixture & press enter*
  - 2> *Spin wheel A until the fixture responds with its "Locate Fixture" state (open white beam, central position). Use the cursor up and down arrows to change one channel at a time.*
  - 3> *You can change the DMX output line using the A B C D softkeys or directly enter a channel by pressing softkey G*
  - 4> *Read the DMX address from the VDU screen.*
  - 5> *Press Exit when you have finished.*
- 

**F: Set Default DMX lines** - This option sets the DMX line mappings back to the factory defaults, as shown in Chapter 1. The LCD display also shows how the DMX lines will be set. Press Softkey A to confirm the setting.



## CHAPTER THREE

## 3. Controlling dimmers and fixtures

*This chapter contains: Selecting fixtures and dimmers for control; changing attributes of the selected fixtures; using groups; selecting fixtures one at a time; the align and flip buttons; killing off a fixture; entering levels as numbers; the ML menu and tracking; viewing the output.*

When you are programming a show, and sometimes when you are running a show, you need to manually control the fixtures and dimmers to set the intensity, position, colour, etc. To do this you first select the fixtures you want to change using the Swop buttons, then you set the attributes of those fixtures using the Wheels and Attribute buttons.

### 3.1 Create

#### 3.1.1 Selecting fixtures and dimmers for control

To select the fixtures or dimmer channels that you want to control, you use the handle Swop buttons. You can select fixtures or dimmers individually, or several at once.

You can control dimmer channels and fixture intensity directly from the fader control of the handle, or select the channels as described below and use the Dimmer attribute.

- 1> *Press the handle Swop buttons for the fixtures you want. The LED in the Swop button comes on for selected fixtures (they are also shown in dark blue on the VDU screen)*
- 2> *To select a range of fixtures, hold down the Swop button for the first fixture then press the Swop button for the last fixture.*

Here are some other things to know:


- Press the red Locate button (bottom right corner) to position the selected fixtures in open white at a central position (dimmer channels go to 50%). These values are not loaded into the programmer - they won't be saved in a memory unless you modify the fixture. You can also use the old Locate Fixture option by pressing ML Menu then A.
- If you want to light up a fixture without moving its position, press ML Menu then B [Locate Fixture no Pan & Tilt].
- You can deselect a fixture by pressing the fixture select button again.
- Once you have changed any attribute, pressing a handle Swop button will deselect all fixtures and start the selection process again.
- You can select fixtures on another page by pressing one of the "Pages of Fixtures" buttons.

### 3.1.2 Changing attributes of the selected fixtures

“Attributes” are the functions of the fixture, like pan, tilt, colour, dimmer, etc. You select which attributes you want to modify using the buttons on the right edge of the console and set values using the wheels at the bottom of the Pearl. The attributes available depend on the fixture type. Dimmer channels only have a dimmer attribute. The Pearl can control up to 40 attributes per fixture.

Each attribute button controls two attributes, one on the left wheel and one on the right wheel.

- 1> *Press the button for the attribute to be changed*
- 2> *Turn the wheels to set the attribute. The display above the wheels shows which attributes are being controlled.*
- 3> *Repeat from 1 to change other attributes of the selected fixtures.*

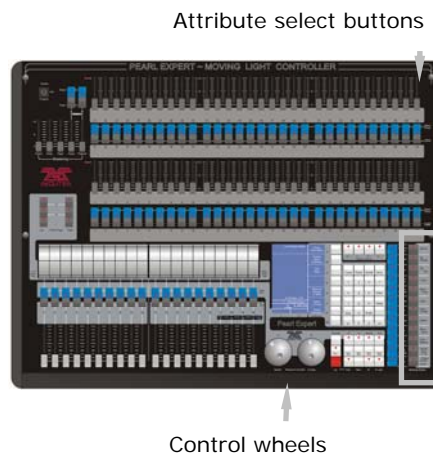

Some other things to know about attributes:

- The Attribute buttons let you select the first 20 attributes. Another 20 attributes are available by pressing the “Attribute Banks 11-20” button, to cater for the weird and wonderful DMX fixtures of the future. The light on the button stays on when you are using the top 20 attributes.
- If the display above the wheels does not show the attribute when you press the button, that attribute is not available on the selected fixtures.
- You can directly control the intensity of the fixture/dimmer using the fader of the handle.
- You can view the available attributes by pressing the View button then B [Fixture Attributes]. The display shows a list of available attributes for the fixture you’ve selected.
- The wheels operate in an “acceleration” mode. If you spin the wheel fast, the fixture changes in larger steps. If you move the wheel slowly, the fixture moves in its smallest increment. (This replaces the 16-bit mode found on older Pearl software). You can change the acceleration response of the wheels by holding down AVO and pressing 2 (see page 191 for details). You may want a different response for very fine adjustments, or to suit your wheel spinning style.
- Holding down AVO while turning a wheel puts the wheel into “hyper-drive” mode where one complete revolution takes the attribute from 0 to 100%.
- The display above the wheels either shows the output value (percentage and raw DMX value), or it can show Intelligent Attribute Display (for a colour wheel, the display would show “Open”, “Red”, “Orange” and so on as you turn the wheel). Hold down AVO and press 1 to enable or disable Intelligent Attribute display. The personality fixture must have Range Tables for this to work.



### 3.1.3 Selecting attributes from the softkeys

You can directly set attributes from the softkeys.

- 1> Press E [Select an attribute or table] from the main menu
- 2> Select an attribute type to set. If the attribute is highlighted, a list of possible settings will appear when you press it (for example, a list of possible colours)
- 3> Select the value you want by pressing a softkey.
- 4> Repeat from 1 to change other attributes of the selected fixtures.

- The Wheel A and B windows display the table of available values. You can also use the wheels to scroll through the settings.
- If the attribute type is not highlighted, there are no settings available. Pressing the softkey for that attribute will change the selected attribute button but not do anything else.
- Selecting a value from a list will select attribute banks 11-20. You'll need to press the Attribute Banks 11-20 button to get back to the normal attributes.



### 3.1.4 Using groups

You can create groups of fixtures or dimmer channels, to make selecting them faster. You can, for example, make a group for each type of fixture, or group by left / right stage, etc.

- 1> Select the fixtures/dimmers you want in the group (the order in which you select them will also be stored in the group)
- 2> Press ML Menu, then E [Record Group]
- 3> Type the group number you want to store it as, and press Enter
- 4> Repeat from 1 to store other groups

Other useful things to know about groups:

- To select all the fixtures/dimmers in a group, type the group number on the numeric keypad, then press A [Recall Group]. All other fixtures and dimmers are deselected.
- The order in which you select the fixtures takes effect when you use the last fixture – next fixture functions described in the next section, and when you use Shapes and Fan mode.


### 3.1.5 Stepping through selected fixtures one at a time

If you have selected a range of fixtures, or a group, the Pearl has functions to step through the selected fixtures one at a time. This can make it easier to program a range of fixtures because you don't have to select each one manually.

This mode uses the Prev/Next/Highlight buttons next to the wheels.

- 
- 1> *Select a range of fixtures or a group*
  - 2> *The Prev and Next buttons will select the fixtures in the range one at a time*
  - 3> *The HiLight button will highlight the output of the selected fixture so you can see it on stage (the button LED is lit when in Highlight mode)*
  - 4> *The All button reselects the whole range of fixtures.*
- 

- You can also use the left and right arrow keys to step through selected fixtures.
- The selected fixture from the range will light up, and the other fixtures will go out (if the "Highlight Enabled" option in the ML menu is turned on).

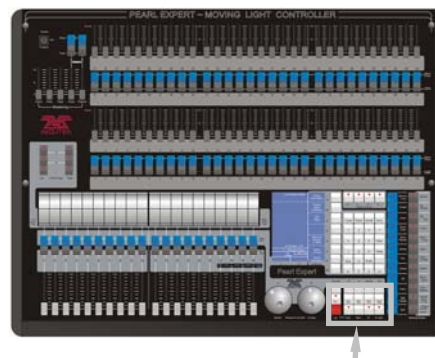

Sequence control buttons

### 3.1.6 The Align and Flip functions

The **Align** function allows you to copy an attribute from one fixture to others. This can be useful if you want to set a row of scans to have the same tilt position, or if you want to copy a colour from one fixture onto other fixtures.

- 
- 1> *Press an attribute button to select the attribute you want to align.*
  - 2> *Select the fixture to use as the reference*
  - 3> *Select the other fixtures you want to align to the first one*
  - 4> *Press ML Menu, then D [Align <attribute name>].*
  - 5> *The attributes will be copied to all the selected fixtures.*
- 

- You can align all attributes of the fixtures using Softkey C [Align Fixtures] (it doesn't matter which attribute is selected).
- If you use a group to select the fixtures, the one you selected first when you recorded the group will be the reference fixture.
- If Tracking mode is on (see page 133), aligning the Pan/Tilt attribute will cause all the fixtures to point at the same place on the stage rather than copying the actual Pan/Tilt values.

The **Flip** function is used with moving head fixtures. This type of fixture has two possible pan and tilt positions for each point on stage, and the Flip button alternates between them. This allows you more freedom to make movements without hitting the pan stop.

- 
- 1> *Select the fixtures to flip.*
  - 2> *Press ML Menu twice (option A should be Flip)*
  - 3> *Press A [Flip].*
- 

- The other functions on the ML menu are described at the end of the chapter.

### 3.1.7 "Killing off" a fixture or dimmer

Sometimes during a show you might want to "kill" a fixture or dimmer

from the stage output. This may happen if a camera is having problems with a light shining straight into it, if a lamp blows and you want to keep the rig symmetrical or if a fixture loses position.

The "Reduce intensity" button allows you to temporarily dim or turn off any fixture or dimmer. Programming is not affected and you can later restore it to normal operation. You can do this in program mode or run mode. You have to hold down the AVO button to access the function.

- 
- 1> Hold down the AVO button and press "Reduce Intensity (Locate)" (in the lower right corner).
  - 2> Put the fader for the fixture/dimmer channel to be reduced up to full (if it was already full, take it to zero then up to full).
  - 3> Reduce the fader to the intensity level you want.
  - 4> Repeat from 2 to reduce other fixtures.
  - 5> Press Reduce Intensity to finish.
- 

- To restore the fixture, do the above but leave the fader at full. The fixture will stay "reduced" until you restore it.
- Make sure you turn off Reduce Intensity when you have finished, otherwise you will end up reducing intensities when you don't want to, and wondering why none of your fixtures are coming on.
- To cancel all reductions, put all faders to zero, then press AVO and the Reduce Intensity button and put all faders to full, then press the button again to end.
- If the Swop buttons are in "mimic" mode (see page 179), they will show the programmed output of the channel, not the reduced output.

### 3.1.8 Entering intensity levels as numbers

You can set levels using the numeric keypad as you would on a theatrical lighting desk. If you are used to doing this, it can be faster when plotting dimmer levels for a scene than using the select buttons and the wheels.

- 
- 1> Press the Channel button
  - 2> Type the dimmer or fixture handle number (not the DMX channel) on the keypad.
  - 3> Press G [At %].
  - 4> Press 0 - 9 for the intensity (0=0%, 1=10%, 2=20%, 3.5=35%), or Softkey G again for 100%
  - 5> Press the decimal point key and another digit for more accurate control
  - 6> Press Channel again to get back to normal (the Exit button does not operate in this mode)
- 

Other things you can do by numeric entry:

- The softkey options are B: Blackout, D or G: set to 100%, E: up by 5%, F: down by 5%.
- You can select multiple dimmer handles (which you can then control using the wheels) using softkey F [Through]. Enter the first dimmer number, press [Through], then the last dimmer. For example 1 Through 10 would select dimmers 1 to 10.

- You can also set multiple dimmers to the same level using softkey F [Through]. Enter first dimmer number, [through], last dimmer, [At %], level. For example, 1 [Through] 10 [At%] 5 would set dimmers 1 to 10 to 50%.
- Softkey B [Select new fixture type] lets you tell the desk the type of fixture you are working with. It uses this when you select fixtures. Normally it is set to "desk channel" and will select fixtures starting from handle 1. If you set it to dimmer, it will only select dimmers, starting at the first dimmer patched, so selecting 1 "through" 10 would select the first 10 dimmers, wherever they are patched. You can set the option to any fixture type you have patched on the console.
- If you have more than one dimmer/fixture selected, Softkey C [Odd or Even], allows you to select the odd and even numbered channels. Softkey B selects Even channels and C selects Odd channels. Softkey A selects all channels again after you have used this option.
- Softkey E [Select Group] allows you to recall a group by entering the group number.

### 3.1.9 Controlling fixtures by entering values

You can also directly enter values for fixture attributes. This can be useful for programming palette values from a fixture data sheet.

- 
- 1> *Select the fixtures to be set by pressing the Swop buttons*
  - 2> *Select the attribute to be set using the Attribute buttons*
  - 3> *Type the value to set.*
  - 4> *Press Softkey E or F to set the A/B wheel attribute (displayed next to the softkey).*
  - 5> *Press G [Set input to 0-255 / %] to change the entry mode between 0-100 and 0-255.*
- 

- You can change the attributes to be set by pressing another Attribute button, but then you will need to enter the value again.
- You can also recall groups of fixtures or dimmers (type group number, then press A [Recall Group]).
- You can recall palette entries (type palette entry number, then press B [Recall Focus])

### 3.1.10 Fan mode

Fan mode automatically spreads out the values on a selected range of fixtures. If used on pan and tilt, the result is spreading out "rays" of light beams. The first and last fixtures of the range are affected most, and the central fixtures are affected least. The amount of fan can be set using the wheels.

As with shapes, the order in which you select the fixtures sets how the fan effect works. The fixtures you select first and last will be the ones which change most. If you use a group to select the fixtures, the order is that in which the fixtures in the group were selected when it was created.

The fan effect, while normally used on pan or tilt attributes, can be applied to any attribute.

- 
- 1> *Select the fixtures you want to fan*
  - 2> *Select the attribute to fan (pan/tilt, colour etc)*
  - 3> *Press Fan*
  - 4> *Set the amount of fan using the wheels*
  - 5> *The display shows which attribute is being controlled by each wheel*
  - 6> *Turn off Fan by pressing the Fan button again when you have finished*
- 

Fan mode needs to be used on at least 4 fixtures to give good effects. If you have an odd number of fixtures, the central fixture will not move in fan mode.

Press the Fan button again to leave Fan mode. Any effects you have set will remain in the programmer.

- It's fairly easy to accidentally leave Fan mode turned on and be very confused about why the wheels aren't working properly, so turn it off as soon as you have completed the effect.

---

## 3.2 Advanced options

### 3.2.1 The ML menu and Tracking

The "ML menu" (Moving Light menu) button allows access to some handy features for moving lights.

If you press the ML Menu button again you will get a second set of options.

**Option A** "Locate Fixture" positions selected fixtures at central position, with light coming out of them. The settings are not placed in the programmer, so you need to change the values if you want to save them. The "locate fixture" settings for each type of fixture are defined in the personality file. This is the same as pressing the red Locate button.

**Option B** "Locate Fixture no pan/tilt" turns on the selected fixtures but does not move them to a central position. This is useful if you don't want to disturb the positioning of fixtures but need to light them up.

**Option C and D** "Align Fixtures" and "Align <attributes>" are described in section 3.1.6 on page 130.

**Option E** "Record group" is used to group fixtures for easy selection as described in section 3.1.4 on page 129.

**Option F** allows you to turn the Pearl's 3D stage tracking mode off or on. When tracking mode is on, the pan and tilt controls set the position on the stage rather than absolute DMX values. You need to Define the Stage (see next page) before you can use Tracking.

**Option G** is used to run "macros" which are used to strike lamps or reset fixtures, etc. These features often require a sequence of levels to be sent on different control channels, which the Pearl can do automatically if the macro is defined in the personality file for the fixture.

The display will show a list of available macros for the fixtures which are currently selected. If no macros are available for those fixtures, the option will not do anything. The Personality File section on page 199 contains details.

**On the second page of the ML menu...** (press ML Menu again)

**Option A** "Flip" is described in section 3.1.6 on page 130.

**Option B** "Calculator" displays a screen on the VDU screen allowing you to convert numbers from decimal to hex or to binary. This is useful for working out dip switch settings. You need the VDU connected to use this function.

**Option C** "Remove selected fix. from programmer" allows you to remove from the programmer fixtures which are selected. This can be useful if you have changed a fixture you didn't want to include in a memory – just select the fixture, then use this option.

**Option D** "De-Select fixtures" deselects all fixtures but does not clear the programmer.

**Option E** "Highlight enabled" causes the selected fixture to light up when stepping through selected fixtures using the sequence buttons or arrow buttons; other fixtures in the selection go off. If this option is disabled, the fixtures do not change when they are selected or deselected.

**Option G** "Define the stage" lets you teach the Pearl how your lights are set up so that you can use its 3D tracking mode. This is described in the next section.

### 3.2.2 Training the console for Tracking mode

The Pearl can learn the layout of the stage and lights rig you are using. This enables it to calculate where it needs to point each light so that they all hit the same place on the stage. This is called Tracking mode and it is a very powerful feature of the Pearl.

You need to mark a square on the stage, ideally the sides of the square need to be half the depth of the stage but as long as it's square and you can point all the fixtures at the corners, the size is not that important.

- 
- 1> *Select all the fixtures you want to use for Tracking.*
  - 2> *Point all the fixtures so they light someone standing at the back left hand corner of the square (don't light a circle on the floor, or your lights will be pointing at peoples' feet all the time).*
  - 3> *Select option A "Top left". This stores the positions.*
  - 4> *Point them all so they light someone standing at the back right hand corner, then select option B "Top right".*
  - 5> *Repeat for the front corners of the stage using options C and D to store the positions.*
  - 6> *Press Enter to complete the process.*
  - 7> *The Pearl will go away and do lots of calculations. The top line of the LCD shows the progress. This can take several minutes.*
  - 8> *Press ML menu then Softkey F to enable Tracking mode (option shows [Tracking On (Off)] when tracking is enabled)*
- 

- You can recall a position you have already set, if you want to edit it, using F [Recall] then A B C or D to recall one of the positions.

- You need to make sure you are lighting a person rather than making a spot on the stage, because otherwise the beams will cross over at the wrong place. If you can't find a handy spare person, use a plastic cup or a light coloured item of clothing over the end of a mic stand at head height.
- If you are using moving head fixtures, you need to ensure when hanging them that the pan stop is on the side away from the stage, or the fixtures will not be able to track over the whole stage area. You also need to keep the Tilt value less than 50%, or the heads may "flip" when you track into some areas.
- Fixtures which have not been trained for Tracking will operate as normal when tracking mode is enabled.
- When Tracking mode is turned on, the VDU screen shows "T" in the top right hand corner.





---

## CHAPTER FOUR

---

### 4. Palettes

*This chapter contains: About palettes; shared and individual palettes; recalling a palette; storing a palette; palette masks.*

When programming a show you will find that you frequently use certain positions, colours, etc. Like an artist's palette, the Pearl lets you store these settings so you can recall them at the touch of a button rather than having to find them on the wheels every time. There are 10 pages of 20 palette entries. You can name the palette values so that you know what you're getting, and select them using the LCD display softkeys.

Also, when you patch a fixture, the Pearl loads 10 preset positions, 10 colours and 10 gobos into the palette for that fixture. This allows you to recall specific colours and gobos without having to find them using the wheels. The positions normally need to be edited before you can use them.

---

#### 4.1 Create

##### 4.1.1 Palette values stored as a reference

The most important thing about palettes is that when you use a palette value in a memory, the Pearl stores a reference to the palette, rather than the actual value. This means that if you program your memories using palettes, you can easily change all the positions just by reprogramming a few palette entries rather than having to reprogram all the memories. This is handy if you are touring a show and have to cope with different stages or truss heights every show.

##### 4.1.2 Shared and individual palettes

Palette entries can be shared or individual.

- **Shared:** If there is only one fixture in the programmer (you have only changed one fixture) when recording the palette entry, then you can use that palette entry for all fixtures of the same type. So you could save a value for "Red" on the first of your Wackylites™, and then use that value for any of your other Wackylites. This is a shared palette, useful for values which are the same for all the fixtures of one type, such as colour, gobo, prism etc. The pre-programmed palettes are all shared.
- **Individual:** If there is more than one fixture in the programmer when recording the palette entry, then the entry is unique for each fixture. So when you save an entry with pan/tilt positions for your 4 central Wackylites, those positions will only ever apply to those fixtures. You can later add values for other fixtures; fixtures which have no values saved will not change when the palette is recalled. This is an individual palette, useful for values which vary for each fixture, like pan, tilt and image focus.

##### 4.1.3 Which attributes are stored in palettes

A palette entry can store any or all attributes of a fixture, so you could store position, colour and gobo in the same palette entry. However, it's easier to operate the Pearl if you have some palettes for position, some

for colour, some for gobo and so on. There are 200 palettes available so you don't need to mix them up.

#### 4.1.4 Storing a palette

This is how you save a palette value:

- 1> *Press Clear to clear the programmer.*
- 2> *Select the fixtures for which you want to store palette values. Select one fixture only to record a shared palette entry.*
- 3> *Using the attribute buttons and wheels, set the attributes you want in the palette entry. You can store any or all attributes of a fixture in each palette entry. Only attributes you have changed will be recorded.*
- 4> *Press the attribute button for the attributes you want to store (the dimmer button will store all attributes). The buttons light up to show you which attributes are going to be recorded. It's best to save only one type of attribute (e.g. Tilt/Pan)*
- 5> *Press Store Palette, then type the palette number to be saved and press Enter. You can also press one of the Flash buttons under the preset faders to store the palette entry under that button*

- It's easiest to recall palettes from the LCD menu. If you are saving palettes to be recalled from the menu system, the palette numbering is as follows:

Page name	1 <sup>st</sup> Screen	2 <sup>nd</sup> screen	3 <sup>rd</sup> screen	4 <sup>th</sup> Screen
Colour	1-5	6-10	101-105	106-110
Gobos	11-15	16-20	111-115	116-120
Positions	21-25	26-30	121-125	126-130
Page 4	31-35	36-40	131-135	136-140
Page 5	41-45	46-50	141-145	146-150
Page 6	51-55	56-60	151-155	156-160
Page 7	61-65	66-70	161-165	166-170
Page 8	71-75	76-80	171-175	176-180
Page 9	81-85	86-90	181-185	186-190
Page 10	91-95	96-100	191-195	196-200


- If you normally use the grey Flash buttons to recall palettes, then Palettes 1-30 are found under faders 1-30, and palettes 121 to 150 are found under faders 31-60. You can also change the fixture page to access Palettes 31-60 / 151-180 (on page 1--), 61-90 / 181-210 (on page 2--) and 91-120 / 211-240 (on page 3--). You need to enable User settings 5 (Palette Pages) to make the extra pages work, otherwise Palettes 1-30 / 121-150 are used on all four fixture pages.

## 4.2 Playback

### 4.2.1 Recalling a palette value

To recall a palette value, this is what you do:

- 1> Select the fixtures to be changed. Shared palettes can be set to any fixture of the same type. Individual palettes will set individual values to each fixture.
- 2> Select the attributes you want to recall from the palette. The Dimmer attribute button will recall everything stored in the palette (the LEDs on the buttons show you which attributes are active)
- 3> Press the Focus button, then the palette page you want if the pages are displayed, then press the softkey for the palette entry you want (or Softkeys F and G go up and down the list). The selected attributes of the fixtures will be set to the palette values. The console will stay in "Apply palette" mode until you press Exit.

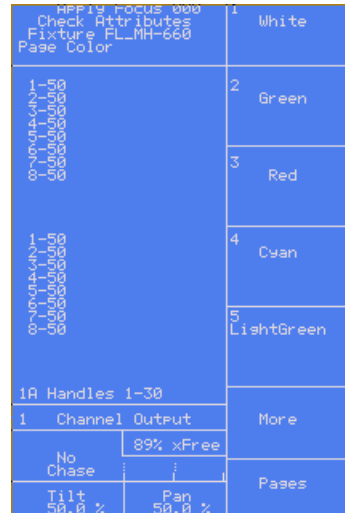

- It's easiest if you only save one type of attribute (such as pan/tilt) into each palette, then you can just leave the Dimmer attribute button selected when recalling the palette. If you store a mixture of attributes, you always have to make sure that the correct attributes are selected when recalling a palette, and this is an extra step which you could do without.
- You can also use the grey Palette/Flash buttons below the preset faders to apply palettes 1-30 (faders 1-30) or palettes 121-150 (faders 31-60). While you hold the button, the top line of the display shows the legend for the attribute (White, Green etc). When you release the button, the palette is applied. If you decide you don't want to apply the palette, press the Focus button before you release the grey Flash button.
- You can recall a palette by number, type the palette number on the keypad and press B [Recall palette].

#### 4.2.2 Palette pages

If Palette Pages are turned Off (User Settings 5), palettes 1-30 / 121-150 are available from the grey Palette/Flash buttons on every Fixture page. If the option is On, then the following table shows which palettes will be recalled.

Fixt. Page	presets 1-30	presets 31-60
0--	1-30	121-150
1--	11-15	151-180
2--	21-25	181-210
3--	31-35	211-240

#### 4.2.3 Setting a palette to all fixtures (Quick palette)

You can apply a palette to all patched fixtures. Ensure no fixtures are selected, press Focus, then the palette page you want. Press the softkey for the palette you want to apply. The palette will be applied to all fixtures.

Alternatively, hold down one of the grey Palette/Flash buttons. The

palette legend will be displayed in the top line of the screen. When you release the button, the palette will be applied to all fixtures. If you decide you don't want to apply the palette, press Focus before you release the palette button.

User Setting 6 (Hold AVO and press softkey C) must be enabled for Quick Palettes to work.

#### **4.2.4 Recalling only some attributes from a palette**

You can recall only selected attributes out of a palette entry using the Focus button. Press Focus, then select the attributes you want to recall on the Attribute buttons, then enter the palette number.

You can change the way the attributes are grouped when saving or recalling palette entries by selecting the attribute button to change, then holding AVO and pressing softkey C to enter the User Settings mode, then pressing C [Specify Attributes for Bank]. The buttons will light to show which attributes are saved when that button is selected. You can press the buttons to include or exclude attributes. Press Exit twice to finish. If you do change these settings for any reason you should change them back when you have finished to avoid confusion.

#### **4.2.5 Setting a palette to fixtures in a memory (Filtered palette)**

You can apply a palette to all fixtures in a memory, without having to select the fixtures. Press Focus, then the palette page you want; then hold down the softkey for the palette you want to apply, and press the Swop button for the memory. When you release the palette key, the palette will be applied to all fixtures in the memory.

---

### **4.3 Edit**

#### **4.3.1 Editing and deleting palettes**

- You can edit a palette entry by recalling it, making the changes you want, then saving the new information back on top of the existing palette entry. Anything you haven't changed will not be affected, values you have changed or added will be amended. You can also use the Edit Palette button, which automatically selects the fixtures used in the palette and performs a "Locate fixture" on them.
- You can remove attributes from palettes using the Off function, see page 155.
- You can delete a palette entry by pressing Delete, then Focus, then type the palette number to be deleted and press Enter. (You can also press Delete then the grey flash button for the palette entry to be removed)

#### **4.3.2 Naming a palette value or page**

You can enter a legend for each palette value and for each palette page. If you're recalling the palettes using the LCD menu this is useful so you know what you're getting.

Palette legends can be different for each fixture type; the Pearl will change the fixture type as you select different fixtures so that the legends will match the fixture.

Alternatively, if you are happy for palette legends to be the same for all fixtures, you can set the fixture type to "All". The Pearl will then leave the type set to "All" no matter what fixtures you select. Legends saved with the fixture type set to "All" will be shown whenever the "All" fixture type is selected.

You change the fixture type for which you are setting the legends using softkey G [Set fixture type].

- 
- 1> Hold down the AVO button and press G [Set Legend].
  - 2> Check the Fixture Type is correct (shown on the top line of the display). Press G [Set Fixture Type] and select a fixture type to set legends for a different fixture.
  - 3> Press B [Palette Page] to set a legend for a palette page, or C [Palette] to set a legend for a palette entry.
  - 4> Find the entry you want to name using F [More] and G [Back] to move through the pages
  - 5> Press the softkey for the entry you want to change.
  - 6> Type the legend using the external Qwerty keyboard and press Enter to save.
- 


You would typically use "All" if your palette legends are the same for all fixtures and you don't want to type individual palette legends in for all your fixtures; this allows you to set the legend only once.

### 4.3.3 Viewing the contents of a palette

Press View, then Focus, then enter a Palette number. (Or press View then a grey Palette/Flash button).

The palette contents will be displayed on the VDU screen. You can change the attributes displayed by pressing the Attribute buttons.

For an Individual palette (a position palette is shown in the picture) there will be a value for each fixture. For a Shared palette there will be one value for each type of fixture.

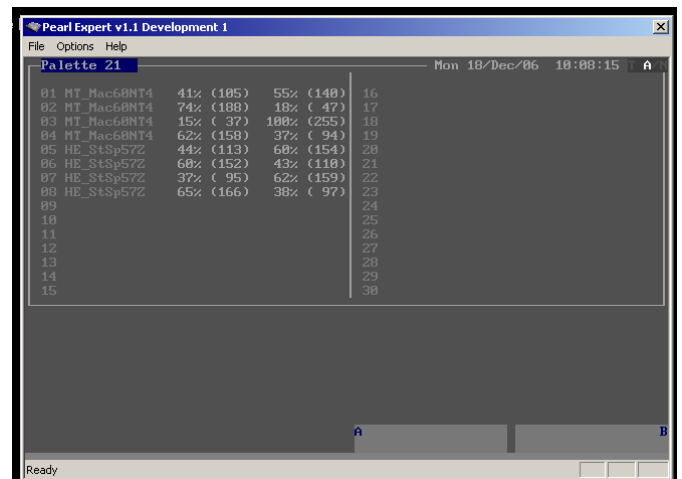

## 4.4 Timing

### 4.4.1 Recalling a palette with a fade time

You can recall a palette with a fade time by typing a time (in seconds) after you press Focus, before you recall the palette.

Recalling Palettes with a fade time is very effective when you are running a show. However, if you use a fade time the palette does not

get put in the programmer, so you should not use fades when you are programming.

A maximum of five timed palettes can be fading at any one time.

#### 4.4.2 Master fade time

You can set a master fade time so that all palettes will fade over that time.

- 
- 1> Press Focus.
  - 2> Press G [Options]. (If G shows [Pages] then press it to return to the main Palette menu, then G will show [Options]).
  - 3> Press A [Set Master Time]
  - 4> Type the time in seconds and press Enter to save.
- 

If you set a master fade time, no palettes will get put in the programmer. If you are using palettes in your programming, ensure the master fade time is set to zero.

If you have a master fade time set, and you also enter a fade time manually, the manual time will override the master time.

If you don't want palettes to get put in the programmer, which can be useful when you are running a show, you can set this time to 0.1 seconds which will still apply the palette instantly but will then allow it to be overridden by new memories being turned on.

---

## 4.5 Advanced options

### 4.5.1 Palette options

Press Focus then Softkey G [Options] to show the options menu. If a palette page is displayed rather than the main palette menu and softkey G is [Pages], press softkey G to get to the main palette menu.

**A: Master time** - Lets you set the time over which all palettes will be faded, so you don't have to keep entering a time. See page 142.

**B: Fixture Type** - Sets the fixture type for which the palette legends are displayed (as the palette entries may be different for different fixture types).

Normally the Pearl will change this automatically to match the fixtures you have selected, so you won't need to change it. If you select fixture type "All", then generic palette legends will be shown (legends saved for the "All" fixture type), and the Pearl will not change the fixture type.

To return the fixture type selection to automatic, select a fixture type other than "All".

## CHAPTER FIVE

## 5. Shapes

*This chapter contains: Selecting a shape; changing the size and speed of a shape; spreading a shape across multiple fixtures; editing shapes which are running.*

The Pearl, in common with other Avolites consoles, has a shape generator. This allows you to quickly create exciting light shows using lots of movement and changes, with the minimum of programming.

A shape is simply a sequence of values which can be applied to any attribute of a fixture. A "circle" shape, for example, applied to the pan and tilt attributes, would cause the fixture to move its beam around in a circular pattern. You can set the centre point of the circle, the size of the circle and the speed of the circle movement.

In addition to beam position shapes, there are a large number of other shapes available in the Pearl. The shapes are defined for a particular attribute such as colour, dimmer, focus and so on. Some shapes will not work with some fixtures; focus shapes, for example, can produce nice "focus pull" effects on fixtures which have DMX focusing, but will do nothing on fixtures which don't have focusing.


When you use a shape with more than one fixture, you can choose to either apply the shape identically to all the fixtures, or offset them so that the shape runs along the fixtures creating "wave" or "ballyhoo" type effects. This is called the *spread* of the shape.

### 5.1 Playback

#### 5.1.1 Selecting a shape

Selecting a shape is very similar to selecting a value from a palette. When you choose a shape, it will be applied to all selected fixtures.

- 1> *Select the fixtures the shape is to be applied to.*
- 2> *Press G [Shape Generator].*
- 3> *Press A [Playback a shape].*
- 4> *Press one of the A-E softkeys to apply a shape to the fixtures (or the F and G softkeys go up and down the list). The screen describes the shape for each button.*

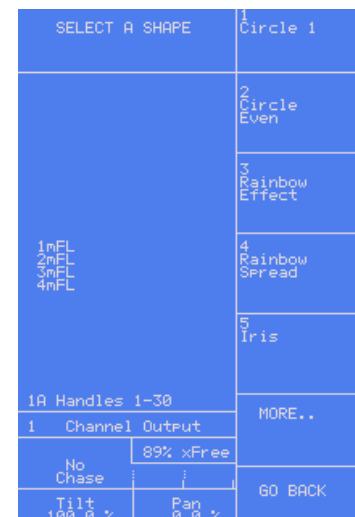

- Most shapes are based on the current settings of the fixture, so a circle would move around the current pan-tilt position of the fixture.
- If the shape description says "Even" or "Parallel", this describes the Spread of the shape. You can always change this later.
- You can change the base value of a shape (e.g. the centre of a circle) by changing the attributes using the wheels in the usual way. You can reduce the Size to zero (see next section) to help you see what the base value actually is.

- You can run more than one shape at a time by repeating the above procedure. You can run several shapes on one fixture.
- Press G [Shape Generator], then B [Edit a shape] to show what shapes are running.
- If you apply the same shape to two different groups of fixtures, the shape will appear twice on the shape list. You can edit the two shapes separately to give different directions, speeds etc (see later)
- You can remove shapes from fixtures which are selected by pressing G [Shape Generator], then E [Remove shapes from selected fixtures].
- Each shape is designed to work on a particular attribute; the list on the palette display shows you which attribute. Obviously if the fixtures don't have the attribute, you can't use that shape on those fixtures.

### 5.1.2 Changing the size and speed of a shape

It is easy to change the size and speed of a shape after it has first been selected.

- 
- 1> Press G [Shape Generator] (if you are not already in the shape generator menu).
  - 2> Press D [Set wheels to Size/Speed]
  - 3> The left hand wheel controls the Size. The right hand wheel controls the Speed. The display shows the values.
- 

Other things to know about size and speed of shapes:

- If you have more than one shape running, the controls operate on the most recent one. You can edit the parameters of any shape that's running using the Edit Shape function, see later in the chapter.
- The minimum size is zero. This will "hide" the shape, and the fixture will resume its previous settings. The shape is, however, still active.
- The minimum speed is Stop. This will freeze the shape and will offset the positioning of the fixture.

### 5.1.3 Spreading a shape across multiple fixtures

To get the maximum impact from a shape, apply it to several fixtures. The Pearl has some powerful "Spread" functions which determine how the shape is spread out across the fixtures.

This can vary from all fixtures moving identically (Coarse spread = NONE), fixtures working in pairs (Coarse spread = 1) through to all fixtures being distributed evenly through the shape, so the first fixture is just starting the shape as the last one finishes (Coarse spread = Even).

The "Fine" spread value introduces a smaller offset into the timing of the shape across each fixture.

- 
- 1> In Shape Generator menu, press C [Set wheels to Spread].
  - 2> The left hand wheel controls the Fine Spread. The right hand wheel controls the Coarse spread.
-



---

3> *Keep the Fine Spread at zero while you adjust the Coarse spread to the desired value, or the output can get confusing.*

---

- The order in which you selected the fixtures before assigning the shape determines how the shapes are applied; the “first” fixture is the one you select first and the “last” fixture is the one you select last.
- If you select the fixtures using a group, the order in which you selected the fixtures when recording the group is used.

#### 5.1.4 Relative and Absolute shapes

Some shapes will operate on the current settings of the fixture; a Circle shape, for example, will be centred around the current pan and tilt positions of the fixture. This is called a **relative** shape. If you change the pan and tilt of the fixture, the whole shape will be moved.

- All Position (pan/tilt) shapes, and other shapes with “User” or “Usr” in the name, are Relative shapes.

Other shapes always operate about a fixed value; a Rainbow shape, for example, is centred at the midpoint of the colour mix attributes so that a full range of colours is obtained. This is called an **absolute** shape. The current settings of the fixture are overridden by the shape.

- Non-position shapes (colour, gobo, focus, dimmer, iris) are usually Absolute shapes, unless they have “User” or “Usr” in the name. For example, “Magenta Even” is an absolute shape centred on 50% magenta, but “Magenta Even Usr” is a relative shape which will change around the current Magenta value of the fixture.

If you run a memory containing a shape, when you turn the memory off the shape will stop. The final state of the shape will be left as an offset to the fixture settings. Option E of the Playback Parameters (see next page) allows you to remove this offset when the shape stops and return the fixture to its programmed settings.

---

## 5.2 Edit

### 5.2.1 Editing shapes which are running

The Shape Generator menu allows you to edit shapes which are running using option B [Edit a shape]. This option lets you select which shape is the “Active shape” (the one you can control the speed, size and spread of with the wheels). You can’t edit shapes which are being played back from a memory using this option, only shapes in the programmer.

---

1> *If you are not in the Shape Generator menu press Softkey G from the main menu*

2> *Press B [Edit a shape]*

3> *Next to the softkeys is a list of shapes you can edit.*

4> *Press a softkey to make the shape active. Active shapes are highlighted. You can make more than one shape active.*

5> *Press Enter when you have finished*

6> *The speed, size and spread controls will now affect all the shapes you have set to be active.*

---

Any changes you make to a shape will affect all fixtures which are running that shape. If you applied the same shape several times to different fixtures, you can change each copy of the shape independently.

## 5.3 Advanced options

### 5.3.1 Shape options

The softkey options are:

**A [Playback a shape]** - Selects shapes, as previously described

**B [Edit a shape]** - Allows you to change speed, size and spread of running shapes as described above

**C [Set wheels to spread]** - Sets the wheels to change the Spread of the shape

**D [Set wheels to size/speed]** - Sets the wheels to change the size and speed of the shape.

**E [Remove shapes for selected fixtures]** - This option is the only way to turn off shapes for an individual fixture. Select the fixtures you want to remove shapes from, then select this option. All shapes will be removed from the selected fixtures.

**F [Change direction]** - The direction of the Active shape(s) will be reversed.

**G [Playback parameters]** - This option lets you set parameters for a shape stored in a playback / memory. When a memory fades in, you can determine whether the shape should start at full size and speed instantly, (Static) or whether the shape speed and/or size should fade in as well (Timed). If the memory mode is set to 0, the size and speed settings are ignored.

- 1> Press the swop button of the playback you want to set the parameters for
- 2> The Pearl displays the current settings in the main LCD window.
- 3> A [Toggle Size] sets the Size to Static or Timed
- 4> B [Toggle Speed] sets the Speed to Static or Timed
- 5> C [Toggle Merge] sets the Shape Merge option on or off (if you run two playbacks applying shapes to the same fixtures, this option allows you to merge the shapes or override previous shapes with the latest one)
- 6> D [Set memory to mode x] sets the current memory mode of the playback. To activate options A & B, the memory mode needs to

Alter Parameters for Playback 8	TOGGLE SIZE
SIZE = static	TOGGLE SPEED
SPEED = static	TOGGLE MERGE
SHAPE MERGE is OFF	SET MEMORY TO MODE 2
SHAPE OFFSET REMOVED	TOGGLE SHAPE OFFSET
Memory Mode=0	
1A Handles 1-60	
1 Channel Output	
No Chase	89% xFree

be Mode 1 or 2. This is described in the next chapter.

- 7> E [Toggle shape offset] allows you to remove the offset caused by a shape when it is stopped. When you turn off a memory with a shape, the fixtures will be offset by the last state of the shape. Setting this option to "Removed" causes the fixture to return to its programmed settings. Setting this option to "Remains" leaves the shape offset in place.

The following table explains how the Size/Speed Static and Timed options work, and how the memory mode affects these options.

Memory mode	Size option (softkey A)	Speed option (softkey B)
0	<b>Static:</b> Shape starts at recorded size when fader goes above trigger point <b>Timed:</b> as static	<b>Static:</b> Shape starts at recorded speed when fader goes above trigger point <b>Timed:</b> as static
1	<b>Static:</b> As mode 0 <b>Timed:</b> Shape size grows from zero to recorded size as LTP channels fade in (set by LTP fade time)	<b>Static:</b> As mode 0 <b>Timed:</b> Shape speed rises from zero to recorded speed as LTP channels fade in (set by LTP fade time)
2	<b>Static:</b> As mode 0 <b>Timed:</b> Shape size grows from zero to recorded size as fader position moves from 0 to 100%	<b>Static:</b> As mode 0 <b>Timed:</b> Shape speed rises from zero to recorded speed as fader position moves from 0 to 100%

### 5.3.2 Updating the shape file

Avolites release an updated shape file, you will need to load it into the Pearl. The shape file SG.DAT can be found on any personality disk, which you can download from the Avolites website (see page 199). Insert the floppy disk into the drive, turn the key to System, press G [Utilities] then E [Load shape file].



## CHAPTER SIX


## 6. Memories

*This chapter contains: HTP and LTP channels; how the Pearl works when programming; recording a memory; playing back a memory; changing playback pages; setting fade times for a memory; copying and deleting memories; the include function; editing memories; the "off" button; blind mode; recording the stage using snapshots; using shapes in memories.*

The Pearl has many functions for producing a complex light show, and the most fundamental part is a Memory, in which you can store a "look" you have created using your lights.

The Pearl has 600 playbacks, in 60 pages of 10, which can be used to store memories or chases (sequences of "looks"). Chases are covered in the next chapter. The playbacks are controlled using the sliders and flash buttons across the near edge of the console. The split roller is used to select the page of memories or chases – each group of 10 playback faders can be set to its own page.

The memory functions on the Pearl are very powerful; the first part of this section explains the basics of how the Pearl uses memories.

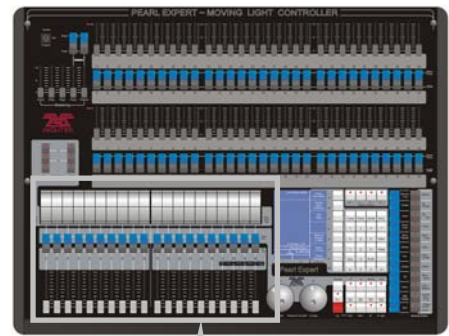

Playback faders & split roller

### 6.1 Create

#### 6.1.1 How the Pearl works when programming

The Pearl has a special internal memory called the "Programmer". Whenever you change an attribute of a fixture, the changes are stored in the Programmer. When you record a memory, the contents of the programmer are stored in the memory. Nothing else from the console output is stored.

The Pearl has two programming modes, "Record by Fixture" (the normal mode) and "Record by Channel". The mode can be changed using Softkey B when saving a memory, or from User Setting 1 (hold the AVO button and press C [User Settings]). The differences are:

- **Record by Fixture** - When you change any attribute of a fixture, all the other attributes are placed in the Programmer as well. You will get exactly the result you expected when you recall the memory, but you can't combine memories containing the same fixtures, because the new memory will just override the old one.
- **Record by Channel** - Only the attribute you change is placed in the programmer. This means you can save memories which only contain position information, then recall them with other memories to set colours, gobos etc. This is much more flexible but requires more programming initially, because you need several memories to get a result. It also lays you open to problems if you don't keep tabs on what you are doing. (This is known as *Tracking* mode on other consoles).

When you press **Clear**, all fixtures are cleared from the programmer. You should get into the habit of pressing Clear before you start to program a memory, or you can end up recording fixtures you don't want. You also need to press Clear when you finish programming, because any functions in the programmer will override playbacks.

Attributes which are in the programmer are shown with a "m" (modified by Preset), "w" (modified by Wheel) or "P" (modified by Palette) on the on-board output display. On the VDU screen, attributes in the programmer are displayed with a light blue (cyan) background.


Turning on a memory does *not* place the values from the memory in the programmer (but the Include function lets you do this, see page 154). The Locate Fixture function does not place any values in the programmer either.



### 6.1.2 Creating a memory

The Pearl has 60 pages of 10 memories. The rollers allow you to select 10 pages, and the buttons to the top left of the rollers allow 3 different roller "pages" for each roller.

- 1> Press Clear to clear the programmer. This ensures that you are starting with a clean slate.
- 2> Set up the stage effect using the fixtures. You can include shapes in a memory. Remember that only the fixtures you have changed will be included in the memory.
- 3> Press Memory.
- 4> Empty memories will flash.
- 5> Press the Swop button of a flashing playback to record it. (Select a new page first if you want to use a different page).
- 6> Press Clear to clear the programmer. Repeat from 2 to program more memories

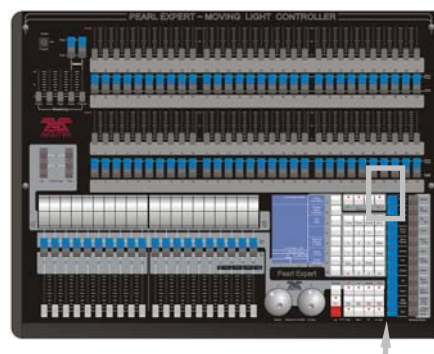

Memory/cue button

Other useful things to know about recording memories:

- You can record the whole output of the console (not just what's in the programmer) by pressing A [Record Stage]. The option will highlight when Record stage mode is active.
- The roller has a segment above each playback fader to allow you to write on the name of the memory using the low-tech but reliable method of marker pen (use a strip of tape on the roller surface). You can then see at a glance what's in each memory.
- You can also type in a legend for the memory, which is shown on the VDU screen (this feature available from next software release). Hold AVO and press G [Set Legend], then the playback Swop button, then enter a name using the Qwerty keyboard. The text is shown on the VDU screen. Press Enter to store it, then Exit to finish.

- You can also label the current playback page this way, by pressing A [Current Page] instead of the playback Swop.
- If you aren't using a VDU screen, there is no point entering memory legends as you can't see them on the on-board display (You can however see Page legends and Palette legends). If you accidentally enter Set Legend mode without a VDU, you need to press Exit twice to get the console back to normal mode or it will appear to be dead.

### 6.1.3 Recording the stage using Snapshots

The Snapshot function allows you to instantly record the current output of the console for later use. This can be useful if you suddenly create an amazing effect on stage, but it's a mixture of things you have changed and things left over from the last memory.

When you take a Snapshot, any fixture which is lit up (has its dimmer channel on), and any active dimmer channels are stored. You can later retrieve the snapshots and copy them into memories.

The Pearl can store up to 50 snapshots. They are listed by time and date, so if you write down the time when you store one, you will be able to identify them later.

- 
- 1> *Hold down the AVO button and press D [Snapshot Menu]. The VDU screen shows "(x/50)" to tell you how many of the 50 snapshots are used.*
  - 2> *Press C [Take a snapshot of the stage] to record the output to a snapshot.*
  - 3> *Press A [Load a snapshot] to load a previous snapshot into the programmer. The VDU screen shows a list of stored snapshots. Use the cursor keys or type the number of the one you want on the numeric keypad, then press Enter. You can then save the snapshot to a memory as usual.*
  - 4> *Press B [Delete a snapshot] to delete a snapshot from the list. The VDU screen shows a list of snapshots, select the one you want as for the Load option above.*
- 

- You need to ensure that the Pearl's internal clock is set correctly if you are using Snapshots, or you will not be able to identify the snapshots afterwards. See page 193 for how to set the clock.

### 6.1.4 Using shapes in memories

As you would expect, any shapes you have set up will be saved as part of the memory.

If the base value of the shape is not in the programmer (e.g. the central pan/tilt position, for a circle), and the shape is a "User" type, then the memory will contain a "relative" shape. When you recall the memory, the shape will start based on the current position of the fixture. This allows you to create lots of different effects by layering a few different memories - one for the shape, one for the base position. You can either use "Record by channel" mode, and not set the position, or use the "Off" function to achieve this effect.


### 6.1.5 Viewing the programmer contents

You can view the contents of the programmer on the VDU screen by pressing View then G [VDU Views] (unless already in the VDU views

screen) then D [Programmer].

Down the left hand side of the window, a list of fixtures in the programmer are displayed. Select the fixture you want to view using the up and down arrow buttons.

In the right hand window, the attributes in the programmer for the selected fixture are shown. A "P" indicates that a palette is in the programmer rather than a DMX value set from the wheels.

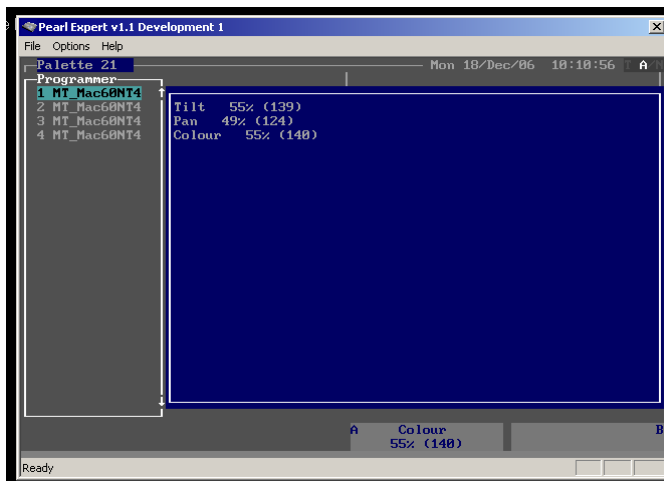

## 6.2 Playback

### 6.2.1 HTP and LTP channels

The Pearl can treat control channels in two ways:

- Dimmer or intensity channels work on the principle of "highest takes precedence" (HTP). If an HTP channel is turned on at different levels in several memories, the highest level will be output. When you fade a memory, the HTP channels fade out with it.
- Moving light channels work on the principle of "latest takes precedence" (LTP). The latest change takes over from any other values, so the most recent memory to be turned on is the one which is output. When you fade a memory, LTP channels do not normally fade (though you can make them if you want, except for channels set to Instant). They set their full values when the memory starts to fade in, and stay there until another value is set. (You can set the value this happens at using the User settings menu).

The fixture personality file tells the Pearl which channels of a fixture are HTP and which are LTP. Normally, only dimmer attributes are HTP, and everything else is LTP. If a fixture does not have an intensity control channel, the Gobo channel is defined as HTP to make sure the fixture blacks out when a memory is turned off.



### 6.2.2 Playing back a memory

To play back a memory, raise the fader. (Make sure there are no values in the programmer by pressing the Clear button, because anything in the programmer will override the playback).

- You can turn on more than one memory at once.
- All the HTP (intensity) channels in the memory will fade up with the fader. The LTP (movement) channels will be set as soon as the fader leaves the zero position. You can set the point at which this occurs on the User settings menu. (If you have changed the memory to be Mode 1 or 2, the LTP channels fade as well, except for channels set to be Instant).
- You can Flash the memory by pressing the grey flash button. You can Swop (solo) the memory by pressing the blue Swop button (all other active memories will turn off while the button is pressed). The Flash and Swop buttons only operate in Normal Run mode.
- In Run mode you can pre-position the LTP channels before raising the fader by pressing the Flash button with the Add/Flash Master at zero. This is useful if you want to avoid the fixture "swinging" into position when you turn the playback on.

### 6.2.3 Changing playback pages

You can change pages to select another 10 memories simply by rolling one of the Rollers above the appropriate faders to a new segment. You can select 3 different pages of roller using the Roller Page buttons giving 30 possible pages in all for each roller. You can set the page independently for each of the two groups of 10 playback faders.

- Playbacks which are turned on when you change page remain active. The VDU screen shows the name of the active memory in the bottom row, and the name of the memories from the new page in the top row.
- If you want to turn on a playback which is already on from a previous page, lower the fader to zero then raise it again. The memory from the previous page will turn off and the memory from the new page will turn on.
- You can label the current playback page by holding AVO and pressing G [Set Legend], then A [Current page], then entering a label using the Qwerty keyboard.

---

## 6.3 Edit

### 6.3.1 Editing a memory

You can edit any part of a memory you have already saved simply by making the changes and saving the new information on top of the memory.

- 
- 1> *Press Clear to empty the programmer.*
  - 2> *Turn on the memory you want to edit, so you can see what you are doing. Turn off all other memories to avoid confusion.*
  - 3> *Select the fixtures you want to change, and make the changes.*

- 4> *Press Memory.*
  - 5> *Press the Swop button for the memory you are editing.*
  - 6> *The Pearl will display "A memory already exists on playback!"*
  - 7> *Press A [Merge memory] to amend the existing memory. Unchanged information is not affected.*
- 

- If you are in "Record by fixture" mode, all attributes of any fixture you've changed will be saved in the memory with their current settings. If you only want to save certain attributes of a fixture, you need to use "Record by channel" mode (press softkey B after pressing Memory).
- You can overwrite the existing memory entirely using B [Replace memory]. This wipes the playback and saves the current programmer as a new memory.
- If the memory contains shapes, and you have selected some new shapes, the original shapes in the memory will be deleted (after a warning). To get round this you need to use Include on the original memory (see next section) to load the shapes into the programmer. Ensure that the playback fader for the memory is at zero (i.e. the shape is not active) when Including the memory.

### 6.3.2 The Include function

The Include function lets you load selected parts of a memory back into the programmer. (Normally, only manual changes to fixtures are put in the programmer). You can then use this to make a new memory. This is useful if you want to make a memory which is similar to one you already have.

When you use Include, you specify which attributes of which fixtures you want to load into the programmer. So, for example, if you have a memory which contains position, colour and gobo information for 8 fixtures, you can use the include function to load only the colour information for 4 of the fixtures into the programmer. You could then "Include" position information from another memory into the programmer, and build up a new memory using information from several existing memories.

- 1> *Select the fixtures from which you want to take settings.*
  - 2> *Press Include (above the numeric keypad).*
  - 3> *Select the Attributes you want to include. The Dimmer attribute includes all other attributes (the buttons light up to show which attributes will be included)*
  - 4> *Playbacks containing memories will be flashing*
  - 5> *Press the playback Swop button for the memory you want to include. Press Enter. The selected attributes of the selected fixtures will be loaded into the programmer.*
  - 6> *Repeat from 2 to include other attributes from the same fixtures, or repeat from 1 to include other fixtures.*
- 

- If you want to put the whole memory into the programmer, ensure no fixtures are selected and the Dimmer attribute is selected, then press Include, then the Playback Swop button for the memory to include. Everything will be placed in the programmer.
- If the memory contains shapes, all the shapes and all the fixtures

they are applied to will be loaded into the programmer, even if the fixtures and attributes are not selected. The shapes can then be edited, see page 145.

- You can Include a Theatre Stack step to the programmer by entering the step number you want to include and then pressing E [Theatre Stack Step]. If you don't enter a step number, the current step is included.
- You can edit the way the Attributes are grouped (e.g. the colour function always selects the Yellow / Magenta / Cyan functions too). This is called the "Focus Mask". Select the attribute button to change, then hold AVO and press C [User Settings] to enter the User Settings mode, then press C [Specify Attributes for Bank]. The buttons will light to show which attributes are grouped. Press the buttons to include or exclude attributes. Press Exit twice to finish.

### 6.3.3 The "Off" button

The "Off" button allows you to remove an attribute which has been stored in a memory, as if you never recorded it.

For example, suppose you recorded a memory which had scans at a certain position, with the colour set to green. If you later decide that you don't want a colour recorded at all in the memory, so that the previous colour setting of the scans will be used, you use the Off function to turn off the colour in the memory. You can also use the Off function to remove complete fixtures from a memory.

Using the Off button is not the same as recording an attribute at zero. It is as if you did not record the attribute at all.

- 
- 1> Turn on the memory you want to edit, so you can see what you are doing.
  - 2> Select the fixtures you want to change.
  - 3> Press the OFF button (one of the blue command buttons) to display the Off menu.
  - 4> To switch off all attributes of the selected fixtures, press Softkey A (this will remove the fixtures from the memory).
  - 5> To switch off selected attributes, press the appropriate attribute button, then use Softkey B and C to set each attribute to Off (the screen shows which attribute will be turned off for each button)
  - 6> Repeat from 3 to turn off other attributes, or from 2 to turn off other fixtures.
  - 7> Press Memory.
  - 8> Press the Swap button for the memory you are editing to save the changes. Unchanged information is not affected.
- 


- Attributes which are Off are shown on the screen. (The stage output will not change as the output values remain at their last settings).
- Attributes or fixtures set to "Off" can be turned back on again by selecting them in the usual way and changing them using the wheels.
- You can also use this function to turn off fixtures or attributes in a palette entry. Use the procedure above, but instead of editing and recording a memory, edit and record a palette entry instead. See

page 140 for how to do this.

### 6.3.4 Viewing a memory

You can view the contents of a memory by pressing View then the swop button for the memory.

The main part of the display shows the attributes for each fixture stored in the memory. Choose which attribute you are looking at using the Attribute buttons. If a palette is stored in the memory, the palette name is shown rather than the value.

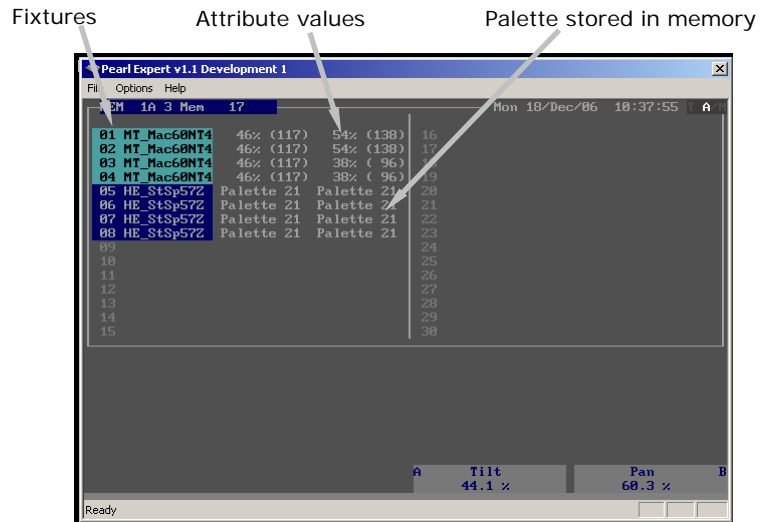

## 6.4 Copy

### 6.4.1 Copying a memory

Copying a memory is very simple on the Pearl. You can either create a linked copy (if you change a linked memory, all others linked to it will change too) or a "photocopy", which is a completely new and independent copy of the memory.

To create a linked copy:

- 1> Hold down the Flash button of the playback you want to copy.
- 2> If you want to copy to a different page, move the Roller to the new page.
- 3> Press the Swop button of the playback where you want to store the copy. Release both buttons.

- To create an unlinked Photocopy, press the blue Photocopy button before pressing the playback Flash button
- If you have named the memory you copied, the linked memory will have the same name, as will a photocopied memory.

## 6.5 Delete

### 6.5.1 Deleting a memory

To delete a memory:

- 1> Press the Delete button.
- 2> Press the Swop button of the memory you want to delete.
- 3> Press the Swop button again to confirm the delete.

- If the deleted memory is linked to others, the linked memories are not affected.


## 6.6 Timing

### 6.6.1 Setting fade times for a memory

You can set a fade in and fade out time independently for every memory. The fades only affect HTP (intensity) channels. There is a separate LTP timer which allows you to set movement times. LTP channels which were set to "instant" during Patching (see page 123) ignore LTP fade times.

- 1> Press C [Edit Times].
- 2> Press the Swop button of the playback you want to set times for
- 3> Press Softkey C to set the fade in time, Softkey D to set the fade out time, or Softkey E to set the LTP fade time (Options A, B, and F have no effect on memories and are only used on chases)
- 4> Type the new time using the numeric keypad and press Enter to save it.
- 5> Softkey G sets the memory mode of the chase to 0, 1 or 2 (described below).
- 6> Press Enter to save the changes. If you press Exit, any times you have set will be abandoned.

The effect of the times is shown in the following picture.

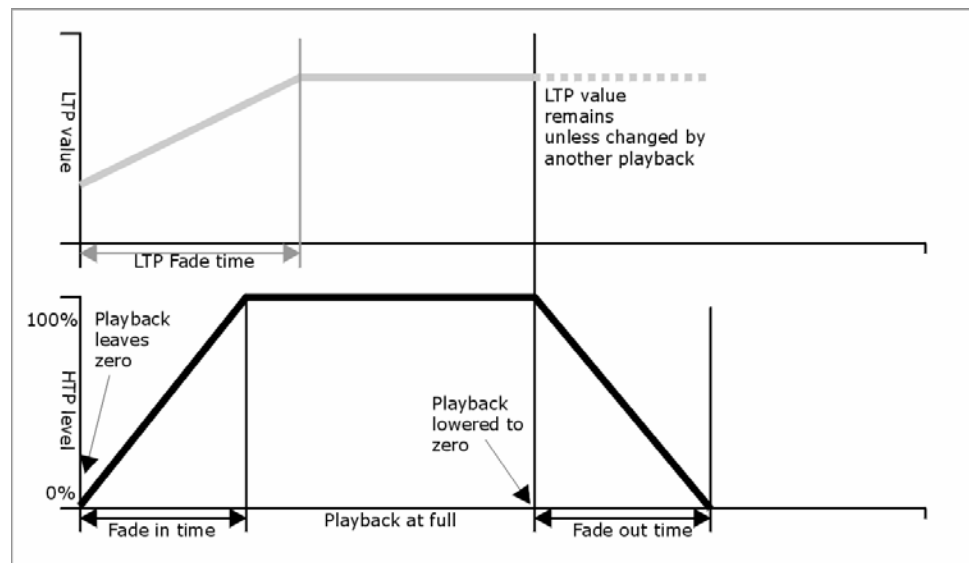

The times you enter are also affected by the memory mode:

- Mode 0 - No timing information is used. The settings on softkeys C, D and E are ignored. The HTP channels fade with the 0-100% position of the playback fader.
- Mode 1 - Channels fade as set by the HTP and LTP fade times (except Instant LTP channels). If you enter times for a Mode 0 memory, it will automatically change to Mode 1. If HTP times are

set to zero, the HTP levels will fade with the fader.

- Mode 2 - HTP channels fade as set by the HTP times, or with the fader if times are set to zero. LTP channels are controlled by the fader position (except Instant channels). Set the LTP fade time to 0 to use this mode.
- If the memory includes shapes, and you have set the shape size or speed to "timed" (see page 146), then the shape will change with the LTP channels. The changes will be timed for a Mode 1 memory and controlled by the fader position for a Mode 2 memory. This allows you to create a shape which gets bigger or faster as you push up the fader.

---

## 6.7 Advanced options

### 6.7.1 Recording in Blind mode

The Pearl has a useful function called "Blind mode", which allows you to program memories without altering the output of the console. The contents of the Programmer are saved on entering Blind mode, and restored when you leave Blind mode. Any playbacks turned on continue as normal, and you can make any changes you like without affecting the output.

This is useful if for some reason you need to edit a memory in the middle of a show without upsetting the current lighting state. Obviously, as you can't see the changes you are making, you will need to have a good idea of what values to set.

- 
- 1> *Hold down AVO and press F [Blind Mode].*
  - 2> *If you don't want to use the contents of the programmer, press Clear.*
  - 3> *Make changes to your fixtures as usual. Use the screen or the Graphics Tablet to help you set the right positions, colours etc.*
  - 4> *Save your changes as usual.*
  - 5> *To go back to normal, hold down AVO and press Softkey F again. The previous contents of the programmer will be restored (the contents of the programmer from Blind mode will be lost).*
- 

- If you have edited a playback which is already turned on, you will need to turn it off then on again to load the new version.

---

 CHAPTER SEVEN
 

---

## 7. Chases

*This chapter contains: Programming a chase; running a chase; setting speed, crossfade and direction; manually controlling the chase steps; setting step times and unlinking; editing a chase using unfold; editing a chase which is running; copying chases; sound activation of chases; chase options.*

As well as being used to store static memories, the playback faders on the Pearl can also be used to store chases (sequences of static memories).

---

### 7.1 Create

#### 7.1.1 Programming a chase

To program a chase, you have to set up the lighting for each step of the chase, then save it. The contents of the programmer are recorded as a step.

You can either set all the fixtures and dimmers manually for each step, or you can use Include to load in the information from memories you have already recorded.

You cannot use an existing memory as a chase step just by turning it on. You need to use the Include button to load the memory into the programmer.

- 
- 1> *Press the Chase button.*
  - 2> *Press the Swop button of the playback where you want to store the chase.*
  - 3> *Set up the lighting for the first step, either manually or by using "Include" on existing memories.*
  - 4> *Press the Swop button of the playback or Enter to store the programmer contents as Step 1 of the chase.*
  - 5> *Press Clear (unless you want to re-use the contents of the programmer), then repeat from step 3.*
  - 6> *Press Chase to finish when you have stored all the steps you want.*
- 

- Press Clear when you have finished saving the chase, otherwise when you try to play it back the programmer will override the chase and you won't see the chase properly.
- The current step number is displayed in the prompt line.
- From the July 2004 software version, you can record shapes in a chase. If the same shape is saved in subsequent steps it will continue from step to step, if not it will stop at the end of the step time. (The Pearl considers the shape to be the same if you didn't press Clear after the previous step, and didn't change the speed, size or spread of the shape from the previous step; or if you Included the shape from the previous step and have not modified it)


- You can set a label for the chase by holding down AVO and pressing G [Set Legend], then pressing the Swop button for the chase, as with memories.
- There is no limit to the number of steps in a chase provided there is enough free memory in the Pearl.

## 7.2 Playback

### 7.2.1 Running a chase

To run a chase, raise the fader of the playback. (You can also use the Flash/Swop buttons if you are in Normal Run mode). The chase will start to run.

- The HTP (intensity) channels in the chase will be controlled by the fader. The other channels (LTP) will be set as soon as the fader moves above zero according to the LTP fade times programmed in the chase. You can set the point at which the LTP channels activate from the User settings menu.

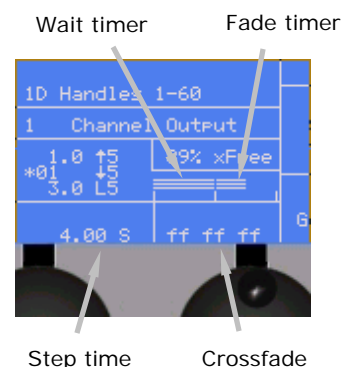

- The bottom part of the display shows the progress of the chase. The Wait and Fade times are represented by bar graphs. The top line represents the Fade in time; the middle line the Fade Out time and the bottom line the LTP fade.
- Press View then Connect to show details of the chase steps on the screen (this screen is described in the Timings section on page 165).
- When in Run mode, you can preload the first step of the chase by pressing the Flash button of the playback with the Add/Flash Master at zero.

There are many options you can set to determine the way the chase runs and these are described in the rest of this chapter.

### 7.2.2 Connecting a chase to the controls

When you run a chase, the playback controls are automatically connected to it. If you turn on a second chase, the controls are connected to the newer chase.

- You can choose which chase is connected to the controls by pressing the Connect button (next to the wheels), then the swop button for the chase you want to control.
- You can turn off the "chase autoconnect" option in the User Settings menu (hold down AVO and press C, then set Option 4) if you don't want the wheels to connect to a chase when you start it. You will have to use the Connect button to control the chase if you do this.

### 7.2.3 Setting speed, crossfade and direction

The wheels are normally assigned to control the Speed and Crossfade of the chase when you turn it on.



You can save a speed with the chase, so that every time you play it back, it runs at the same speed.

- 
- 1> Press A [*Chase Parameters*].
  - 2> Set the speed you want using the left hand wheel.
  - 3> Press A [*Save Speed*].
- 

- If you are in Run mode, you can also set the chase speed by tapping G [Tap twice to set speed] in time with the music.
- You can change the speed display to BPM (beats per minute) rather than seconds, from the User Settings menu (see page 193).
- If you are doing another operation using the wheels while running a chase (e.g. manually positioning some fixtures), you can make the wheels control speed and crossfade again by pressing the Connect button next to the wheels, then the swop button for the chase.
- You can set the chase back to its programmed speed by pressing Connect, then A [Clear temporary speed].

The chase direction is controlled by the ← (backwards), → (forwards) and ↔ (Bounce) buttons to the right of the wheels.

- You can save the current direction of the chase so it will always start in that direction; Press A [*Chase Parameters*], then B [*Save Direction*].

#### 7.2.4 Manually controlling the chase steps

You can take manual control over the connected chase by pressing the Stop button. If the chase is set to "Links Off", it will do this automatically - see the next section for details on Links.

- Press the Go button to restart playback of the chase
- The Snap Back button changes the chase direction the first time you press it; a second press will jump back a step (times and fades are ignored)
- To set the "next" step to be a particular step number, type the step number on the numeric keypad then press Connect.
- Turn either wheel to manually control the fades for this step. You can fade up or down until the fade completes; once a fade has completed it stays at 100%. Once the Fade In, Fade Out and LTP fades are all completed the chase will move on to the next step. The display above the wheel shows the fade up and fade down of the previous step as a percentage. This function can be disabled using the chase parameters menu.
- The ← and → buttons (next to the Go button) change the direction of the chase. If the chase is stopped, these buttons jump backwards and forwards a step.

## 7.2.5 Viewing chase steps

You can preview the output of a chase step on the display. The chase does not have to be connected or running.

- 1> Press View.
- 2> Press the Swop button of the chase to view.
- 3> Choose the attribute to view by pressing one of the Attribute buttons.
- 4> Use softkeys F and G to step through the chase, or type a new step number and press Enter.

- Values with a "P" indicate that a palette has been stored in the step; the number is the palette number.

You can view the steps of a connected chase by pressing View then Connect. See page 166.

Step Number 000.0		
1-057		
2-057		
3-057		
4-057		
5-057		
6-057	15P22	
7-057	16P22	
8-057	17P22	
	18P22	
8 CH 1C 2 STEP 1.0		Previous Step
1.0	89% xFree	
02		Next Step
Tilt	Pan	

## 7.3 Edit

### 7.3.1 Adding more steps to the end of a chase

You can add steps to the end of a chase by pressing Chase, then the Swop button of the chase, and saving more steps in the same way as you did when creating the chase. New steps you save will be added onto the end of the chase.

### 7.3.2 Editing a chase using Unfold

The Pearl has a powerful chase editing system. The Unfold button places each step of a chase on one of the playback faders as if each step was a memory, allowing you to turn on and edit each step individually.

The display (right) shows the step number, step legend, whether the step is Simple or Complex, and whether links are turned off (-) or on (down arrow).

- 1> Press Unfold (one of the blue command buttons), then the Swop button of the chase to be edited
- 2> The first 20 steps of the chase are loaded into playback faders 1-20. The display shows details about the steps.
- 3> Raise a playback fader to output the contents of that step (fade times will operate as programmed)

Chase 0 01 Unfolded		Record
Steps 1..5 of 5		
On View.		
Hit Unfold to Exit		
1	00000000	Edit Times
2	00000000	Insert
3	00000000	Delete
4	00000000	Previous 15 Steps
5	00000000	Next 15 Steps
11 Chase Unfold		
No Chase	89% xFree	

4> *Various Unfold options are available, the details are below.*

5> *Press Unfold again to get out of unfold mode.*

---

- To edit the contents of a step: Press Clear to empty the programmer, raise the fader to output the step, make the changes, press A [Record], then the Swop button (1-20) for the step number.
- To change the times for the step, press B [Edit Times], then the flash button for the step, then set the times (see Timing on the following page)
- To Insert a new step, set up the lights for the new step, press C [Insert], then the Swop button where you want to insert the new step. The new step will be allocated to the button you press with a step number half way between the steps either side, and all other steps will be shifted along one. (You cannot use the blue Insert button in Unfold mode).
- To Delete a step, press D [Delete] then the Swop button for the step you want to delete, followed by Enter.
- You can copy a step by holding the Flash button of the step to copy, then pressing the Swop button of the step to copy it to.
- You can renumber the chase to whole numbers by pressing C [Insert], A [Renumber], then Enter to confirm.
- If the chase has more than 20 steps, you can swap to the next 20 steps using softkey F, or the previous 20 steps using softkey E.
- G [Shape Generator] allows you to insert and edit shapes in the chase steps.

### 7.3.3 Editing a chase which is running

You can also edit chase steps while you are running the chase, without using Unfold. Make sure the step you are editing is not in the middle of a fade, or you might get unexpected results next time you run the chase.

---

1> *Start the chase by raising the fader. (if Links are On, press the Stop button to pause the chase)*

2> *Keep pressing the Stop button to step on to the step you want, or type the step number you want, press Connect then Stop.*

3> *Press Clear to make sure the programmer is empty.*

4> *Make the changes that you want to the current step.*

5> *Press Rec. Step, then Enter, to save the changes to the step.*

6> *Press the Stop button to Pause the chase, then press Next or Prev to move through steps of the chase.*

---

- You can set individual times for each step using the Live Time button as follows:

---

1> *Stop the chase on the step you want to set, as above.*

2> *Press the Live Time button to set the times for the current step, or the Next Time button for the next step. The Live and Next step numbers are shown on the display.*

3> *Use softkeys A-G to set the times you want (see page 157 for*

*description of the times)*

- 4> Press Enter to save the settings, Exit to abandon them, or the ML Menu button to toggle the step mode between Simple/Complex (Simple = use the global timings).
  - 5> Press the Stop button to Pause the chase then press Next or Prev to move through steps of the chase. .
- 

- The Review button shows you the step you have just edited, including all the fades. When you press Review, the chase jumps back to the step before the one you are on, then runs the step you have edited to show you the overall result. The chase does not have to be stopped to use Review.
  - To insert a new step at the current point in the chase: Set up the lights how you want them for the new step, then press the blue Insert button, then press Enter. (If you want to insert a different step number, type it before pressing Enter). The Set Times menu is displayed. Change the times if you want to, then press Enter to insert the step.
- 

## **7.4 Copy**

### **7.4.1 Copying chases**

You can copy a chase exactly the same as a memory – hold down the Flash button of the chase you want to copy, then press the Swop button of the playback you want to copy it to. The copied chase will be linked to the original, and any changes made to either chase will affect both chases.

If you want an unlinked copy, press the Photocopy button before starting the copy.

---

## **7.5 Delete**

### **7.5.1 Deleting chases**

You can delete a chase exactly the same as a memory. Press the blue Delete button, then press the Swop button of the playback containing the chase. Press the swop button again to confirm the delete.

### **7.5.2 Deleting a step from a chase**

You can delete a step from the connected chase by pressing the blue Delete button, typing the step number to be deleted, pressing Enter then A [Yes].

You can also delete a step when a chase is Unfolded by pressing D [Delete] then the Swop button for the step you want to delete.

## 7.6 Timing

### 7.6.1 Speed and crossfade controlled by wheels

The speed and crossfade of the most recently turned on chase is controlled by the wheels. You can "connect" the wheels to a different chase by pressing the Connect button and then the Swop button of the chase you want to connect.

### 7.6.2 Setting global step or fade times and unlinking

You can set step times globally for the whole chase and individually for each step. You can also unlink the steps, either for the whole chase or for individual steps, so that the chase pauses and waits for you to press the Go button. This can be useful if you are using the console for theatrical lighting cues (although it's easier to use the dedicated theatrical mode for this).

To set the global times for a chase:

- 1> Press C [Edit Times], then the playback button for the chase.
- 2> Press Softkey A-F to select the time parameter to set (the times are described below).
- 3> Type the new time value using the numeric keypad and press Enter
- 4> Press G to set Link on or off for the whole chase. If link is on the chase runs automatically. If off, you run each step manually using the Go button (a chase like this is called a "stack").
- 5> Press Enter when you have finished. If you press Exit, any changes you have made will be lost.

The times are:

A [Wait In] - Delay before the fade in starts


B [Wait Out] - Delay before the fade out starts

C [Fade In] - Time to fade in

D [Fade Out] - Time to fade out

E [LTP Fade] - Time for the LTP (movement) channels to fade over

F [LTP Wait] - Delay before the LTP channels start to move

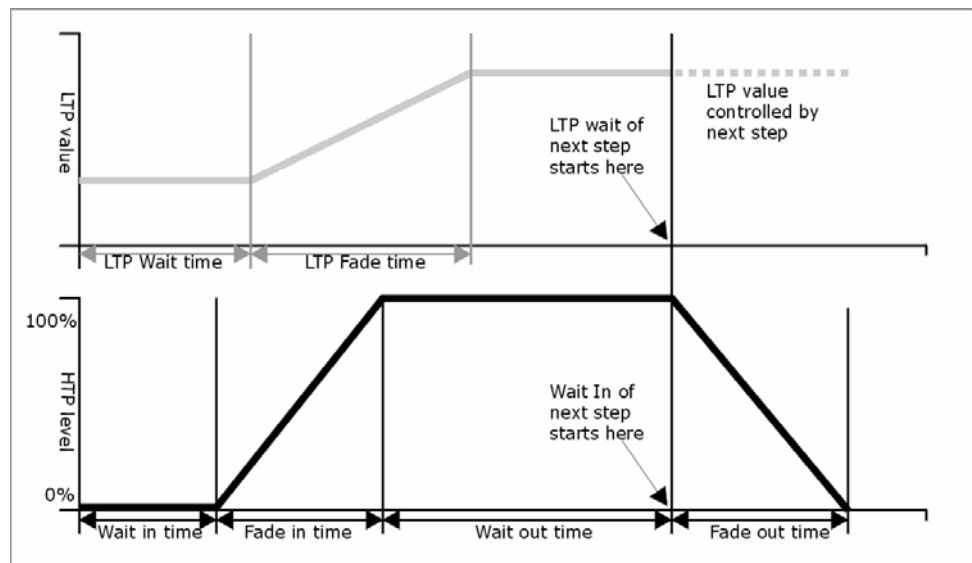

- You can enter minutes as part of the time - press the decimal point twice, a colon (:) will appear. e.g. to enter 20 mins 10.5 seconds, type 20.:10.5 (the display will show 20:10.5).

### 7.6.3 Setting times and links for individual steps

You can set the fade in and fade out times independently for each step/cue. Chase steps with individual times are called Complex steps, if they use the global settings they are called Simple steps. To set independent times it's easiest to use *Unfold*, but you can also stop the chase and use the *Live Time* button as described on page 163.

- 1> Press *Unfold* then the playback swop button for the chase.
- 2> Press *B* [*Edit Times*], then the playback swop button for the chase step you want to set
- 3> Press *Softkey A-F* to select the time parameter to set, and type the time value (as described above).
- 4> Press *G* to set *Link* on or off
- 5> Press *Enter* when you have finished. If you press *Exit*, any changes you have made will be lost.

- Any changes you make will automatically change the step to a Complex step.
- If you want to return the step to be a Simple step, using the global times and link settings, press the *ML Menu* button while in the *Edit Times* screen until that the display top line shows "<ML> Save as Simple" (you may have to press it twice), then press *Enter*. Any times you have set will be deleted.

### 7.6.4 Viewing timing information

You can view the timing settings of a connected chase by pressing *View* then *Connect*. (when *View* is set to LCD views; if the top line of the display shows "VDU views" when you press *View*, press *G* [*LCD views*])


For each step, the first line shows the step number, whether links are off or on for that step (Off="-", On=down arrow), and whether the step is Simple (S) or Complex (C).

The second line shows the Wait In, Wait Out and LTP Wait times for the step.

The third line shows the Fade In, Fade Out and LTP fade times for the step.

The active step is always at the top of the list,

Live Program Mode			Chase Parameters	
	In	Out	LTP	Theatre Stack Programming
Step 1.0, Link=-, C	0.0	0.0	0.0	Edit Times
Wait	1.0	1.0	1.0	
Fade				
Step 2.0, Link=+, S	0.0	0.0	0.0	Edit Times
Wait	1.0	1.0	1.0	
Fade				
Step 3.0, Link=+, S	0.0	0.0	0.0	Edit Times
Wait	1.0	1.0	1.0	
Fade				
Step 4.0, Link=+, S	0.0	0.0	0.0	Select an Attribute or Table
Wait	1.0	1.0	1.0	
Fade				
Step <None>				Select a Group
Wait				
Fade				
5 Chase Times				
2.0	↑4	89% xFree		Share Generator
01	↑4			
1.0	L4			
U60	D60	LTP=60		

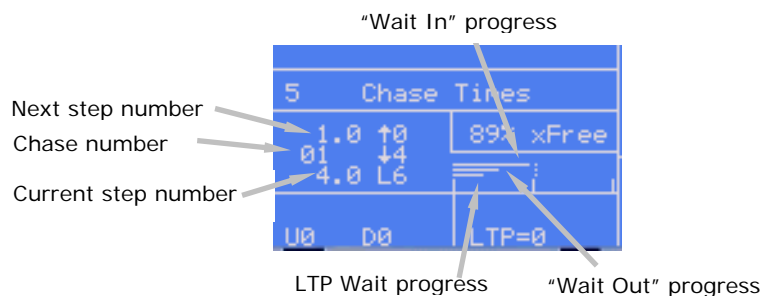


and the list moves up as the chase runs.

A similar display can be shown on the VDU screen by pressing View, then G [VDU views] then Connect.


At all times when a chase is running, the bottom of the screen shows bargraphs which show the progress of the wait and fade times.

The left hand section of the bargraphs shows the Wait timers. The right hand section shows the Fade timers.

To the left of the bargraphs are numbers which give the wait or fade progress as a countdown from 9 to 0.

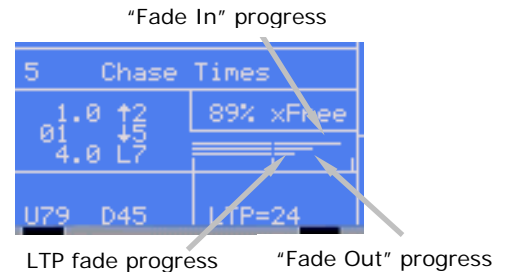

The bottom left of the VDU screen shows similar bargraphs when a chase is running. The progress figures are to the right of the bargraphs and are given as a 99 to 00 countdown. "N" is the next step and "L" is the live step.

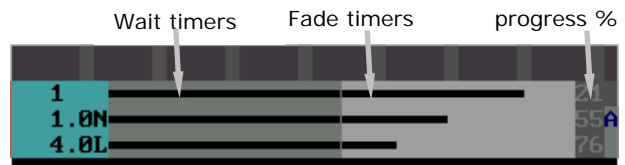

### 7.6.5 Sound activation of chases

Sound activation is not implemented in the current Pearl Expert software. The on-screen options remain in place but have no effect.

## 7.7 Advanced options

### 7.7.1 Chase options

Each chase has options which can be set to affect the way it runs. Press A [Chase Parameters]. You need to have a chase "connected", or the softkey will not do anything. The options you set are individual for each chase.

The options are:

**A [Save Speed]** - saves the current speed of the chase (set using the left hand wheel)

**B [Save Direction]** - save the direction of the chase (set using the direction / bounce buttons or options, see below)

**C [Normal / Random]** - turn on random mode (steps are executed in random order) - press to change the mode. Turn off random mode when editing a chase, or you won't know which step you are going to get next.

**D [Stop on final step]** - makes the chase stop on the final step. If the final step is a blackout, the chase will appear to turn itself off, so you can just press Go whenever you want to make it happen again

**E [Sound to light]** - as described above

**F [More...]** – Gives a second screen of options

**A [Fader start options]** - (press the button to cycle through the options):

*Fader will reload chase* (every time you turn on the chase it starts at step 1)

*Fader stops, go to start chase* (the chase will not run until you have pressed Go after you turn on the chase)

*Fader stops/starts chase* (every time you turn on the chase it continues from where it left off)

**B [Skip times options]** – Allows you to skip the first wait and/or fade of a chase. You often want to do this so the chase starts as soon as you raise the fader. (Press the button to cycle through options)...

*Skip first wait time* (The wait time is missed when the chase is first turned on)

*Skip first wait and fade time* (Both wait and fade times are missed when the chase is first turned on)

*Wait and Fade for all steps*

**C [Manual mode allowed / disallowed]** – If set to Allowed, lets you manually fade a paused step by turning the left hand wheel for the HTP channels and the right hand wheel for the LTP channels.

**D [Speed wheel allowed / disallowed]** - Lets you change the chase speed using the left hand wheel. You might want to turn this off if you don't want the console operator to be able to change chase speeds at playback time.

**E [Takeover after Go]** - If this option is Disabled, when you have a chase waiting for the Go button, and you turn on a memory, the LTP channels will change to those set in the memory. When you press the Go button, the LTP channels will remain set as in the memory and will not update to the settings in the chase step. When the option is enabled, the LTP channels will update to the settings in the chase step when you press Go.

For example, you are about to press Go to set some fixtures to Red. You turn on a memory, which sets the same fixtures to Blue. If the Takeover After Go option is enabled, then pressing Go will set the fixtures to Red, otherwise the fixtures will remain in Blue.



## CHAPTER EIGHT

## 8. Theatre stack

*This chapter contains: Setting theatre mode; theatre controls; plotting a cue; naming a cue; setting fade times; jumping to a cue; running a theatrical show; advanced options.*

Theatre mode allows you to use the Pearl like a standard theatrical console, where you program your show as a sequence of cues, then run the show just by pressing the Go button at the appropriate moment. Playback faders 17-20 become dedicated cue masters.

### 8.1 Create

#### 8.1.1 Setting theatre stack mode

In program mode, press B [Theatre stack programming]. The Pearl displays the theatre mode startup display. Press Enter to start.

- When theatre mode is enabled, you can't access playbacks 17-20 on any page; if you intend to use Theatre mode it is advisable not to program these playbacks. Any programs are kept and when you turn off Theatre mode you will be able to access them again. Chase Autoconnect mode is disabled when theatre mode is turned on; the theatre stack is always connected to the controls.
- To get out of the theatre menu, press G [Quit]. The Exit button is disabled in the theatre menu. This does not turn off theatre mode, but allows you to use the rest of the console.
- To turn off theatre mode completely, at the main menu (not the Theatre menu) press B [Theatre stack programming], then press D [Exit Theatre Programming].
- Theatre mode programming is not deleted when theatre mode is turned off.
- While theatre mode is enabled, the swop button for Playback 17 will flash when the playback fader is at zero.

#### 8.1.2 Theatre controls

While theatre mode is turned on, Playback faders 17-20 have special functions assigned to them as labelled on the panel.

Fader 17 is the Master fader, controlling the overall intensity of all lights.

Fader 18 controls the Fade In of the next step, when it is stopped.

Fader 19 controls the Fade Out of the previous step, when it is stopped. Faders 18 and 19 operate as crossfaders.

Fader 20 controls the LTP fade timer, when it is stopped.

The Swop and Flash buttons above 18, 19 and 20 are Stop and Go buttons for each of these functions.

### 8.1.3 Plotting a cue

Plotting a cue is very similar to saving a memory. You need to be in Program mode to record cues.

The Pearl refers to cues as "Steps".

- 
- 1> *If you are not already in "Theatre mode" press B [Theatre Stack Programming] at the main menu.*
  - 2> *Press Clear to make sure the programmer is empty.*
  - 3> *Set up the cue, either using the preset faders or typing in the levels for each channel (see page 131). You can also select fixtures and use the wheels and attribute buttons to set up the cue.*
  - 4> *If the current step number on the display is different to the one you want to use, type the step (cue) number*
  - 5> *Press D [Record], then B [Record Stage] to record the current output of the console, or D [Record programmer] to just record what you have changed in step 3.*
  - 6> *If there are no steps, the Pearl will ask for the number of the first step. Type 1 and press Enter.*
  - 7> *Press Clear.*
  - 8> *Repeat from 3 to plot more cues.*
- 

- The Pearl will automatically allocate whole numbered cue numbers as you save cues. You can number cues 1.1, 1.2 and so on, this allows you to insert up to 9 cues in between existing cues without changing the numbers.
- The top line of the display shows the Current Step number. This is the step (cue) which will be used for recording or editing. If you type in a step number this is shown as the Input Step.
- Softkey A [Record Mode] sets the console to Record By Fixture or Record by Channel. This is described on page 149.
- B [Record Stage] will record the whole output of the console, as you see it. This is useful if you want the cue to represent exactly what's on the stage. D [Record Programmer] will record only what you have changed since you last pressed Clear.
- You can use an existing memory to form a cue by either using Include (see page 154) or, if you only want dimmer levels, just turn the memory on and use the [Record Stage] option.
- Cues can include moving light positions and shapes. Use softkey B to set up shapes (see page 143), and use D [Record Programmer] in the record menu to record it in the cue (if you use B [Record Stage] the shape will not be recorded). The shape will stop when the next cue starts, unless it is also recorded (unchanged) in the next cue.
- The cues you have saved are displayed on the VDU screen. You can also display them on the LCD screen by pressing View then Connect (next to the wheels) .
- If you want to run a chase from a cue, you can use an Autoload to do this (see section 8.4)

### 8.1.4 Running a chase or memory with a cue (Autoload)

If you want to run a chase as part of a cue, or automatically turn on an existing memory, you can assign an Autoload to the step.

Autoloads can either turn on or turn off a playback. A Fade Up autoload will turn on a playback, a Fade Down autoload will turn it off.

- 
- 1> *Press A [Advanced].*
  - 2> *Press B [Assign a fade up autoload] or C [Assign a fade down autoload]*
  - 3> *Press the Swop button of the playback to be turned on (or off).*
- 

The playback will turn on when the cue runs and will remain turned on until a Fade Down autoload turns it off.

- Each cue can have only one autoload, either a fade up or a fade down.
- The memory to load can be from any page, but it will be loaded into the same playback number that it is saved in. If this playback is active on the current page, it will be turned off and replaced by the autoload memory.
- Autoloads are shown on the right hand side of the VDU screen. A fade up autoload has an up arrow, a fade down autoload has a down arrow.
- You can set a fade time for the autoload using D [Set autoload fade time]. Type the fade time then press Enter. Fade times only work to the nearest second.
- You can delete the autoload from the current cue by pressing E [Delete Autoload] then pressing Enter.

### 8.1.5 Naming a cue

Type the step number to be named, then press E [Set Legend]. Enter the legend on the QWERTY keyboard. While you are typing, the input is shown on the VDU screen.

The name of the live cue and the next cue is displayed in the cue list on the VDU screen.

---

## 8.2 Timing

### 8.2.1 Setting fade times for a cue

Each cue can be programmed to have its own Fade In and Fade Out times. You can also set a separate fade time for LTP (movement) channels in the cue, and you can set wait times to delay the start of the fade.

Press C [Set Times] to set the timing for the current step/cue. To set the times for a different cue, type the cue number before pressing C [Set Times]. to show the options.

You can also press the Live Time button (next to the wheels) to set the times for the current step.

- 
- 1> *Press Softkey A-F to select the time parameter to set (the times are described below).*

- 2> Type the new time value using the numeric keypad and press Enter
- 3> Press G to set Link on or off. If link is On the next cue will run automatically after the Wait Out time. If off, you run each step manually using the Go button.
- 4> Press Enter when you have finished. If you press Exit, any changes you have made will be lost.

The times are:

- A [Wait In] - Delay (after you press Go) before the fade in starts
- B [Wait Out] - Delay (after you press Go for the next cue) before this cue starts to fade out
- C [Fade In] - Time to fade in
- D [Fade Out] - Time to fade out
- E [LTP Fade] - Time for the LTP (movement) channels to fade over
- F [LTP Wait] - Delay before the LTP channels start to move

- Links are set to OFF by default, so that you press the Go button for each cue. If you set links to On for a cue, the next cue will run automatically after the "Wait Out" time.
- You can enter minutes as part of the time - press the decimal point twice, a colon (:) will appear. e.g. to enter 20 mins 10.5 seconds, type 20.:10.5 (the display will show 20:10.5).

### 8.2.2 Displaying the cue timings

Press View then Connect to display the cue timings on the LCD screen. When you are in theatre mode, the cue timings are permanently displayed on the VDU screen.

The list of cues automatically moves so that the current step is at the top.

For each step, the first line shows the step number, whether links are off or on for that step (Off="-", On=down arrow), and whether the step is Simple (S) or Complex (C) (theatre stack steps are always Complex.)

The second line shows the Wait In, Wait Out and LTP Wait times for the step.

The third line shows the Fade In, Fade Out and LTP fade times for the step.

Theatre Stack Programming			Advanced
Set Step 0001. Current Step=1.0			
	In	Out	LTP
Step	1.0.	Link=-,	C
Wait	0.0	0.0	0.0
Fade	1.0	1.0	1.0
Step	2.0.	Link=-,	C
Wait	0.0	0.0	0.0
Fade	1.0	1.0	1.0
Step	3.0.	Link=-,	C
Wait	0.0	0.0	0.0
Fade	1.0	1.0	1.0
Step	<None>		
Wait			
Fade			
Step	<None>		
Wait			
Fade			
5 Chase Times			
2.0	↑F	89%	xFree
12	↓F		
1.0	LF		
			Quit


## 8.3 Playback

### 8.3.1 Running a theatrical show

If you have just been editing, you may need to type 1 then F [Cut to Live] to set the console to cue 1. You should also turn the key to "Run" to make sure you can't accidentally change anything.

The LCD display shows the current (live) cue/step and the next cue/step numbers. To the right of this, bargraphs show the progress of the fades (see page 166 for more detail on the bargraphs).


The VDU screen shows a list of the cues with legends if you have entered them. The current cue is highlighted with a grey background and bright lettering. The next cue is highlighted in light blue.

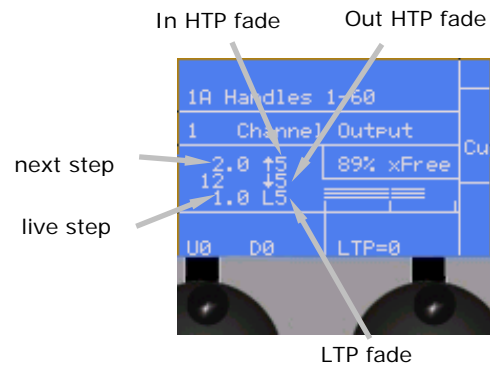

For automatic cues, you can simply press the Go button next to the wheels. The console will carry out the fade with the times you programmed.

If you want to manually control a fade, you can use the in, out and LTP faders (18, 19 and 20) or Go/Stop buttons to operate the cue. The display shows the percentage of fade left to go. When the fade is completed for that fader, the display shows "0". When Fade In, Fade Out and LTP all show "0", the console moves on to the next cue. (The picture above shows the in, out and LTP fade displays all at halfway, or "5")

Once the display shows "0" you cannot reverse the fade using the fader.

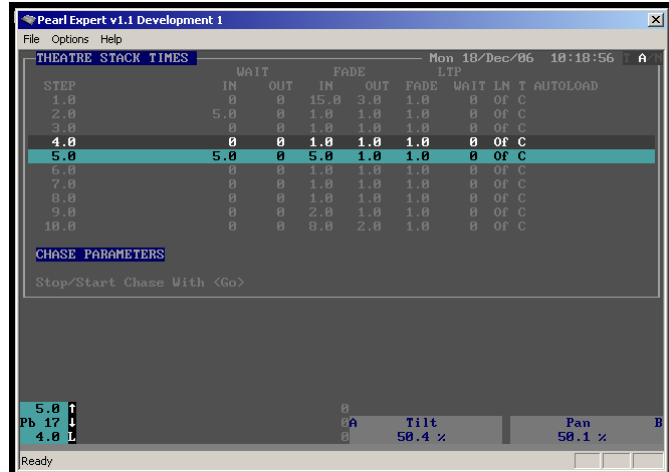

- You can jump to a step by typing the step number on the keypad then pressing Connect (next to the wheels). The cue is loaded but does not start until you press the Go button.
- When the Add/Flash master is at zero, the Theatre Stack Go function of the playback Flash buttons is disabled. When the Swop master is at zero, the Stop function of the blue playback swop buttons is disabled.

## 8.4 Edit

### 8.4.1 Editing a cue

You can edit a cue you have saved as follows:

- 
- 1> Press Clear.
  - 2> Ensure the Dimmer attribute is selected.
  - 3> Press Include (above the numeric keypad)
  - 4> Press E [Include Theatre Stack Step]
  - 5> Type the step number to be edited and press Enter.
  - 6> Make the changes you want using the preset faders or by entering new levels.
  - 7> Press D [Record], then D [Record programmer].
  - 8> Press Clear to clear the programmer. The cue will be updated.
- 

### 8.4.2 Jumping to a cue

You can change the cue being edited by typing the cue number then pressing Enter. If you want to output this cue, press F [Cut to Live] (fade times are ignored).

### 8.4.3 Inserting a cue

You can insert a cue between two existing cues by typing a cue number in between the two existing cues when saving the step.

### 8.4.4 Renumbering cues

Press A [Advanced] then A [Renumber], then F [Yes], to renumber all the steps to whole numbers.

### 8.4.5 Copying a cue

Press A [Advanced] then F [Copy current step to...], type the number for the new cue and press Enter.

---

## 8.5 Delete

### 8.5.1 Deleting a cue

Press the blue Delete button, then type the step number to be deleted and press Enter.

You can delete all steps by pressing A [Delete All Steps].

---

## 8.6 Advanced options

### 8.6.1 Advanced theatre options

Press A [Advanced] to display the Advanced theatre options menu.

The options are:

- A [Renumber]** – Renumbers all cues to whole numbers.
- B [Assign a fade up autoload]** – Assigns a memory or chase which will be automatically loaded and run when the fade-in for the cue starts.
- C [Assign a fade down autoload]** – Allows you to turn off a memory or chase when the cue starts.
- D [Set autoload fade time]** – Allows you to set a fade time for the autoload.
- E [Delete autoload]** – Deletes the autoload memory from the current cue.
- F [Copy current step to...]** – Allows you to copy the current step to a new step.





## CHAPTER NINE

## 9. Running the show

*This chapter contains: Run modes, channel mimics, master faders, manual control during a show*

### 9.1 Playback

#### 9.1.1 Run modes

When you finish programming, back up the console to disk before you start the show (see page 191). Then turn the key to Run mode to make sure you can't accidentally change anything.

When you are running a show, there are two modes available to you, normal Run mode, where you can turn on anything you have programmed but can't control anything manually, and Takeover run mode which allows you to take manual control if you want. The mode also affects how the Swop and Flash buttons on the console operate. There is also "2 preset mode" which you have to enable in the User Settings menu, see section 9.2.

You can select the mode by pressing A [Toggle mode]. The mode is shown on the top line of the display.

- **Normal Run mode:** the Flash and Swop buttons on the handles and playbacks work as flash buttons. The "Flash" button adds the function into anything else which is on. The "Swop" button turns on the function, but turns off everything else while the button is held down. The programmer is cleared and you can't manually control any LTP channels. You can control HTP channels using the preset faders.
- **Takeover run mode:** the Swop buttons on the handles allow you to select dimmers or fixtures for manual control. This lets you add to or change your programming in real time during the show. The Flash buttons on the handles recall palette values (but unless you are used to the Pearl, it is easier to use the dedicated Palette buttons). The faders still control the intensity of the dimmers and fixtures. The Flash and Swop buttons on the playbacks are disabled.

#### 9.1.2 Master faders

In the top left hand corner of the console are the Master Faders. These allow overall intensity control of the whole console.

- The Add/Flash and Swop masters control the intensity of the Flash and Swop buttons on the playbacks. This allows you to flash the playbacks to a certain level. It also allows you to disable the Flash buttons by setting the master at 0. (If you turn the Swop master to 0 you will get a blackout if you press a Swop button).
- The Preset Master controls the overall intensity of any channels turned on in the Preset faders.
- The Grand Master controls the intensity of all output from the console. Normally you would set this at full, and use it if you need to quickly fade out all the lights.

### 9.1.3 Manual control during a show (“Busking”)

If you have not had as much programming time as you would have liked, you might need to make up some additional effects during the show. Fortunately the Pearl is designed with this in mind and there are lots of features to spice up your life. You need to be in Takeover Run mode to do this stuff.

**Instant palettes:** Select some fixtures, press Focus, then select a palette option from the softkeys (or press a grey Flash/Palette button). When you recall a palette value instantly, it gets placed in the programmer. This means that the palette will override any memories you later turn on, until you press “Clear”.

**Fading palettes:** You can “fade” to a palette value by selecting the fixtures you want to change, typing the fade time (e.g. “2” for 2 seconds), pressing Focus, then using the softkey menus to recall the Palette you want (e.g. Green). The selected fixtures will change to Green over a 2 second period. If you fade to a palette value, the palette does not go into the programmer. This means that when you turn on a new memory, the fixtures will change to the new memory rather than being overridden by the palette.

**Palette master time:** You can set a Master Time option in the Palette Options so that all palettes will fade without you having to type in a time. Press Focus, then G [Options], then A [Master Time]. Type a new time and press Enter. If you want instant palettes that don’t get put in the programmer, you can set the master time to 0.1 seconds.

**Changing all fixtures in a memory:** You can apply a “quick palette” to all the fixtures in a memory (without having to select the fixtures) by pressing Focus, holding down the softkey for the palette you want, then pressing the Swop button of the memory. If you type a number after pressing Focus, the palette values will fade over the time you typed. This palette is not placed in the programmer, so the next LTP changes will overwrite it. (User Settings option 6 must be turned on for this to work)

**Nudge mode:** You can also change the position of fixtures by selecting them and using the pan and tilt wheels. This allows you to sweep selected fixtures around their programmed position by drawing with the pen, so you can alter the height of a chase or shape in real time.

**Tracking:** If you have trained the desk for Tracking, you can (with practice!) use multiple fixtures to follow someone on the stage or point to a soloist using the pan and tilt wheels.

**Manual control:** You can control any attribute of a fixture manually exactly like when you were programming. This requires care to look good; using the preset palettes is usually a better bet.

You cannot add new shapes in Run mode. You need to have some shapes saved in memories which you can then turn on.

## 9.2 Options

### 9.2.1 Two-preset mode

You can use the top and bottom preset faders to control dimmers patched on the 1-30 faders in a standard "two preset" mode, using the A and B Masters as preset masters. In this mode, fader 31 controls the same dimmer as fader 1, fader 32 controls the same as fader 2, and so on. This allows you to set up two different lighting states and fade between them using the A and B masters, as you would on a basic lighting desk.

To enable Two preset mode, set User Setting 1 to "2-preset". (Hold AVO and press Softkey C to get the user settings).

In this mode, anything patched to the top faders 31-60 is not accessible using the faders, however programmed memories and chases will play back as if in Normal Run mode. The Playback Master fader is used as the B Master in this mode and does not control Playback level. All playbacks will run at full level.

### 9.2.2 Temporarily locking the console

You can temporarily lock the console by typing a 4 digit code then pressing C [Lock Desk], then Enter. All the controls on the panel will be disabled. Enter the code again to unlock the console.

This is useful to prevent passers-by or sound engineers tampering with the console if you need to leave it unattended; it is not secure as you can simply reset or re-power the console to remove the lock.

### 9.2.3 Channel mimics

If you are in normal Run mode, the LEDs on each handle mimic the intensity of the fixture or dimmer controlled by that handle (i.e. they are lit if it is turned on).

If you are in Takeover Run mode (or Program mode), you can choose between "Mimic" mode, or "Fixture" mode where the LEDs show you which fixtures are selected for manual control.

You select the mode by holding down the Avo button and pressing Softkey A. The button shows "Preset LEDs = Fixtures" (or mimics) depending on the mode. You can also change this mode using the Graphics Tablet.



## CHAPTER TEN

## 10. Automated playback (script files)

*This chapter contains: Script files, using script files in Run mode.*

Script files are a powerful feature of the Pearl which allow you to record a show in real time using the playback faders, then play back the show automatically, synchronised to an external MIDI time code source, or using the Pearl's internal clock. This is very useful for repeated light shows such as at exhibitions or in fixed displays.

The script file is simply a list of instructions to the Pearl which specify actions at certain times. The easiest way to make a script file is to get the Pearl to record your actions as you do them, but you can also enter commands individually.

### 10.1 Create

#### 10.1.1 Recording Script files

Before you can create your script file, you need to program all the memories and chases you want to use.

To enter script file programming mode, turn the key to "System", then press D [Script file programming].

The procedure for programming a script file is as follows:

- 
- 1> Press A [Select timer source], then A [External timecode] (MIDI) or D [Internal timer].
  - 2> Press B [Record script file]. Start the timecode source if using MIDI. If using the internal timer, press A [Select timer source] then F [Start timer] to start it.
  - 3> Run the show as you want it by turning playbacks on and off. The Pearl records your actions (including fade times) as script file commands. You must move faders to maximum for the action to be recorded.
  - 4> Press F [Done] when finished.
- 

- By default the Pearl will record Script File 1. You can change this using option C [Select script file].
- Press D [Reset Timer] to set the timer back to zero. You can use this if you want the recording to start at zero; otherwise the timer runs before you are ready to start recording.
- You can use Time of Day as timecode by pressing C [Clock Timecode] from the select timer source menu. When recording for Time of Day playback, it's easiest to use Internal timer and set the internal timer to the real time you want to be recorded.
- At any point, pressing the ML Menu button will reset any playbacks which have been turned on by the script file and move the file back to the first step.
- Option E [Clear masters] will turn off any playbacks used by the script file.
- Ensure the master faders are at full when recording Script files

otherwise the playback faders will not be recorded.

### 10.1.2 What is recorded in the script file

The script file records two types of action:

When a playback fader is raised, the script file records

- The playback number, roller segment and roller page number
- The timecode setting when the fader starts to move
- The time taken for the playback fader to move from the trigger point to full.

When a playback fader is lowered, the script file records

- The playback number
- The timecode setting when the fader starts to move
- The time taken for the playback fader to move from full to the trigger point.

---

## 10.2 Playback

You can play back script files either from script file programming mode (with the key set to System), or from Run mode. Normally you will test the script file runs correctly after you've programmed it, but then switch to Run mode to actually use it.

### 10.2.1 Selecting a script file for testing

The Pearl can play and record script files numbered 1 to 99.

- 
- 1> *If you are not in Script File Programming mode, turn the key to System and press D [Script file programming].*
  - 2> *From the script file menu press C [Select script file].*
  - 3> *Type the script file number on the numeric keypad, or use the up and down arrows to highlight the script file you want on the screen.*
  - 4> *Press Enter.*
- 

This will load the script file, but will not run it yet.

- Press F [Next Step] to select the current step in the file. The timer will change to match the timecode of the step.
- Press ML Menu to make step 1 the active step, and turn off any playbacks used by the script file.

### 10.2.2 Testing the script file

It's easiest to use the internal clock to test the script file, though you can also restart your external timecode source if you are using one. The internal clock produces the same type of timecode as the external (MIDI) timecode.

The display shows the next step to be run with an asterisk (\*), and the live step is shown below the clock as "Live=XX".

- 
- 1> *Press A [Select timer source]*
  - 2> *Press D, [Internal timer].*
  - 3> *If you are simulating an external timecode, type the start time*

using the keypad. Or just press Enter to set the timer to zero.

- 4> Press E [Connect Timer] to run the script file to the timecode.
- 5> The timer will run and the script file will replay.

- You can use Time of Day as timecode by pressing C [Clock Timecode] from the select timer source menu. This can be useful if the Pearl is running time-related lighting shows.
- You can jump to a step by typing the step number on the keypad and pressing Enter. If you are using the internal clock it will jump to the time for that step.
- When the script file is running, softkey E becomes [Disconnect Timer], which will stop the file running. Softkey F becomes [Synchronise] which will synchronise the script file to the current timer, skipping steps if necessary.



### 10.2.3 Using Script files in Run mode

When the Pearl is in Run mode, a special set of Script file options are available. You can run a script file and operate the console manually at the same time.

First you need to set the options for the script file.

**D [Script file Functions]** - Sets options for how the script file is run. The menu options are:

- A [Select timer source] - Selects external or internal timecode and starts or stops the internal timer (same as option A on the main Script File menu)
- C [Select script file] - Allows a script file to be selected (same as option C on the main Script File menu)
- D [Start from Step 1] - Resets the file to step 1, also resets the internal timer, if you are using it, to the Step 1 time.
- E [Connect timer] - Runs the script file. (Same as option E on the main Script File menu). This option changes to [Disconnect timer] when the script file is connected.
- F [Next Step] - Moves the script file on to the next step, and outputs the step. Also moves the internal timer on to the time for the next step. This option changes to [Synchronise] when a script file is running, which will skip any missed steps.
- G [Clear Script File Playbacks]. Turns off all playbacks which have been used by the script file.  
You can also press ML Menu to release the playbacks which have been used.

**C [Play Script File]** - Starts the currently selected Script file (selected using option D). The script file runs from its current position, so you may need to reset it to step 1 (see above). If you are using the

internal timer, the timer is started.

The option changes to [Pause Script file] when selected.

### 10.2.4 Looping and running script files on power up

The Pearl can be configured to run script files on power up, and to loop the script file (if using internal time code). This is useful for unattended operation in exhibitions.


In the Script file main menu, Press G [Script File parameters] to set these options.

Select the script file you want to change using the up and down arrows. The current script file is highlighted.

Option B [Toggle Loop mode] changes the Loop setting of the current script file. Loop resets the timer to zero when the file finishes (this only works when using the internal timer). The display shows "Ends" or "Cont" (continuous)

Option C [Toggle the script file autorun] changes the Autorun setting for the current script file. The Auto column will show "ON" when autorun is enabled. The Global Autorun setting, option A, must also be enabled for Autorun to work.

Option A [Toggle the Global Autorun] sets the global setting which enables or disables Autoruns. The top line of the display shows "Global Auto=" status.

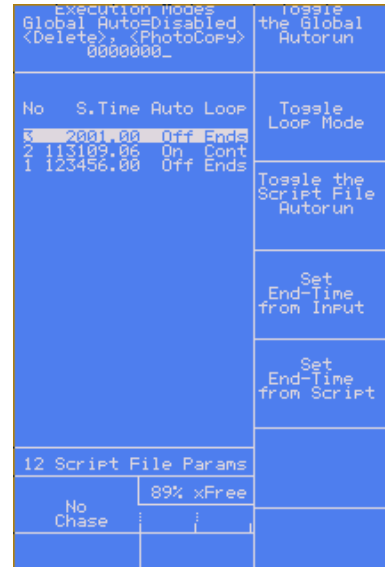

## 10.3 Edit

Press D [Edit a script file].

You can edit each step of a script file to change the playback number, the timecode value for the step, and the fade in and out time. Timecode editing is described in the Timing section.

### 10.3.1 The script file edit display

The screen shows the steps in the script file. The current step is indicated with an arrow. You can change the current step using the up and down arrow buttons, or by typing the step number on the keypad.

As there isn't space to describe the step on the screen, a code is used:

C 1A 12 (Chase on Roller Page 1, roller segment A, playback 12)

M 1C 10 (Memory on Roller Page 1, roller segment C, playback 10)

R 10 (Ramp down (turn off) of playback 10. Page information is not given for ramp down steps)

The VDU screen, having more space, shows more detail of the steps.



### 10.3.2 Editing an action

This allows you to change the playback number, or to set a “ramp down” for a playback, or to change the fade in/out time.

Select the step to be edited using the up and down arrow keys, then press D [Assign Action]. The options are:

A [Load]: followed by the swop button of the playback to be loaded. Changes the step to a fade in of the playback you select.

B [Ramp Down]: followed by the swop button of the playback to turn off. Changes the step to a fade out of the playback you select.

C [Record a blackout step]: inserts a blackout. All playbacks under control of the script file are taken to zero.

D [Ramp Time]: sets the fade in/out time. Type the new time in seconds on the keypad and press Enter.

E [Theatre Stack GO]: sets this step to trigger the Go button on the theatre stack.

### 10.3.3 Inserting a step into the script file

Use the arrow keys to select the position for the new step.

Press B [Insert before step x] or C [Insert after step x] to insert the new step. The new step is blank, with no action or timecode.

Use the Assign Action and Assign Timecode options to set the action and timecode for the inserted step.

### 10.3.4 “On-the-fly” editing

Softkey F [On the fly editing] allows you to add new events to the file in real time as it plays back. (You can also add events to the file while it is paused, anything you do will be added at the current timer setting). The options on the menu are:

A [Select timer source] - same as option A on the main menu

C [Sort steps by timecode] - same as option C on the Assign Timecode menu

D [Play] - runs the file from the current time

E [Pause] - stops running the file

F [Start script file from step 1]

G [On the fly editing] - highlighted when this mode is active. Press to turn off on-the-fly editing.

---

## 10.4 Timing

Press D [Edit a script file] to amend timings.

### 10.4.1 Editing a timecode

Select the step to be edited using the up and down arrow keys, then press E [Assign timecode].

To enter a new timecode from the keypad, press C [Assign TC from

input], type in the new timecode value on the keypad and press D [Assign TC to step from input]. Timecode is displayed and entered as HH/MM/SS.FF (hours, minutes, seconds, frames – frames are 1/25<sup>th</sup> of a second). The top line of the display shows you the timecode you are entering.

Alternatively, press D [Assign TC to step] to use the current timecode setting.

#### 10.4.2 Changing timecode for a group of steps

If you want to offset the timing of a number of consecutive steps, you can allocate them to a group and change the start time of the group. The grouped steps will keep their timings relative to each other, but will all be offset.

You define the group like this:

- 
- 1> Press E [Assign Timecode]
  - 2> Use the up and down arrows to select the step to add to the group
  - 3> Press F [Toggle group] to add the step to the group. An arrow "<" will appear next to the step.
  - 4> Repeat from 2 to add other steps to the group
- 

- All consecutive steps marked "<" are now part of a group.
- Also, other consecutive steps you haven't marked automatically become a different group. For example, if you've got a file with 30 steps and you mark steps 1-10 as a group, steps 11-30 will become another group.

A new timecode is assigned to the group like this:

- 
- 1> Use the up and down arrows to select a step in the group
  - 2> Press E [Assign TC from input], type the timecode where you want the first step in the group to run, and press C [Assign TC to group from input].
  - 3> Alternatively press C [Assign TC to group] to use the current timecode setting.
  - 4> All steps in the group will be offset to the new time, but will keep their relative timings.
- 

You can also press A [Select a timer source] to select current timecode to be taken from external or internal clocks.

#### 10.4.3 Changing the start timecode for the whole script file

In the Assign Timecode menu, Softkey B [Assign TC to file start] will set the current timecode as the new start time for the whole file. All steps in the script file will keep their relative timings. You can use this command with the timer stopped or running

To enter a start timecode on the keypad, press E [Assign TC from input], type in the timecode, then press B [Assign TC to File Start from input].

#### 10.4.4 Sorting the steps into time order

When you have edited steps, the display may show the steps in the wrong order. Press E [Assign Timecode] then G [Sort by timecode] to re-order the display into the correct order. The functioning of the script

file is not affected.

---

## 10.5 Copy

### 10.5.1 Copying a script file

Press G [Script file parameters].

Select the script file to be copied using the up and down arrow keys.  
The current script file is highlighted.

Press the blue Photocopy button.

Type in a number for the newly copied script file.

Press Enter to confirm or exit to cancel.

---

## 10.6 Delete

### 10.6.1 Deleting a step

Press D [Edit a script file].

Select the step to be deleted using the up and down arrow keys, then  
press A [Delete Step].

Press F [Yes] to confirm.

### 10.6.2 Deleting a script file

Press G [Script file parameters].

Select the script file to be deleted using the up and down arrow keys.  
The current script file is highlighted.

Press the blue Delete button.

Press Enter to confirm or exit to cancel.

---

## 10.7 Options

The options on the Script File Menu are:

**A [Select timer source]** - Allows you to select the source for the  
timer on which the script file is based. The possibilities are:

A - External (MIDI) time code.

C - Clock Timecode - uses the Time of Day as the clock

D - Internal timer /TC - uses the internal clock

E - Stop timer - stops the internal clock

F - Start timer - restarts the internal clock

You can enter a setting for the internal clock using the numeric  
keypad - 2 digits each for hours, minutes, seconds, frames - then  
press Enter. The time you are entering is shown at the bottom of  
the screen.

To reset the internal timer to 0, just press Enter.

---

**B [Record script file]** - This option lets you create a new script file as described in section 10.1.1. If there is already a script file, the Pearl will check you want to overwrite it (if not, select No and use option C below to work on another file).

**C [Select script file]** - Lets you select which script file you want to work on. The display shows a list of script files. Type the number of the one you want using the numeric keypad, from 01-99, then press Enter. To start with a new blank file, select any number which is not on the list.

**D [Edit script file]** - Allows you to edit the current file, described in detail in the Edit section on page 184.

**E [Connect Timer]** - Connects the timer to the script file. This will cause steps to be executed when the event timecode matches the timer. The option changes to Disconnect timer when selected, and option F changes to Synchronise.

**F [Next Step]** - Moves on to the next step in the script file. The timer is set to match the time of the step and the step is output. This option changes to Synchronise when the timer is connected to the script file; this allows the file to "catch up" with the timer by skipping events.

**G [Script File parameters]** - Lets you set options for how the script file is run. The display shows a list of the script files available, you can select the current file using the cursor arrows or by entering the script file number on the keypad. The menu options are:

A [Toggle the Global Autorun] - Enables Autorun, any file with Autorun turned on using option C will run when the Pearl is turned on

B [Toggle Loop mode] - Changes the Loop setting of the current script file. Loop resets the timer to zero when the file finishes. Only works with the internal timer.

C [Toggle the script file autorun] - Changes the Autorun setting for the current script file. Global Autorun must also be On. The Auto column will show "ON" when autorun is enabled.

D [Set end-time from input] - Allows you to set the end-time of the file from the numeric keypad

E [Set end-time from script] - Sets the end-time to the last event in the file.

---

 CHAPTER ELEVEN
 

---

## 11. Setup

*This chapter contains: The user settings menu; Wipe modes; DMX output line allocation; Disk functions*

The Pearl is very easy to customise to your preferred way of working. The main options are contained in the "User settings menu".

---

### 11.1 User Settings

#### 11.1.1 The User Settings menu

This menu is obtained by holding down the AVO button and pressing C [User Settings]. You can also turn the key to System mode and press C [User Settings].

You select the option to change using the cursor up/down buttons, and make the changes using the left/right buttons.

The options are:

1. **Normal Run / Take Over** - Sets the Run mode of the Pearl. This option can also be set by pressing Softkey A while in Run mode. See page 177 for details of Run mode.
2. **Rec by Fixture / Rec by channel** - Sets the recording mode of the Pearl. If set to "by Instrument", if any attributes of a fixture are changed, all attributes are recorded. If set to "by channel", only changed attributes are recorded. See page 149 for details of how this works. This option can also be set by holding the Avo button and pressing Softkey B.
3. **Speed=Seconds / BPM** - Allows you to set whether chase speed is displayed in Seconds or Beats Per Minute (tempo).
4. **Autoconnect Yes / No** - Allows you to turn Chase autoconnect on or off. If on, the controls are automatically connected to the most recently turned on chase. If off, you have to connect the chase manually using the Connect button.
5. **Palette page Off / On** - When set to on, 60 different palettes are available from the flash buttons on each fixture page (see page 139 for palette numbering details). When set to Off, palettes 1-30 / 121-160 are on the bottom/top flash buttons for all fixture pages.
6. **Q palette Off / On** - Enables the quick palette function which allows you to apply a palette to all fixtures if no fixtures are selected
7. **G-Tablet / Remote Control** - Specifies what device is connected to the serial port. This option is not used on the Pearl Expert.
8. **DMX Chans = xxx** - Sets the maximum number of DMX channels to transmit. If your rig does not use all 512 channels, you can improve the DMX refresh rate by reducing this number to the maximum of your rig. You can also set this option from the "Set DMX Lines" option in Patch mode.

- 9. Fader ON > x (vv)** - Sets the level of the fader at which LTP channels turn on when fading in a memory or chase. X is the percentage value, vv is the raw DMX value
- 10. Fader OFF < x (vv)** - Sets the level of the fader at which LTP channels turn off when fading out a memory or chase. This has to be at least 2 values below the "on" value. The Pearl will not let you set an incorrect value.
- 11. Grand Master OK / Broken** - Allows you to disable (fix at full) the Grand Master fader should it happen to get broken by oiks being careless with the desk case lid.
- 12. TC Check On / Off** – Turns MIDI timecode checking on or off. If turned on, the Pearl will sample the incoming timecode, and if it is corrupted will substitute internal timecode until the external timecode is OK again.
- 13. xxx mcS** - Sets the DMX idle time (the delay between the end of one packet and the start of the next). This allows you to slow down the DMX refresh rate if you have some equipment that can't keep up. Increasing the delay will degrade the performance of the DMX link so you should not change this unless you have to. The figure in brackets shows the DMX refresh rate in milliseconds.
- 14. Midi - SLAVE/MASTER/DISABLED/Visualiser** - Sets the MIDI mode of the Pearl. In Slave mode it receives data, in Master mode it transmits data when you press a key or raise a fader. This provides a simple way of recording a show straight into a sequencer.
- 15. Midi channel = xx** - Sets the MIDI transmit / receive channel. MIDI channels are actually numbered 1-16, and the Pearl displays 0-15, so add 1 to the Pearl display to get the actual channel.
- 16. Use 720K / 1.4Mb disks** – Sets which type of disk the Pearl expects. The Pearl uses this setting to work out if your show will fit on a single disk, or if it needs to span multiple disks.

There are also options on the softkeys, these are:

- A [Fixtures or Mimics]** – The Swop button LEDs can show either the fixture intensity (Mimic) or light up if the fixture is selected (Fixtures). This option can also be set by holding the Avo button and pressing Softkey A
- B [Set TC valid range]** – Allows you to set the MIDI timecode range which will be accepted. Enter the minimum time as prompted on the screen and press softkey A, or the maximum time and press softkey B.
- C [Specify Attributes for Bank]** - Allows you to set which attributes go together (also called the Focus Mask, see page 140 for another way of setting this). Normally the Dimmer attribute includes all the others, and the Colour attribute includes the cyan/magenta/yellow attributes, but you can change this. Select the Attribute to change, then press this option. Select the other attributes you want to include, then press Exit. Beware of changing these settings unless you are sure what you are doing.
- D [Set LCD Contrast and Brightness]** - Use this option to set the contrast and backlight brightness of the onboard display. The left

wheel sets brightness, the right wheel sets contrast.

**E [Desk lamp intensity]** - Use this option to set the brightness of the desk lamp. The left wheel sets the brightness.

**G [Default settings]** - sets all settings back to the defaults.

### 11.1.2 Setting the Wheel acceleration

The control wheels allow you to set 16-bit control values to the fixtures, and have an acceleration function so you don't have to spin the wheel for hours if you need to make large changes to the fixtures.

Hold down the AVO button and press the 2 button to set the different wheel acceleration curves. The current curve is shown on the main part of the screen. "Linear Fast" has the fastest response and "Linear Slow" the slowest and most accurate.

---

## 11.2 User functions

### 11.2.1 The Wipe menu

This menu is obtained by turning the key to System mode and then pressing A [Service]. Softkey F [Wipe] then selects the Wipe menu.

You can selectively wipe various parts of the console, or you can wipe the whole thing. Press softkeys B, C and D to turn the wipe options on and off. The option is highlighted when that wipe option is turned on.

The options are:

**A [Cancel]** - quits Wipe mode

**B [Patch]** - Sets the Patching to be wiped. The programming and individual Palettes will also be wiped (as they would mean nothing without the patch), however shared palettes (see page 137) will remain.

**C [Palettes]** - Sets the Palettes (including shared palettes) to be wiped.

**D [Programming]** - Sets the memories, chases and theatre stack to be erased. The Patch and palettes (shared and individual) will remain.

**F [Wipeall]** - Will wipe the whole memory, setting the console back to factory default state. The settings of the B, C and D options are ignored.

**G [OK]** - Will wipe the memory as set by options B, C and D.

### 11.2.2 Configuring DMX output lines

You can configure how the four DMX output lines map to the four XLR sockets on the rear of the console by pressing D [Set DMX Lines] from the Patch Utilities menu (press Patch then F [Patch Utilities])

You can also configure the DMX outputs, including sending DMX over Ethernet, using the "Setup DMX Outputs" option on the "Options" menu of the Pearl VDU window.


The VDU will display a window as shown on the next page allowing you to map the four internal DMX lines to a variety of actual DMX outputs.

The internal DMX lines A, B, C, D are shown in the left hand window. Each line can be configured to output to one or more physical outputs, called Nodes. You can add multiple nodes to one DMX line – this produces identical output on each node, like a splitter.

Simply highlight the line A-D in the left window, select the required type of output in the DMX Nodes dropdown box, and the actual node in the list below, then click the Add button. To remove a node, highlight it in the left hand window and click the Remove button.

The four XLR sockets on the rear panel are listed under ExpertDMX (called DMX Output A to DMX Output D).

There are also ArtNet (Ethernet), eDMX (wireless Ethernet) and ACDI (ethernet to lighting simulator) nodes.

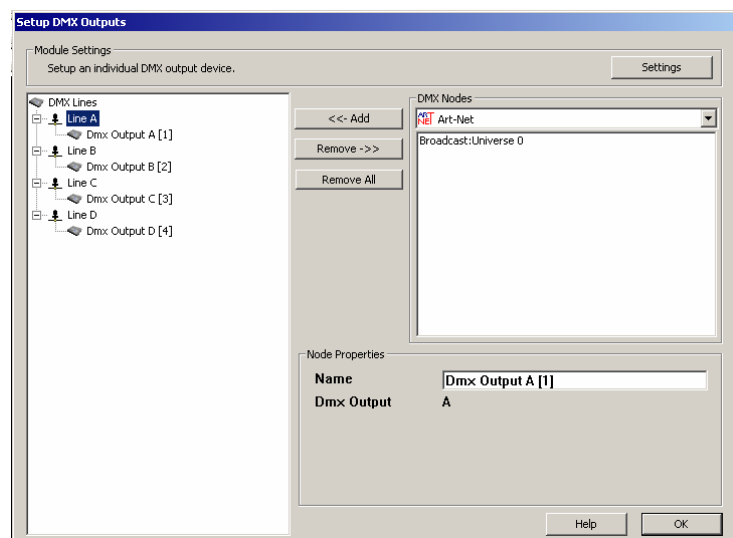

### 11.2.3 Disk functions

Press the Disk button to display the disk menu. The options are:

**A [Load show from disk]** – Select which disk to load from (Floppy drive, Hard drive, Memory Pen). The Pearl then displays the names of shows on the disk against the softkeys. Press the softkey for the show you want to load.

**B [Save show to disk]** - Saves the contents of the console to the disk. If you want to make the show compatible with Sep 2000 software (for loading into older Pearls) press A [Convert Show to Sep 2000] . Type a name for the show (displayed on VDU), then press Enter. Press one of the softkeys to save the show to Floppy drive, Hard drive, or Memory Pen (if one is attached to the USB socket).

Saving a show with the same name as an existing show on the disk will not overwrite it. It will just create a new entry in the Show History.

**C [Verify disk]** – Compares the show on the disk to the contents of the Pearl.

**G [Load visualiser CSV file]** – You can load a CSV file from Avolites Visualiser which contains the patch information from the Visualiser setup, which will patch the console to match the Visualiser.

**Note:** If you load a show from a Pearl 2008/2004/2000 console into the Pearl Expert, playbacks 16-20 on each page are left blank for compatibility.



## CHAPTER TWELVE

## 12. Other features

*This chapter contains: Setting the Pearl's clock & other utility functions; using MIDI commands with the Pearl; Service mode; upgrading Pearl software; using the Pearl recovery disk.*

### 12.1 System Configuration

#### 12.1.1 Utility menu

The Utility menu is accessed by turning the key to System, then pressing G [Utilities].

**A [Set clock]** - The Pearl has a built-in real time clock. It uses this to record snapshot times and disk backups, so it's important to have the correct time and date set on it.

To set the clock you need to be in System mode, and you need to have a VDU screen connected.

Press A [Set Clock]. The Pearl displays a window on the VDU screen in which you can enter the time, date and daylight saving modes (if the clocks get put forward an hour in summer). Press Exit to abandon or Enter to save.

**C [Configure a MIDI keyboard]** - Lets you change which MIDI note turns on each memory. Send the MIDI note for memory 1, then the note for memory 2, and so on. A prompt is displayed on the VDU screen which tells you what the Pearl is expecting you to do. Press Exit to end.

**E [Load shape file]** - Allows you to load a new shape definition file SG.DAT. You may need to do this if Avolites issue an updated shape file.

**F [Clear Wrap around channels]** - If you load a show saved with an earlier version of software, you might get a problem with channels which wrap around from 255 to 0. Running this option will sort them out.

#### 12.1.2 Service mode

Service mode, selected by turning the key to "System" then pressing A [Service], is mainly used to wipe the console using option F. Option D [Tests] is used by Avolites Service technicians.

**D [Tests]** - Displays another menu allowing you to test various hardware in the system.

B [Read FIX.SYS] allows a user dimmer curve to be loaded

C [Modify memory] for Avolites tech support use only

D [Memory Check] runs a test on the system memory

E [View Key History] shows a list of keypresses on the VDU screen. (Press E again to close the list)

F [View MIDI codes] shows incoming MIDI commands on the VDU screen (press F again to close the window)

G [MIDI test] sends out MIDI data to test the ports


**F [Wipe]** - Allows you to wipe various parts of the console. This option

is described in detail on page 191.

### 12.1.3 Using the USBExpert console for diagnostics

If you have problems with the buttons or faders on the Pearl, the USB Expert console can help you to find out more about the problem. This replaces the “diagnostic screen” which used to be found on the Service menu in other Pearl versions.

Start the USB Expert console by clicking the “USB Expert Console” icon (USB plug picture) on the top left of the VDU toolbar.

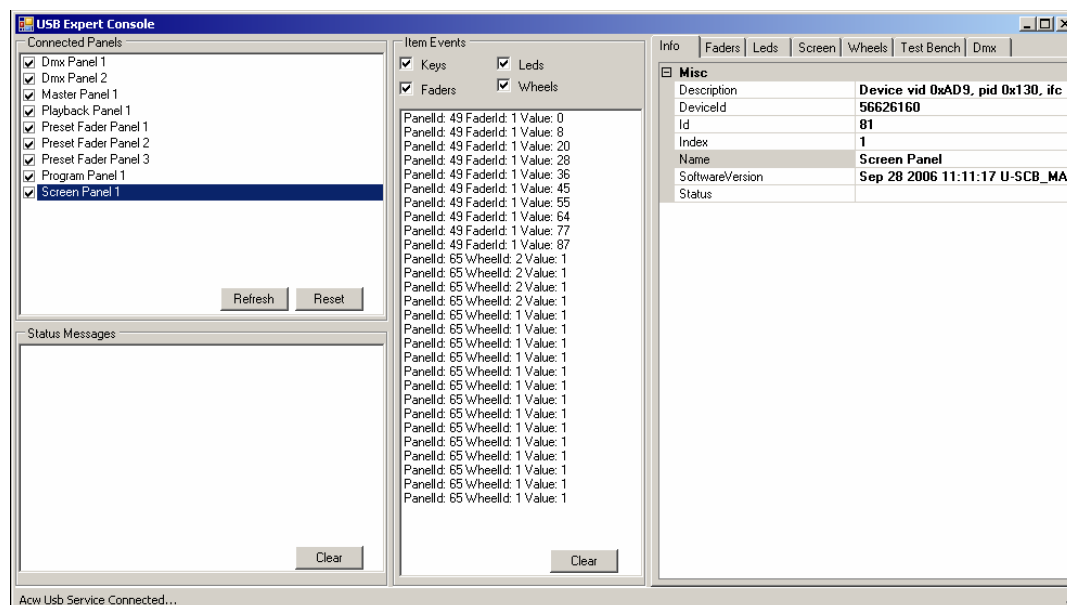

The top left hand window shows you the various USB panels which read the faders and buttons on the Pearl.

The central window shows you events such as button presses and fader movements. By ticking or unticking the boxes at the top you can select whether each type of event is shown in the list. This window is useful for tracking down broken buttons or intermittent faders, as it shows you exactly what information the Pearl is getting from the front panel devices.

The right hand window allows you to view and change various different things.

- The Info tab shows information about the USB panel highlighted in the left window.
- The Faders tab shows information about faders.
- The Leds tab allows you to test one or more button leds.
- The Screen tab allows you to test the onboard screen and set brightness, contrast and also desk lamp intensity.
- The Wheels tab shows information about the wheel status and rotation.
- The Test Bench tab is for Avolites Service use only.
- The DMX tab allows testing of the DMX outputs and some adjustment of timings. Change these settings only if told to do so by Avolites Service.

### 12.1.4 Configuring the VDU with Windows Control Panel

The resolution of the VDU output is set using Windows Control panel. Click on the "Control Panel" icon (Spanner) at the top right of the Pearl desktop, then double click "Display". Then click the right hand tab "Settings" and set the slider on that screen to your desired VDU resolution. Click OK to accept the resolution, then click OK if your monitor works OK with the new resolution set. If your monitor does not work with the new resolution, the old setting will return after 15 seconds.

Note: The Pearl output window remains at a fixed resolution on the desktop, so it will get smaller and smaller as you increase the screen resolution.

### 12.1.5 Upgrading the Pearl's internal software

From time to time, Avolites make updated software available on the website. The new software may add new features and fix any problems found with the console.

You can load new software from a CD-R or from a USB pen disk. Download the installer file from the website and copy it to a disk.

- 
- 1> *Click on the Close Software icon on the Pearl VDU desktop toolbar to stop the Pearl software.*
  - 2> *Click on the Folders icon on the Pearl VDU desktop toolbar to open a folder/disk browser.*
  - 3> *Open the disk where the new software is located.*
  - 4> *Double click the installer (.msi) file for the new software.*
  - 5> *Follow the instructions in the installer.*
  - 6> *You may also need to install updated USBExpert software. The release notes will tell you this.*
  - 7> *When all installations have completed, shut down the console using the power button and restart it.*
- 

- Any shows saved in the Pearl will be preserved during the upgrade.

### 12.1.6 Using the Pearl Recovery CD

The Pearl uses the Windows XP embedded operating system internally. If the console will not boot or you get system error messages from Windows then as a last resort you should try reloading the software.

A Recovery CD is provided to do this. The CD is located in a plastic folder inside the console. To open the console, turn the four fasteners on the front panel through 180 degrees and lift the panel up from the rear.

Note: All user data in the console will be erased. The console will be reloaded to its factory state.

- 
- 1> *Insert the Pearl Recovery CD into the CD/DVD drive on the left side of the console.*
  - 2> *Shut down the Pearl by pressing the Power switch. If the console will not shut down, hold down the Power switch for 4 seconds to do a forced shutdown.*
  - 3> *Restart the Pearl by pressing the Power switch.*

- 4> *Watch the VDU carefully. When the bottom line of the screen says "Press any key to boot from CD", press a key on the ASCII keyboard.*
  - 5> *After some time the display will show a screen titled "Avolites Pearl Expert Installation and Recovery". Press Enter to continue with the installation. All user data in the console will be erased. If you change your mind about reinstalling the software, the only way to escape is to reboot the console by holding down the power switch.*
  - 6> *The installation will ask you a number of questions. You should respond to all questions by pressing Y and Enter.*
  - 7> *The console will reinstall its operating system from the CD. This could take a considerable time (up to an hour). The console will reboot several times during the installation. Do not press any keys when the console displays "Press any key to boot from CD".*
  - 8> *When the reinstallation is nearly complete, the console will ask for its serial number. This is printed on a sticker on the rear panel. Enter the number and click the OK button below.*
  - 9> *The VDU will eventually return to its normal desktop display. At this point the reinstallation is complete, but a further reboot is required to start up the console correctly. First remove the CD from the drive and replace in the plastic folder inside the console. Close and refasten the console panel.*
  - 10> *Reboot the console by shutting it down using the Power button and restarting.*
- 

If you continue to experience errors after reloading the software, then it is likely that the console has a hardware fault. Contact Avolites Service (see front pages of manual) for assistance.

Avolites have designed a system called ShowSafe which can be used to keep your show running if the Pearl fails. See the next section for details of how this works.

### **12.1.7 Using the USB Reserve sockets if the console fails**

The Pearl is designed so that if its processing unit fails, you can plug in an Avolites "ShowSafe" backup device and continue to operate the show. This provides a lower cost backup alternative if your budget will not stretch to providing a spare Pearl console.



The ShowSafe unit runs identical software to the Pearl console. All you need to do is to load a backup copy of your show into the Showsafe unit and connect it to the Pearl's USB Reserve sockets.

The ShowSafe unit is linked to the USB Reserve sockets on the rear of the Pearl using two USB A-B cables. (One links to the panel hardware, the other links to the DMX output hardware). When the two toggle

switches are switched to "Reserve Active", the Pearl's panel controls will operate the ShowSafe unit, and the ShowSafe unit will output DMX through the Pearl's DMX outputs.

The ShowSafe unit also has its own DMX outputs if there is a problem with the Pearl's DMX output hardware. If the Pearl front panel hardware is not working you can run the show using a keyboard and mouse on the ShowSafe unit, though this obviously is going to reduce your options somewhat.

Please refer to the ShowSafe manual for more details of how to operate the ShowSafe unit.

## 12.2 MIDI functions

The Pearl can respond to or output MIDI note information which emulates certain buttons being pressed or faders being moved. The console can also respond to MIDI Timecode, which is used with script files.

If you want to know more about MIDI, a good book to read is *MIDI Systems and Control* by Francis Rumsey; Published by Focal Press, ISBN 0-240-513000-2. There's also a huge amount of information available on the Internet, try searching for "MIDI specification".

The MIDI mode is set on the User Settings menu to be MIDI master (outputs MIDI when you turn on playbacks), MIDI slave (responds to MIDI) or MIDI disabled. The MIDI channel the Pearl will respond to is also set on this menu (note that you need to add 1 to the number displayed by the Pearl to get the actual MIDI channel number).

### 12.2.1 What a MIDI command looks like

The normal MIDI command is: STATUS BYTE1 BYTE2

Or in binary, 1ccccnnnn 0xxxxxxx 0yyyyyyy

ccc = the MIDI command (note on, program change etc)

nnnn = the MIDI channel number (set on the User Settings menu).

xxxxxxx and yyyyyyy are the data bytes.

MIDI often works in "running status" mode. If a lot of the same type of command is being sent (lots of note on's etc.) then the status byte can be missed out. The receiver knows that if it doesn't get a status byte, it just has to run with the last one it received.

### 12.2.2 MIDI commands used by the Pearl

The Pearl uses standard MIDI commands. The usual name for these is given in *italics*. All commands are given in hexadecimal notation (\$9n), where 'n' is the MIDI channel number. So a note on command for MIDI channel 3 for example would be \$92.

**Set playback page** : *program change* (\$Cn xx)

Page	1	2	3	4	5	...	28	29	30
------	---	---	---	---	---	-----	----	----	----

xx	\$00	\$01	\$02	\$03	\$04	...	\$1B	\$1C	\$1D
----	------	------	------	------	------	-----	------	------	------

*example                      \$Cn \$02                      Console changes to Page 3*

**Turn on a playback:** *note on (\$9n pp ll)*

Note number (pp) = playback number, from 0 - 14 (decimal)

Key velocity (ll) = playback level, from 0 - 127 (decimal). 127=Full

*example \$9n \$03 \$40                      Playback Fader 4 at 50% level.*

(Note that Playback Fader numbers start at zero, so subtract one from the number on the console to get the MIDI note number).

To Turn Off a playback, send a note on command with velocity=0. The Pearl does not recognise MIDI note off (\$8n) commands.

**Stop/run/step a chase etc:** *after touch (\$An pp cc)*

Note number (pp) = playback number, from 0 - 19 (decimal)

Aftertouch value (cc) = control codes:

- \$00 stop chase
- \$01 run chase
- \$02 restart from step 1
- \$03 fade to next step using programmed fade times
- \$04 Snap directly to next step

### 12.2.3 MIDI Time Code

MIDI time code is used to synchronise Script Files with an external music track.

Quarter-frame message types are fully supported and these follow the standard format, which can be found in most MIDI handbooks. A suitable EBU/LTC Timecode to Midi Timecode converter may be obtained through Avolites UK.

### 12.2.4 MIDI Problems

The console supports a full MIDI data rate burst for 2 seconds, after that data may be lost since it cannot be processed.

A MIDI debug Terminal is available which shows you the MIDI commands being received by the Pearl. To activate this :

Turn the key to System, then Press Softkeys A, D, F. The MIDI terminal window is displayed on the VDU screen. Turn the key to Run to finish.

## CHAPTER THIRTEEN

## 13. The Personality File System

If you can't find the personality for the fixture you're using, or you want to know how to create a personality file, this section has the details.

### 13.1 Help, I can't find a personality for my fixture

The Pearl Expert holds the entire Avolites fixture library on its internal hard disk. However, Avolites constantly updates the library, so you may need to download new or updated personalities into the console from time to time.

The Avolites fixture library may be accessed on the internet at <http://www.avolitesdownload.com/Personality%20Library/Default.asp>

You can also use this page to request a personality for a fixture if one doesn't already exist, and to report problems with personalities.

#### 13.1.1 Installing a personality

Fixture personalities should be downloaded from the website and saved to a disk – either a CD-R or a USB pen drive.

- 1> *Click on the Folder icon at the top of the Pearl desktop toolbar.*
- 2> *Open the disk where the personality is located.*
- 3> *Double click the installer file for the personality.*
- 4> *The new personality will now be available for patching. If you are already in the patch menu, exit it and go back in to refresh the fixture list.*

### 13.2 Create

#### 13.2.1 What is and how do I write or change a Personality file?

The personality file is an ASCII text format file containing information on how the desk should patch each channel of an instrument.

Since the files are in ASCII text format you can easily modify them and create new versions for your own use. When editing files you must ensure your word processor is set to save in plain ASCII text format. If you use Windows Write make sure that when you open the file you select 'no conversion' and when you close the file you save it in the 'text file' format.

Before editing make a backup of the original, in case your edits do not work.

The Pearl Expert stores its personality files as .R20 files in the hard disk folder shown above. If you save a personality file in that folder it will become available for use in your show.

#### 13.2.2 Personality file naming conventions

There are four extensions used by personality files: .PER, .D2, .R96 and

.R20.

Pearl software will read any .PER file and any.R96 file, however when .PER files are read a message will be presented to the user to warn that an old personality file is being used and not every function of the desk will work correctly. Typically this includes tracking, pre-loaded focuses locate fixture and tablet functions. .D2 files are for the Diamond II & Diamond III.

Files with the extension .R20 can only be used with Sapphire 2000, Azure 2000 and Pearl 2000/2004 control desks. These files have additional fields for the enhanced functionality provided within these desks.

### 13.2.3 Personality File Keyword Order

Keywords should appear in the following order: -

```
DEVICE ...
TYPE ...
DEVICEADDRESS ...
DAEND ...
MINDMX ...
MAXDMX ...
DIVBY ...
MIRROR ...
DMX ...
DMX ...
TEXT ...
END
PFTABLE ...
PFEND
MACRO ...
MEND
```

### 13.2.4 The Instrument Name

The **INSTRUMENT NAME** will appear in the following format :-

```
DEVICE XXXXXXXX
```

Where **DEVICE** is the keyword to tell the desk that an instrument name follows and "XXXXXXX" is the name of the instrument, this name can be 11 characters long and no spaces or tabs are allowed.

This instrument name will appear on a soft button when patching and is used in various view screens when operating the desk.

It is usually easier to make the actual file name similar to the **DEVICE NAME** to make things easier when servicing personality files.

### 13.2.5 The Device Type

The **DEVICE TYPE** will appear in the following format :-

```
TYPE 1 Y Z
```

Where **TYPE** is the keyword used to tell the desk that **DEVICE TYPE** data follows.

"1", which is the first character on the line is no longer used but is required for backward compatibility. This field may be used in future versions and should always be "1".



Field "y" tells the desk the number of ATTRIBUTES (channels) the device uses, and entry "z" gives information on the way the device is to be patched.

Where: -

M patches from dmx 512 to 001 (downwards)  
 D patches from dmx 001 to 512 (upwards)  
 K for those devices where the dmx channels used are not in consecutive slots

For example a **TYPE-LINE** can look like: -

```
TYPE 1 8 M
```

Setting the device to: - 8 channels used patched from 512 downwards and the next line sets a device for 10 channels and patched from 001 to 512

```
TYPE 1 10 D
```

### 13.2.6 Fixture switch settings

This allows the desk to display the exact switch settings required to configure a fixture for a given DMX address and to ensure it is set in the correct mode.

The display can be configured in virtually any way required. The fixture switch detail **MUST** be declared before the DMX declaration.

A number of variables are provided for use within this function, these must be in lower case: -

d = dmx number the instrument is assigned to  
 h = handle the instrument will be operated from  
 n = the device name, given earlier in the personality file

The keywords associated with the fixture switch settings are:

```
DEVICEADDRESS  

DAEND  

MINDMX  

MAXDMX  

DIVBY
```

The screen space allowed for displaying the fixture information is 10 lines by 21 characters.

The start and end of the fixture switch detail is marked by DEVICEADDRESS and DAEND.

The formula to display this information is restricted to 10 lines by 79 characters.

The three other variables must be defined for the instrument are: -

- MINDMX = lowest DMX number the instrument can be addressed
- MAXDMX = highest DMX address number the instrument
- DIVBY = The difference of two dmx addresses selected by changing the LS bit of the address switch.

For example if the instrument address switch increments the DMX number by 1 then the difference DIVBY will be 1, if, like on the Cyberlight it increments by 20 then DIVBY would be 20.

DIVBY is used to ensure that an instrument can be addressed at the address proposed by the user when patching.

**There follows an example for a Cyberlight.**

```
; This instrument can only be switched to certain DMX addresses.
; variables used d=dmx number, h=handle, n=device name;
"Address %04b %1b001"16-(d/20%16),(d/20)/16
; This is the address display line
; 1. Items in quotes are displayed
; 2. First item here (Address ) is ascii text
; 3. %04b = 4 bits of binary data, 0 means display leading 0's
; 4. next is a space
; 5. %1b = 1 bit of binary data
; 6. 001 is ascii text again
; 7. Close quotes
; 8. first variable passed is 16-((d/20)%16)
; (d/20) : dmx/20 giving fixture number
; %16 : isolates lower 4 bits
; 16- : reverses the 4 bits
; 9. Second variable passed is (d/20)/16
; (d/20) : dmx/20 giving the fixture number
; /16 : isolates the upper 4 bits.
;
DEVICEADDRESS
"Handle %2d"h
"Fixture %11s"n
"DMX %03d"d
""
"Dip Switch 1234 5678"
"Personality 0000 0000"
"Address %b%b%b%b %b001"d/20%2,d/40%2,d/80%2,d/160%2,d/320%2
""
"0=OFF ( Right )"
"1=ON ( Left )"
DAEND
MINDMX=1
MAXDMX=481
DIVBY=20
```

**The next example is for a Colour Fader, This instrument uses a GROUP and ADDRESS switch**

```
; Upto 10 lines of 79 chars are allowed including formulae
; variables used d=dmx number, h=handle, n=device name;
"Address %04b %1b001"16-(d/20%16),(d/20)/16
; This is the address display line
; 1. Items in quotes are displayed
; 2. First item here (Address ) is ascii text
; 3. %04b = 4 bits of binary data, 0 means display leading 0's
; 4. next is a space
; 5. %1b = 1 bit of binary data
; 6. 001 is ascii text again
; 7. Close quotes
; 8. first variable passed is 16-((d/20)%16)
; (d/20) : dmx/20 giving fixture number
; %16 : isolates lower 4 bits
; 16- : reverses the 4 bits
; 9. Second variable passed is (d/20)/16
; (d/20) : dmx/20 giving the fixture number
; /16 : isolates the upper 4 bits.
;
;
DEVICEADDRESS
"Handle %2d"h
"Fixture %11s"n
"DMX %03d"d
""
"GROUP %2d"d/12+1
"CHANNEL %2d"d%12
""
""
""
""
```

DAEND

MINDMX=1  
MAXDMX=508  
DIVBY=3

### 13.2.7 Mirror

Mirror is used to define the instrument type - Moving head or Moving mirror and the maximum Pan and Tilt angles through which the instrument can move. These values are required for the 3D tracking system. Typically a **MIRROR** line looks like: -

```
MIRROR 1 170 110
```

Where: -

**MIRROR** is the keyword

**1** indicates moving mirror a **2** in this field indicates a moving head instrument.

**170** is the maximum pan movement.

**110** is the maximum tilt movement.

### 13.2.8 The DMX/Preset Layout

The **DMX/PRESET LAYOUT** will appear in the following format: -

```
DMX
A B C D E F G H I J K L ; comment
A B C D E F G H I J K L ; comment
END
```

Where **DMX** is the keyword to tell the desk dmx, preset and fader information follows.

**A:** sets which Attribute button will be connected to the DMX channel, defined later. The range is 1 to 20 for the desk, but up to 15 for the tablet.

A 0 (zero) in this field indicates it is part of a 16 bit channel defined in the previous line.

**B:** This tells the desk which wheel is used for that channel, where 1 means left and 61 right.

**C:** This is the channel type, currently there are 5 different channel types available :-

H (HTP) for dimmer

L (LTP) for moving lights and scrollers

I (instant) LTP channel which does not fade

S (double byte) 16 bit LTP channel which does not fade

s (double byte) 16 bit LTP channel

**D:** This is the relative DMX address of the attribute being defined, starting from 1.

**E:** This is the maximum output of that attribute in %, where 0 means no output at all and 100% full output. This allows the channel to be limited in level.

**F:** This sets the curve for that channel, DOM version 2.xx and up

supports 4 different curves :-

- 1 = linear curve
- 2 = square
- 3 = relay at 50%(128) on
- 4 = FD square

The curve number is prefixed a single letter which can be: -

- N = normal
- C = complemented curve (ie invert the channel)

**G:** This is the link to the user tables and identifier for PAN and TILT. This will be explained in the **TABLES** section. This entry can run from A to F and 0 (zero) meaning no table entry.

**H:** This must always be 1 (The checksum facility has been removed).

**I:** This defines the channel name. This should be in inverted commas and can be up to 11 characters long and it may include spaces. This will be used on screen to identify the channel.

**J , K and L:** define three default levels that can be output. These are Locate fixture, Highlight and Lowlight.

The range is 0..255 and -1 means no change to the output.

Locate Fixture is used in the moving light menu to turn on a fixture and set channels to a level such that you can see where the instrument is. Generally the settings give 50% pan 50% tilt, white, no gobo, 100% dimmer.

Highlight and Lowlight are used when editing to brighten or otherwise mark one instrument whilst the others are turned into a dim state.

### 13.2.9 Text Field

The text field will be displayed when patching the devices.

This text field can hold any text you like, but generally it displays the Attribute Bank layout of the device being patched.

If you are going to want to use the personalities on other Avolites consoles, bear in mind that different consoles have different sized displays. Limit the text to 20 characters a line if you want the personality to be compatible.

### 13.2.10 The Preset Focus (Palette) table

Tables on the Pearl are for default Palettes which are automatically loaded when an instrument is patched.

Two key lines are required for tables, the definition line and the data line.

The definition line looks like: -

```
PFTABLE "table name" A B..
```

Where A is allows the table to be connected to a tablet attribute button.

With the instrument when the pen is clicked on the tablet the table list appears on the VDU screen, moving the pen up or down allows selection of a table entry.

The range for this is -1 meaning table is not attached to a tablet button or 1..30 to define which button the table will be attached to.

Where B is the list of dmx channels values which will be defined within the table.

For example: -

```
PFTABLE "GOBO" 3 4 7
```

The first word is the keyword PFTABLE to indicate that a preset focus table follows.

Next follows the table name. This can be up to 11 characters and can include spaces. It must begin and end with double quotes.

The first number indicates which tablet attribute button the table will be available on.

The final numbers are the actual DMX channel numbers.

The next lines contain the actual focus information and is defined as follows: -

```
"focus name" palette entry number channel level(s)
```

When "focus name" this is the name given to the focus. This can be up to 11 characters and can include spaces. It must begin and end with double quotes.

When focus button number defines which palette entry will be used, numbers 1..200 indicate the entry button number.

Where channel level(s) are the actual level output to the instrument. This is must be in hexadecimal notation. If no value is required (the entry is OFF) a -1 (minus one) should be placed in the field.

For example: -

```
"STAR GOBO" 20 0 FF ;
```

The first field is the name of the focus, STAR GOBO.

Next is the focus button number that the focus will be placed on. In this case focus button 20.

Next are the data values.

The last line of the preset focus table must be: -

```
PFEND
```

There can be a number of preset focus tables.

### 13.2.11 Macros

Macros allow a defined set of channels to be adjusted rather like running a chase. The principle use for this is to allow instruments to be struck up or reset which sometimes requires a sequence of channels to be turned on and off over a certain time scale.

Whilst a macro is running all other desk functions are locked out. The macro progression is presented on the prompt line of the screen.

There are three key types of data line associated with macros, these are:

```
MACRO "macro name" channel list
"data" data list
"delay" 1 time
MEND
```

- Where "macro name" can be up to 11 characters and can include

spaces. It must begin and end with double quotes.

- The channel list is the DMX channels for the instrument, to which data will be passed from the `data list`.
- `"data"` that the following data will be passed to the instrument. Note that this MUST be in lower case and enclosed in double quotes.
- `data list` is the data to be passed to the instrument. It must be in hexadecimal notation..
- `"delay"` This optional statement defines that a delay time before running the next step. When used it must be followed by a 1. This field is for future use.
- `Time` is the delay time in units of 0.1 seconds and is in hexadecimal.

3 seconds would be 2E

Macros must terminate with the statement `MEND`

A typical example macro is:-

```
MACRO "HOME" 1 18 20 ; send instrument to home position

"data" 0 FF 0
"delay" 1 20
"data" 0 0 FF
"delay" 1 20 ; wait about 2.5 seconds
"data" 0 0 40
"delay" 1 40 ; wait about 5 seconds
"data" 0 0 0
MEND
```

### 13.2.12 Range tables

Range tables give names to the attribute values; for example on the shutter channel, 0-7 is "closed", 8-119 is "strobe". This information is displayed above the control wheels when Intelligent Attribute Display is enabled.

The definition line looks like:-

```
RANGE attribute number
```

And each entry in the table:

```
Low DMX value HIGH DMX value TEXT
```

"Low" is the bottom of the range, "High" is the top of the range, both inclusive figures.

Variables can be used in the TEXT field to display numbers; a is the low value, b is the high value and c is the actual DMX value.

```
;------
; Range Tables
; Column by column description...
; 1. Low DMX value (inclusive)
; 2. High DMX value (inclusive)
; 3. Displayed text (max 11 chars)
; Variables used a=low val, b=high val, c=DMX val

RANGE 8 ;Shutter
0 7 "Closed"
8 119 "Strobe %3d%"0+(((c-a)*100)/(b-a))
120 136 "Flash Beat"
```

```

137 153 "Flash Music"
134 170 "BO Gobo"
171 187 "BO Colour"
188 204 "BO Col+Gobo"
205 221 "Slow Gobo"
222 255 "Open"
REND

```

### 13.2.13 Example Personality File for the High End Cyberlight

Items in **BOLD** are required, everything else is comments which can be freely changed deleted etc. comments always precede a ;.

```

; "High End Cyberlight mode 1", 20 DMX channels, filename :hecyber1.per
;
; Date      By      Description
; 26-05-94 Salzedo  created
; 10-08-94 Anwar    revised dmx slots
; 07-09-94 J.B.Toby  revised for Pearl use/relocation of channels
; 11-11-94 J.B.Toby  revised to match PerManML
; 22-05-96 S. Anwar  Pan/Tilt channel identification & Resolution inserted
; 04-03-96 S. Anwar  Revised for Pearl 96
;-----
; The device name, upto 11 characters, no spaces are allowed
DEVICE CYBER_model
;
;-----
; The Type of instrument, 1 & M are required for backward compatibility
; The middle number denotes the number of DMX channels used
TYPE 1 20 M
;
;-----
; Mirror/Head resolution
MIRROR 1 170 108
;
; | | |
; | | | _____ maximum tilt movement (in degrees)
; | | | _____ maximum pan movement (in degrees)
; | | | _____ 1 means moving mirror, 2 means moving head
;
;-----
; Patching Information. (Upto 10 lines allowed)
; Upto 10 lines of 159 chars are allowed including formulae
; Variables used d=dmx number(1..512), h=handle(1..60), n=devicename (11-char)
; Allowed modifiers
; +,-,*,/, (,) basic arithmetic
; % means remainder after divide
; & means logical AND
; | means logical OR
; R means reverse the bits of the current result (operates on a byte)
; ^ means logical Exclusive OR (operates on a byte)
; > means shift to the right
; < shift to the left
; r followed by number means get the value of that parameter
; d DMX address
; n Fixture name, a 0 terminated character string
; h The handle number
DEVICEADDRESS
"Handle %2d" h
"Fixture %11s" n
"DMX %03d" d
" "
"Dip Switch 1234 5678"
"Personality 0000 0000"
"Address %b%b%b%b %b001"d/20%2,d/40%2,d/80%2,d/160%2,d/320%2
" "
"0=OFF ( Right )" 
"1=ON ( Left )" 
DAEND
;
;-----
; Specify DMX limits
;
; minimum allowed dmx number
MINDMX=1
;
; maximum allowed dmx number
MAXDMX=481
;
; DMX number must be divisible by this
DIVBY=20
;
;-----

```

```

; DMX channel description
;
; Column by column description of each DMX channel
; 1. The channels bank number (1..12)
; 2. The upper faders in the bank (1) or the lower faders in the bank (61)
; 3. Channel type (L=LTP, H=HTP, I=Instant LTP, S=16-bit instant LTP,
;    s=16-bit Fadeable LTP
; 4. DMX offset (1..number of DMX channels)
; 5. The output level is proportionally reduced by this level (0..100%)
; 6. The curve number (applicable only to HTP channels), usually set to 1
; 7. Inverted (I) or Normal (N)
; 8. Attribute type (A=Colour Wheel, BCD=Colour Mix, E=Pan, F=Tilt,
;    0=uncategorised)
;
; 9. Checksum channel (Always 1)
;10. Attribute name, must be enclosed in quotes and upto 12 characters allowed
;11. The ON value of this channel (0..255)
;12. The Highlight level of this channel
;13. The Lolight level of this channel
;
DMX
3 61 S 1 100 1N E 1 "Pan" 128 -1 -1 ; PAN
0 0 L 2 100 1N E 1 "Pan Low" 128 -1 -1 ; PAN Low
3 1 S 3 100 1N F 1 "Tilt" 128 -1 -1 ; TILT
0 0 L 4 100 1N F 1 "Tilt Low" 128 -1 -1 ; TILT Low
4 1 I 5 100 1N 0 1 "Colour Wheel" 0 0 0 ; COLOUR WHEEL
10 1 L 6 100 1N B 1 "Cyan" 255 255 255 ; CYAN
10 61 L 7 100 1N D 1 "Magenta" 255 255 0 ; MAGENTA
9 61 L 8 100 1N C 1 "Yellow" 255 255 0 ; YELLOW
6 1 I 9 100 1N 0 1 "Gobo 1" 0 0 0 ; GOBO 1
6 61 I 10 100 1N 0 1 "Gobo 2" 0 0 0 ; GOBO 2
8 61 I 11 100 1N 0 1 "Gobo Speed" 0 0 0 ; GOBO SPEED
5 1 L 12 100 1N 0 1 "Zoom" 0 0 0 ; ZOOM
5 61 L 13 100 1N 0 1 "Focus" 0 -1 -1 ; FOCUS
2 1 I 14 100 1N 0 1 "Iris " 255 255 255 ; IRIS
9 1 I 15 100 1N 0 1 "Effects" 0 0 0 ; EFFECT WHEEL
7 61 I 16 100 1N 0 1 "Frost" 0 0 0 ; FROST
2 61 L 17 100 1N 0 1 "Shutter" 255 255 255 ; SHUTTER
1 1 H 18 100 1N 0 1 "Dimmer" 255 255 255 ; DIMMER
8 1 L 19 100 1N 0 1 "Motor Speed" 255 255 255 ; MOTOR SPEED
11 1 I 20 100 1N 0 1 "Control" 0 0 0 ; Control
END
;
;-----
; Text to be displayed when the Instrument is selected for Patching
;
TEXT
Cyberlight Mode 1
Bank Faders
Bottom Top
-----
1 Dimmer --
2 Iris Shutter
3 Tilt Pan
4 Colour 1 --
5 Focus Zoom
6 Gobo 1 Gobo 2
7 Frost --
8 M-speed Gobo spd
9 Effect Yellow
10 Cyan Magenta
11 Control --

INPUT and/or note DMX
number.
Press a channel grab
to make patch
END
;
;-----
; Tables

; A colour table colour wheel, cyan, magenta, yellow
PFTABLE "Colour" -1 5 6 7 8
"Col 1" 1 0 ff ff ff
"Col 2" 2 0 ff 0 0
"Col 3" 3 0 0 ff 0
"Col 4" 4 0 0 0 ff
"Col 5" 5 0 ff ff 0
"Col 6" 6 0 0 ff ff
"Col 7" 7 0 ff 0 ff
"Col 8" 8 0 97 32 c8
"Col 9" 9 0 3d a3 bd
"Col 10" 10 0 eb 5a 17
PFEND

; Gobo

```



```
PFTABLE "Gobos" -1 9 10 11
"Gobo 1.1"      11 2 0 0
"Gobo 1.2"      12 af 0 0
"Gobo 1.3"      13 b9 0 0
"Gobo 1.4"      14 c3 0 0
"Gobo 1.5"      15 cc 0 0
"Gobo 1.6"      16 d7 0 0
"Gobo 1.7"      17 e1 0 0
"Gobo 2.1"      18 0 2d 0
"Gobo 2.2"      19 0 4b 0
"Gobo 2.3"      20 0 5f 0
PFEND
```

```
; Positions
PFTABLE "Positions" -1 1 3
"Middle"      21 80 80
"Left"        22 50 80
"Right"       23 b0 80
"Top"         24 80 50
"Bottom"      25 80 b0
"TLeft"       26 50 50
"TRight"      27 b0 b0
"BLeft"       28 50 b0
"BRight"      29 b0 50
PFEND
```

```
MACRO "HOME" 1 18 20
"data"      0 ff ff
"delay"     1 20
"data"      0 0 ff
"delay"     1 20
"data"      0 0 40
"delay"     1 40
"data"      0 0 0
MEND•
```

```
MACRO "SHUTDOWN" 2 18 20
"data"      0 ff ff
"delay"     1 20
"data"      0 0 ff
"delay"     1 20
"data"      0 0 80
"delay"     1 40
"data"      0 0 0
MEND
```



## 14. Glossary of terms

ADD	Type of flash button which adds the output being flashed into the existing output of the console. Now referred to as FLASH buttons.
ADDRESSES	The DMX Channels occupied by individual Fixtures. The first Channel occupied is usually encoded onto the Fixture somehow (often by switches) and called its ADDRESS.
ALIGN	A means of copying Attribute characteristics from the first Fixture selected to other selected Fixtures, resulting in the Fixtures being aligned to each other.
ATTRIBUTE	One Channel of an Intelligent Fixture.
ATTRIBUTE BANK	A set of buttons controlling which Attributes the wheels connect to.
BACKUPS	Copies of a show stored to disk for safety.
BPM	Beats Per Minute.
CHASE	A sequence of one or more pre recorded steps programmed using the CHASE button. It can be replayed automatically if desired. Sometimes known as SEQUENCE, STACK or Linked Cues.
CHASE STEPS	Individual component steps of a Chase. See above
COLOUR CHANGER	A mechanical Fixture for changing the colour of a light source, usually by scrolling through a roll of different coloured gels or by moving special filters into the light beam.
COLOUR MIX	A system of three filters that can each crossfade from white to a colour, or one colour to another. It is a feature of some Intelligent Fixtures, which enables thousands of different colours to be created.
COMPLEX STEP	A Chase Step that has Individual Step Times programmed into it, and hence will not use Global times. See SIMPLE STEP, GLOBAL CHASE TIMES, INDIVIDUAL STEP TIMES.
CONNECTED CHASE	A Chase which has been brought under control of the Wheels and other Chase functions by pressing the CONNECT button.
COPY	A system of replication of Memories and Chases that links all the copies together. A change in any one of the replicas results in the same change to all of them. See PHOTOCOPY.
CROSSFADE	Or X FADE. A change in lighting state in which all HTP channels are assumed to be ON. HTP channels which are not explicitly set at a level will fade to zero. LTP channels follow Move Fade rules. See MOVE FADE
DEVICE	See FIXTURE.

DMX	DMX512(1990) a specification for communication between control desks and Fixtures, Originally for Dimmers it has been adopted as a control protocol for most Intelligent Fixtures. It can carry 512 different Channels of data.
DMX TRANSMISSION RATE	The rate at which DMX data is broadcast from the desk to the Fixtures.
FADE	A continuous transition from one level to another.
FADING CHANNEL	A channel which can ramp from one level to another. See INSTANT CHANNELS.
FIXTURE	Any lighting instrument that is patched using a Personality. Generally refers to a moving light or colour changer, not an individual Dimmer channel. Also called Intelligent Fixture, Device, Instrument, Moving Light.
FLASH	Type of flash button which adds the output being flashed into the existing output of the console. Historically called the ADD button. See also SWOP.
FLIP	A function for use with Moving Head Fixtures. They have two possible Pan and Tilt positions for each point on stage, and FLIP will alternate between them.
FOCUS	What Palettes are called on older Avolites consoles. Occasionally some screen messages may display this term. See PALETTE.
GENERIC	Term used to indicate a Dimmer channel. See also FIXTURE.
GLOBAL CHASE TIMES	Fade and Wait times which apply to any Chase Step which does not have Individual Step times programmed into it. These steps are called SIMPLE STEPS. See INDIVIDUAL STEP TIMES, COMPLEX STEP, SIMPLE STEP.
GRAPHICS TABLET	Optional input device used on earlier versions of the Pearl.
GROUP	A GROUP is a pre-programmed collection of Fixtures that can be selected with a single button press.
HANDLE	The fader and flash/swop buttons which are used to control an individual fixture or dimmer channel.
HTP	Highest Takes Precedence, a mechanism for determining the output level of a Channel held in more than one Playback Channel. The Channel outputting the Highest value at any given time will always determine the level of the Channel. Also see LTP.
INCLUDE	A means of transferring the contents of a Memory or Chase Step into the Programmer.
INDIVIDUAL STEP TIMES	Times programmed into one individual Chase Step from the TIMES menu. These steps are called

	COMPLEX STEPS. See GLOBAL CHASE TIMES, SIMPLE STEP, COMPLEX STEP.
INSTANT CHANNEL	A channel which does not use fades generated by the console, and moves in discrete jumps from one state to another. See FADING CHANNEL.
INSTRUMENT	See FIXTURE.
INTELLIGENT FIXTURE	See FIXTURE.
LCD	Refers to the console's on-board display (stands for Liquid Crystal Display).
LED	Refers to the small red lights within the buttons on the console (stands for Light Emitting Diode).
LINKS	Connections between Chase Steps enabling them to run on from one to another automatically.
LOCATE FIXTURE	A feature of the console that makes it easy to find your selected Fixtures by putting them in Open White with Pan and Tilt at 50%.
LTP	Latest Takes Precedence, a mechanism for passing control of a channel from one Playback Fader to another on the basis that the latest Playback Fader to be moved has control, providing that Playback Fader has moved passed the Trigger point. (See TRIGGER POINT). Also see HTP.
MACROS	Macros allow functions programmed into an Intelligent Fixture by the manufacturer to can be executed by sending a DMX command sequence from the console. They can allow you to reset the Fixture for example. The DMX command sequences are defined within the Personality File.
MEMORY	A single stage look programmed onto a Playback button or fader. It does not have Wait times. Also known as CUE, STATE, SCENE, LOOK.
MEMORY MODE	A playback format programmed into a Memory. There are Memory Modes 0, 1 and 2.
MIDI	Stands for Musical Instrument Digital Interface. It is the established hardware and software specification enabling the exchange of data between digital musical instruments (such as keyboards) and other devices such as computers, sequencers and sound and lighting consoles.
ML MENU	Stands for Moving Light Menu.
MOVE FADE	A change in lighting state in which only those channels that are ON change in level.
PALETTE	A term used to describe a referenced pre-defined state for an Attribute that can be recalled whenever required during programming. Each Fixture may be different in the Palette, the entries can be named, and recalled with a single button press.
PARK	This happens to a fixture when its DMX address is

	taken by another fixture during a later patching session. The fixture must then be repatched.
PERSONALITY FILE	A description of what Attributes a particular Intelligent Fixture has and how the console will patch and use these. It also determines which Attribute Bank will control which Attribute. Avolites Personality Files are in ASCII format and can be edited on any personal computer.
PERSONALITY DISK	A disk on which Personality Files are stored. Used only on earlier versions of the Pearl.
PHOTOCOPY	A method of replicating Memories and Chases that are completely independent of each other. See COPY.
PLAYBACK	Area of the console that can replay recorded Memories or Chases using Playback Faders.
PRESET FADERS	The 100 faders across the top of the console which are used for controlling individual fixtures or dimmer channels.
PRESET FOCUS	What Palettes are called on other Avolites consoles. Occasionally some VDU screen messages may display this term. See PALETTE.
PROGRAM	Desk mode in which programming functions are enabled, but System Software is protected. See RUN, SYSTEM.
PROGRAMMER	The part of the console which contains Channel information which has been changed by the user, prior to recording.
RUN	Desk mode in which all Playback functions are enabled, but all programming functions disabled.
SCRIPT FILES	System that allows Playback to be automated and controlled by Timecode.
SELECTED	A Fixture that is under manual control.
SEQUENCE	See CHASE.
SHAPE	A preprogrammed effect available which is applied to an Attribute. It can then be customised and stored in a Memory.
SHARED PALETTE	A Palette in which information is only stored for one Fixture, but is available to all Fixtures of that type.
SIMPLE STEP	A Chase Step which does not have Individual Step Times programmed into it, and hence will use Global Chase times. See COMPLEX STEP, GLOBAL CHASE TIMES, INDIVIDUAL STEP TIMES.
SOFTKEY	Buttons marked A-F, with different functions which are shown on the VDU screen.
STACK	See CHASE.
STAGE REMOTE	Optional input device for the Pearl allowing control of DMX Channels and recall of Memories and Chase Steps. Used only on earlier versions of the Pearl.
SWOP	Type of flash button which turns on the output being

---

	flashed and turns off all other output while the button is pressed. Sometimes called "Solo". Also used for selecting fixtures or playbacks when programming. See also FLASH.
SYSTEM	Desk mode allowing access to the operating software of the Pearl.
SYSTEM SOFTWARE	The software which runs the Pearl.
TC	Abbreviation for Timecode. In the Pearl, this is always MIDI Timecode.
TRACKING	A mode in which Moving Lights can move around an area all pointing at the same spot.
TRAINING	The process of recording points on a stage so that the console can work out the TRACKING for Moving Lights.
TRIGGER POINT	The level set in the User Settings which determines at which point a Playback Fader triggers the LTP Channels programmed onto it.
UNFOLD	A function that allows Chase Steps to be laid out onto Playback Faders for easy editing.
USER SETTINGS	User definable desk settings. Found in the USER SETTINGS menu.
VDU	A computer monitor plugged into the VDU socket on the Pearl giving further information about the operation of the console.
WAIT	A period of time that elapses before a Fade happens in a Chase.
WIPEALL	A process which clears all the previous programming out of the desk, but does not touch the System Software.
WHEEL A	This is the left hand wheel. It is used to control the upper Attribute of each Attribute Bank.
WHEEL B	This is the right hand wheel. It is used to control the lower Attribute of each Attribute Bank.





## 15. Index

*Pages in the Tutorial section have numbers below 100. Pages in the Reference manual have numbers above 100.*

---

### A

acceleration mode of wheels · 128, 198  
 active shape, selecting · 147  
 Advanced theatre options · 178  
 align function · 17, 130  
 All button · 130  
 assign action · 190  
 assign timecode · 192  
 at % · 47, 131  
 attributes  
   controlling · 16, 128  
   masking out in palette · 21  
   setting · 16, 128  
 audio input socket · 111  
 autoconnect chase option · 163  
 autoloading memories in theatre mode · 174  
 automated playback · 187  
 autorun · 190  
 Avolites console overview · 63

---

### B

backing up to disk · 12, 113  
 banks of attributes buttons · 16, 128  
 bass trigger · 43, 170  
 Blind mode · 161  
 BPM, displaying speed in · 196, 222  
 brightness · 197  
 busking · 52, 183

---

### C

cache, personality · 121, 201  
 calculator mode · 133  
 channel button · 47, 131  
 channel level mimics · 53, 184  
 chase  
   autoconnect option · 163  
   clearing temporary speed · 41, 164  
   complex steps · 169  
   connect · 163  
   connecting · 40, 163, 164  
   copying · 41, 167  
   copying a step · 166  
   deleting · 42, 167  
   deleting a step · 166  
   deleting a step number · 167  
   display · 163  
   displaying speed in BPM · 196, 222  
   editing current step · 166  
   editing using unfold · 41, 165  
   inserting a step · 166  
   jumping back a step · 164, 167  
   linking or unlinking steps · 168

live editing · 166  
 manual fading using wheels · 164  
 options · 162  
 pausing · 46, 164, 166  
 preloading first step · 40, 163  
 programming · 39, 162  
 random order · 170  
 recording · 39, 162  
 renumbering steps · 166  
 running · 40, 163  
 set legend · 162  
 setting direction · 164  
 setting global times · 168  
 setting speed and crossfade · 40, 163  
 setting time of live step · 42, 166  
 shapes in · 39, 162  
 sound activation · 43, 170  
 speed and crossfade · 40, 163  
 takeover after go · 171  
 tap tempo · 164  
 unlinking steps · 168  
 using as a stack · 42  
 using Unfold to edit · 41, 165  
 viewing results of editing · 167  
 viewing steps on display · 165  
 viewing timings · 169  
 chase autoconnect setting · 196  
 chase button · 39, 162  
 checking the patch settings · 121  
 Choose a fixture · 10  
 clear button · 20, 31, 32, 139, 153  
 Clear temporary speed · 41, 164  
 clear Wrap around channels · 201  
 clearing the console · 198  
 clearing the programmer · 31, 32, 139, 153  
 clock timecode · 193  
 clock, setting · 201  
 coarse spread · 27, 146  
 complex or simple steps in chase · 169  
 configure a MIDI keyboard · 201  
 connect · 163  
 connect button · 40, 163, 164  
 connecting the wheels to a chase · 40, 163, 164  
 connections · 112  
 console failure · 205  
 contrast · 197  
 control panel · 203  
 controlling attributes · 16  
 convert show to Sep 2000 · 199  
 copying a chase · 41, 167  
 copying a chase step · 166  
 copying a memory · 33, 159  
 copying settings from other fixtures (align) · 17, 130  
 creating a script file · 187  
 creating and recalling groups · 146  
 current step (theatre mode) · 174  
 cut to live · 48, 178

---

**D**

delete button · 33, 42, 159  
 deleting a chase · 42, 167  
 deleting a chase step · 166  
 deleting a cue in theatre mode · 178  
 deleting a memory · 33, 159  
 deleting a numbered chase step · 167  
 deleting patched dimmers or fixtures · 123  
 deselecting all fixtures · 134  
 desk lamp · 112  
 desk lamp, setting intensity · 198  
 diagnostic screen · 202  
 dimmers  
   control using preset faders · 15, 127  
   entering level as number · 131  
   patching · 8, 119  
   selecting · 15, 127  
   two preset mode · 184  
 disabling a fixture or dimmer · 130  
 disallowing speed wheel · 171  
 disk  
   backing up · 12, 113  
   personality · 10  
 disk functions · 199  
 displaying the DMX addresses · 11, 121  
 DMX address  
   displaying · 11, 121  
   repatching · 11, 122  
 DMX idle time, setting · 197  
 DMX line  
   selecting · 11, 120, 121, 122  
   setting output connectors · 124  
 DMX line, configuring outputs · 199  
 DMX line, over ethernet · 199  
 DMX output sockets · 5, 111  
 DMX output, reducing transmitted channels · 196  
 DMX over ethernet · 199  
 DMX, explanation of · 59

---

**E**

Edit a shape · 146, 147, 148  
 edit times · 35, 160  
 editing a chase · 41, 165  
 editing a chase step using unfold · 166  
 editing a cue in theatre mode · 178  
 editing a shape · 145, 147  
 editing current chase step · 166  
 editing memories · 34, 156  
 entering 0-255 values · 132  
 entering dimmer levels directly · 131  
 entering fixture attributes directly · 132  
 entering percent values · 132  
 even spread · 27, 146

---

**F**

fade times for memory · 35, 160  
 fader trigger point · 196  
 fading to palettes · 142  
 fan button · 17, 132

Find fixture · 124  
 finding a lost fixture · 124  
 fine spread · 27, 146  
 fixture page buttons · 3, 7, 115, 119, 127  
 Fixture Patch · 11, 115, 122  
 fixture select mode · 129  
 fixture type for palettes · 143  
 fixtures  
   deselecting · 134  
   entering attributes as number · 132  
   grouping together · 129  
   loading selected into programmer · 34, 157  
   patching · 120, 121  
   recalling a group · 17  
   reducing intensity during show · 130  
   removing from programmer · 134  
   reset command · 133  
   saving as a group · 17  
   selecting · 15, 127  
   selecting a range of · 15, 127, 129  
   set central position · 15  
   striking lamp · 133  
 flip function · 130  
 focus button · 20, 52, 139, 183  
 focus mask · 158, 197

---

**G**

global times for chase, setting · 168  
 glossary of lighting words · 222  
 go button · 42, 46, 48, 173, 177  
 grand master fader · 18, 53, 182, 197  
 grand master, disabling · 197  
 groups  
   creating and recalling · 146  
   recalling · 17  
   recalling by number · 132  
   saving fixtures into · 17  
 groups of fixtures · 129

---

**H**

handle · 7, 119, 123  
 highlight · 130  
 Highlight enabled · 134  
 highlighting selected fixture · 129  
 HTP and LTP channels, description of · 30, 155

---

**I**

illegal DMX address · 121, 212  
 include button · 34, 157  
 include function · 34, 157  
 individual palettes · 22, 138  
 input step (theatre mode) · 174  
 inserting a chase step · 166  
 instant LTP mode option · 124  
 instant palettes · 183  
 Intelligent Attribute Display · 16, 128  
 intensity  
   control using preset faders · 128  
   entering level as number · 131  
 invert attribute option · 123

---

**J**

jumping to a cue in theatre mode · 48, 178

---

**K**

keyswitch · 8, 112

---

**L**

LCD contrast · 197  
 LCD screen views · 115  
 legends  
   entering palette · 141  
   setting for memory · 33, 153  
   setting playback legend · 33, 153  
 linked copies of chases · 41  
 linked copies of memories · 33, 159  
 linking or unlinking chase steps · 168  
 live time button · 48, 175  
 load shape file · 201  
 load show from disk · 199  
 load visualiser CSV file · 199  
 loading a memory into the programmer · 157  
 loading a memory into the programmer (include) · 34  
 locate fixture · 15, 18, 22, 25, 36, 127  
 Locate Fixture no Pan & Tilt · 127  
 lock desk · 51, 184  
 locking the console · 51, 184  
 looping script files · 190  
 LTP and HTP channels, description of · 30, 155  
 LTP, instant mode · 124

---

**M**

macros  
   defining in personality · 216  
   running · 133  
 manual control of HTP/LTP fades · 164  
 master fade time · 143  
 master faders · 53, 182  
 master time for palettes · 143  
 memories  
   editing · 34, 156  
   recording a snapshot of the stage · 154  
 memory  
   applying palette to fixtures in · 52, 183  
   copying · 33, 159  
   deleting · 33, 159  
   editing · 34, 156  
   fade times · 35, 160  
   playing back · 32  
   record stage · 153  
   recording · 31, 153  
   setting a legend · 33, 153  
   setting fade times · 35, 160  
   turning on by MIDI · 201  
   using shapes · 36, 154  
 Memory button · 31, 32, 34, 36, 153, 156, 158  
 memory mode, setting · 148, 160

MIDI channel, setting · 197  
 MIDI commands · 205  
 MIDI timecode · 187  
 mimic mode on presets · 53, 184  
 ML menu · 133  
 mode 0-1-2 memory · 160

---

**N**

naming playback pages · 153, 156  
 next time button · 48, 175  
 normal run mode · 51, 182  
 numbers of palette buttons · 139  
 numeric entry of levels · 47

---

**O**

Off button · 158  
 On-the-fly editing · 191  
 options for patching · 123  
 options, setting back to default · 198  
 options, setting console · 196  
 Outputting DMX lines from other connectors · 124  
 overriding playbacks · 20, 31, 183

---

**P**

page  
   playback · 32, 156  
   roller page buttons · 32, 156  
   selecting fixture pages · 3, 7, 115, 119, 127  
 Palette Pages · 139, 140, 196  
 palette/flash buttons · 21, 140  
 palettes · 20, 138  
   applying · 20, 139  
   entering legends · 141  
   fading · 52, 142, 183  
   fading over time · 52, 183  
   fixture type · 143  
   instant · 183  
   master fade time · 143  
   master time for fades · 143  
   numbering · 139  
   only saving certain attributes · 21, 138  
   options · 143  
   quick palette · 183  
   quick palettes · 140, 141  
   recalling · 139  
   recalling by number · 132  
   recording · 21  
   removing attribute from (Off) · 158  
   shared and individual · 22, 138  
   stored as a reference · 138  
   viewing · 142  
 pan and tilt, swapping · 124  
 parked fixtures · 122  
 Patch Utilities · 12, 123  
 patching · 7, 119  
   changing DMX address · 11, 122  
   changing handle · 122  
   checking settings · 121  
   deleting dimmers or fixtures · 123  
   dimmers · 8, 119  
   fixture with separate dimmer · 121  
   fixtures · 120, 121  
   invert attribute · 123  
   options · 123  
   parked fixture · 122

pending dimmer · 121  
 personality disk · 10, 210  
 personality files · 10, 210  
 personality files & cache · 120  
 personality files, caching · 201  
 personality, loading updated version  
   · 201  
 photocopy button · 33, 41, 159  
 playback  
   flash and swop buttons · 32  
   preloading LTP values · 156  
   setting legend · 33, 153  
 playback pages  
   naming · 153, 156  
   selecting · 32, 156  
 playing back a memory · 32, 156  
 plotting a cue in theatre mode · 174  
 Preset LEDs mimic/fixture · 53, 184  
 previewing chase steps on display ·  
   165  
 program mode · 46, 113, 119, 130  
 programmer · 20, 31  
   clearing · 31, 32, 139, 153  
   loading memory into (include) · 157  
   reloading memory into (include) · 34  
 programmer, the · 152  
 programmer, viewing contents · 154  
 programming a chase · 39, 162

---

## Q

quick palette · 183, 196

---

## R

random chase · 170  
 range tables · 16, 128  
 real time recording · 187  
 Rec. Step button · 166  
 recalling a palette · 139  
 record by fixture / by channel modes  
   · 35, 152  
 record stage · 153  
 recording a chase · 39, 162  
 recording a memory · 31, 153  
 recording in Blind mode · 161  
 recording in real time · 187  
 recording the whole stage  
   (snapshot) · 154  
 Recovery CD · 204  
 reduce intensity · 130  
 release notes · 68  
 Remove shapes from selected  
   fixtures · 146  
 removing attribute from memory  
   (Off) · 158  
 removing fixtures from programmer  
   · 134  
 renumbering chase steps · 166  
 Repairing Windows XP · 204  
 Reset button · 112  
 resetting a fixture · 133  
 review button · 167  
 roller · 32, 156  
 roller page buttons · 32, 156  
 Run mode  
   normal · 51, 156, 163, 182, 184  
   takeover · 51, 112, 182  
 run modes · 51, 182

running a chase · 40, 163  
 running a show in theatre mode ·  
   48, 177

---

## S

save show to disk · 199  
 saving chase speed · 40, 163  
 saving the show to disk · 12, 113  
 Screen resolution · 203  
 script files · 187  
   Autorun · 190  
   copying · 193  
   creating · 187  
   deleting · 193  
   editing · 190  
   looping · 190  
   playback · 188  
   playback in run mode · 189  
   recording for time of day playback · 187  
   running on power up · 190  
   timer source · 189  
   timing · 191  
 select a timer source · 187, 188,  
   192, 193  
 select a timer source (script files) ·  
   189  
 select fixtures or dimmers · 15, 127  
 selecting a DMX line · 11, 120, 121,  
   122  
 selecting a range of fixtures · 15,  
   127, 129  
 selecting a shape · 25, 145  
 selecting playback pages · 32, 156  
 selecting the active shape · 147  
 sequence control buttons · 129  
 serial socket · 196  
 service mode · 201  
 set DMX lines · 198  
 Set Legend · 33, 41, 47, 142, 153,  
   154, 156, 163, 175  
 set wheels A=Size B=Speed · 26,  
   146  
 set wheels to Spread · 27, 146  
 setting attributes · 128  
 setting chase speed · 40, 163  
 setting fade times for a memory ·  
   35, 160  
 setting position of fixture · 16  
 setting the clock · 201  
 setup DMX outputs · 199  
 shape generator · 25, 145  
 shape merge · 148  
 shapes  
   changing direction · 148  
   coarse and fine spread · 27, 146  
   editing · 145, 147  
   fading size or speed · 148  
   in theatre mode · 174  
   loading new shape file · 201  
   offset · 149  
   positioning · 26, 145  
   removing from fixtures · 146  
   selecting · 25, 145  
   selecting active shape · 147  
   setting size and speed · 26, 146  
   static or timed · 148  
   using in chases · 39, 162  
   using in memories · 36, 154  
 shared palettes · 22, 138  
 show history · 199  
 Showsafe · 205  
 simple/complex chase steps · 167

Snap Back button · 164  
 snapshot function · 154  
 software, changes to · 68  
 sound activation of chases · 43, 170  
 sound input · 111  
 sound to light · 170  
 Specify Attributes for Bank · 141, 158, 197  
 speed=Seconds / BPM · 196  
 spread (shapes) · 27, 146  
 spreading a shape · 27, 146  
 stacks · 42, 168  
 stepping through a range of fixtures · 129  
 stop and go buttons · 46, 173  
 Stop button · 48, 164, 166, 167, 177  
 stopping a chase · 46, 164, 166  
 store palette · 21, 139  
 striking a fixture lamp · 133  
 swap pan and tilt option · 124  
 swop button  
   playbacks (chase) · 39  
   playbacks (memory) · 31  
   presets · 7, 11, 127

---

## T

takeover after Go · 171  
 takeover run mode · 51, 112, 182  
 tap tempo · 43, 164  
 temporary chase speed · 41, 164  
 testing system hardware · 202  
 theatre mode  
   advanced options · 178  
   autoloads · 174  
   controls · 46, 173  
   cue timings · 48, 175  
   deleting a cue · 178  
   displaying cues · 174  
   displaying timings · 176  
   editing a cue · 178  
   enabling and disabling · 46, 173  
   jumping to a cue · 48, 178  
   linking or unlinking steps · 176  
   manual fades · 48, 177  
   naming a cue · 47, 175  
   plotting a cue · 46, 174  
   running a chase in a cue · 174  
   running the show · 48, 177  
   turning on and off · 46, 173  
   using shapes · 174  
 through · 47, 131  
 time of live step, setting · 42, 166  
 Timecode checking mode · 197  
 timed palettes · 52, 183  
 top faders

  selecting fixtures patched to · 16  
 tracking · 152  
 tracking mode  
   setting up · 134  
 Tracking On · 134  
 training the Pearl for tracking · 134  
 turning attributes off · 158  
 two preset mode · 184

---

## U

Unfold function · 41, 165  
 unlinking chase steps · 168  
 update personality · 201  
 Upgrading system software · 203  
 USB Expert · 202  
 USB reserve sockets · 112  
 USB Reserve sockets · 205  
 Use preset palettes · 10, 13, 20, 121  
 user settings menu · 196  
 using selected fixtures from a memory · 34, 157

---

## V

VDU  
   configuring · 203  
 VDU screen  
   connecting · 5, 112  
   views of outputs · 116  
 VDU socket · 112  
 view button · 115  
 view programmer · 154  
 viewing chase steps on display · 165  
 viewing chase timings · 169  
 viewing contents of a palette · 142  
 visualiser · 5, 117  
 voltage selector · 4

---

## W

wheels  
   acceleration · 128, 198  
   control using · 16  
   controlling attributes · 128  
   disallowing speed wheel · 171  
   hyperdrive · 128  
   manually fading chases · 164  
 Windows XP errors · 204  
 wipe options · 198  
 wiring of DMX sockets · 111